



Samsung Galaxy Note II MicroSD Card Replacement

Use this guide to replace or remove the microSD...

Written By: Sam Goldheart



INTRODUCTION

Use this guide to replace or remove the microSD card from your Samsung Galaxy Note II.



TOOLS:

[iFixit Opening Tool](#) (1)

Step 1 — Rear Case




- Pry with a plastic opening tool, or your fingernail, in the divot to the left of the rear-facing camera, near the power button.

Step 2



- Lift the rear case by the corner nearest the divot and remove it from the phone.

Step 3 — microSD Card

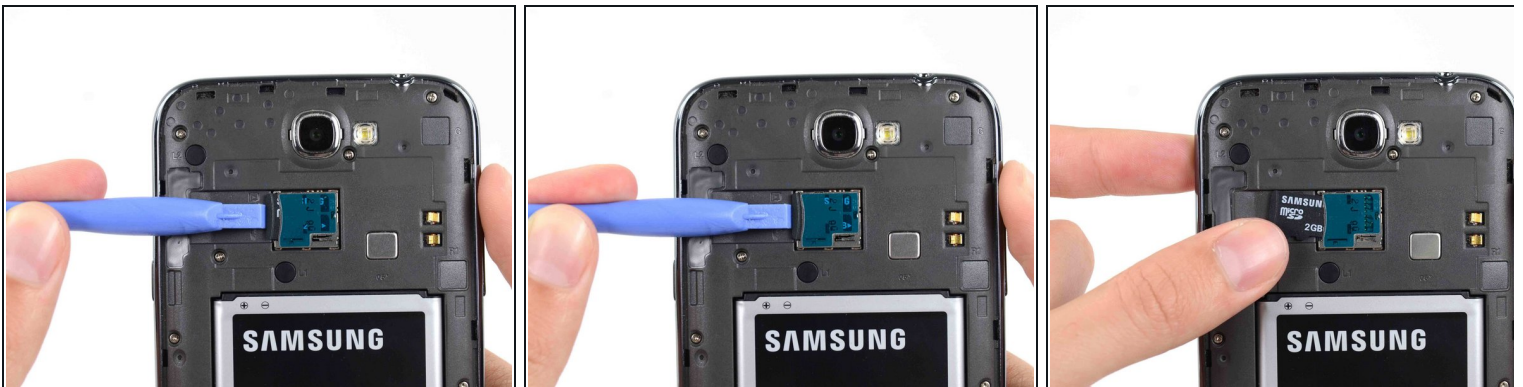

- If you have an SD card inserted, use the flat end of a spudger, or your fingernail, to press the microSD card slightly deeper into its slot until you hear a click.
 - After the click, release the card and it will pop out of its slot.
 - Remove the microSD card.
- ☒ For reassembly, push the microSD card into the slot until it clicks in place.

To reassemble your device, follow these instructions in reverse order.