



TOSHIBA
DISK DRIVE MK3255GSXF
HDD2H77 P TM01 T
DC+5V 1.0A
010 D0/FH115B
D33003
E145163 LR39635
S/N 89CLT4CUT G85 E1
8455MB (CYL16383, H16, S
320GB(LBA 625, 142, 448Secto
TOSHIBA CORPORATION
非律宾制造
MADE IN PHILIPPINES
REMOVE ANY LABELS. #HANDLE ONLY BY SIDES OF BASE.
#VOID GIVING SHOCK.
#DO NOT COVER BREATHING HOLE.
#DO NOT COVER BREATHING HOLE.
COVERED OR LICENSED UNDER ONE OR MORE OF THE FOLLOWING PATENTS
3,662,403 5,430,103 5,480,023 5,570,382 5,586,701 5,671,098 5,677,811
5,751,515 5,799,145 5,801,897 5,847,890 5,686,622 4,896,260 4,942,516
655-1551A
06B LIBRS 655-1551A *WL 933T2HJ7A5A*

소개

이 안내서는 비공개 선행 작업용 내부 안내서입니다.

 도구:

- Phillips #00 Screwdriver (1)

단계 1 — 하드 드라이브




- 하드 드라이브 브래킷을 상단 케이스에 고정하는 Phillips/십자 나사 두 개를 분리하세요.
- ⓘ 이 나사들은 하드 드라이브 브래킷에서 빠지지 않습니다.
- 상단 케이스에서 고정 브래킷을 들어 올리세요

단계 2



- 컴퓨터에 연결된 케이블을 염두하고 하드 드라이브를 당김 탭으로 들어 올려 새시에서 빼세요.

단계 3

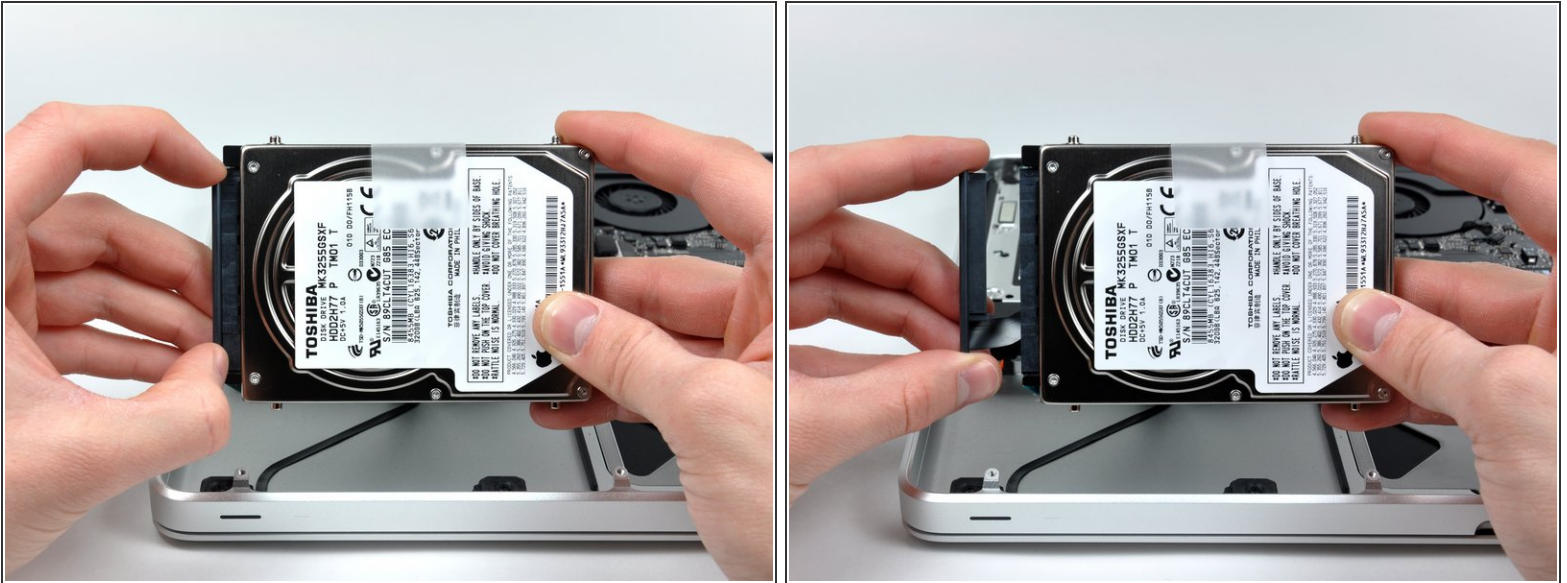

- 하드 드라이브 커넥터를 하드 드라이브에서 똑바로 잡아 당겨 하드 드라이브 케이블을 분리하세요. 커넥터를 흔들림 없이 유지하세요. 커넥터를 잡아 당기면 커넥터가 너무 멀리 당겨져서 뜻하지 않게 하드 드라이브 케이블을 찢을 수 있습니다.

기기를 재조립하려면 이 지침을 역순으로 따르세요.