



Pioneer Steel Wheels Headphone Headband Replacement

Removing the headband from the Pioneer Steel Wheels Headphone.

Written By: Garrett Leung



INTRODUCTION

This guide will show you the steps to remove the headband.

TOOLS:


- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Headband



- Remove the two screws on the underside of the headband with the PH0 Phillips screw driver.

Step 2

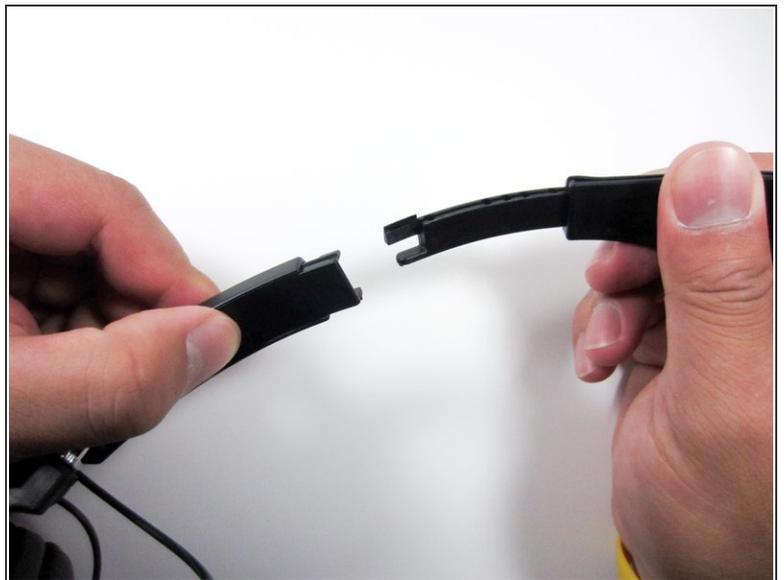

- With the headband fully extended, hold the base of the headband with one hand and with your other hand, hold the top of the headband.
- With force, pull upwards.

Step 3



- Remove the rail-piece that is now sticking up by pulling it up and out of the headphone.
- Repeat on the opposite side and the headband will be released.
- ☑ During reassembly, make the sure the rail-pieces match their respective sides so the headband reinserts properly.

To reassemble your device, follow these instructions in reverse order.