



Headlight Bulb Replacement

Replace your burnt out headlight bulb.

Written By: Tim Asp



INTRODUCTION

This is a quick, super simple replacement that can be done in the lot of the auto parts store. Good luck!



PARTS:

- [9007 Headlight Bulb](#) (1)
-

Step 1 — Headlight Bulb



- Before you begin, make sure you have the right bulb. I got this at the local autozone.
- ⚠ Do NOT touch the glass of the bulb. The oils from your fingers can drastically reduce the life of the bulb.
- Vinyl or latex gloves are great if you have them available, but not required.

Step 2




- Press firmly on the plugs clip and pull to remove the power cable from the bulb.

Step 3



- Lift up and remove the metal wire cage holding the bulb in place.

Step 4

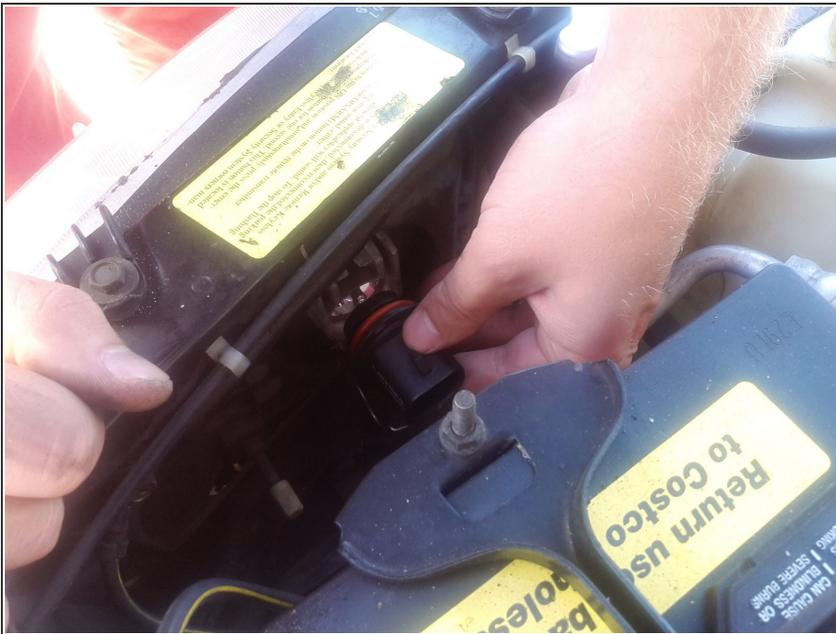

- Remove the bulb by pulling it away from the headlight enclosure.
- Once the old bulb is removed, take your new one and place it in the headlight.
- Follow the steps in reverse to secure the new bulb in the headlight.

To replace the bulb, follow the steps in reverse order.