



LG VX6000 Keyboard Replacement

The following guide is for removing or...

Written By: Adam Altman



INTRODUCTION

The following guide if for removing or replacing the keyboard on the LGVX6000.

TOOLS:

[Phillips #1 Screwdriver](#) (1)

PARTS:

[LGVX6000 Keyboard](#) (1)

Step 1 — Battery



- Locate the dark gray tab on the back of the phone towards the top. Push the tab towards the top of the phone to release the battery.

Step 2



- ① Remove the battery by lifting up and rotating the battery away from the bottom edge.

Step 3 — Body




- Pull out the two rubber cushions located on the top of the phone using [tweezers](#).
- ① Only remove the two cushions that are circled!

Step 4




- Unscrew the six screws seen on the back using a Phillips 00 Screwdriver.
- Remove screws and carefully place on an uncluttered surface or in a small container.

Step 5

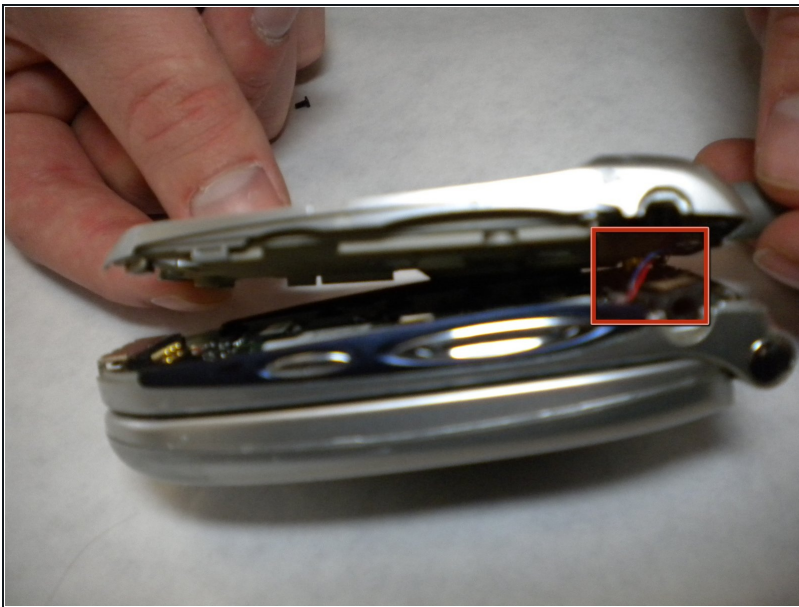

- Carefully remove the back of the phone gently using your fingernails or tweezers.
- ⚠ There are a pair of red and blue wires that plug into the motherboard. These wires will snap if you force the pieces apart.
- ★ To reattach the back, you must plug these wires back in.



Step 6 — Logic Board

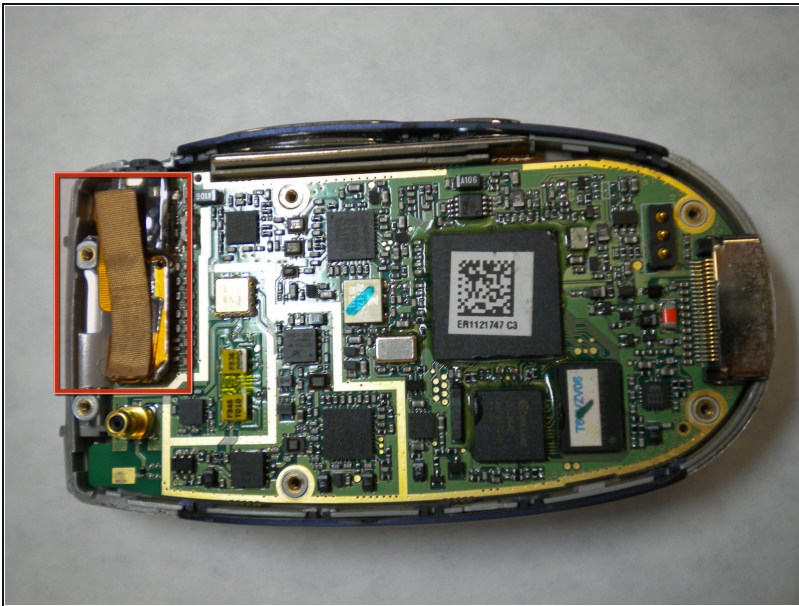

- Carefully peel off the adhesive tab as shown in the photo

⚠ The tab should not fully separate from the phone.


Step 7

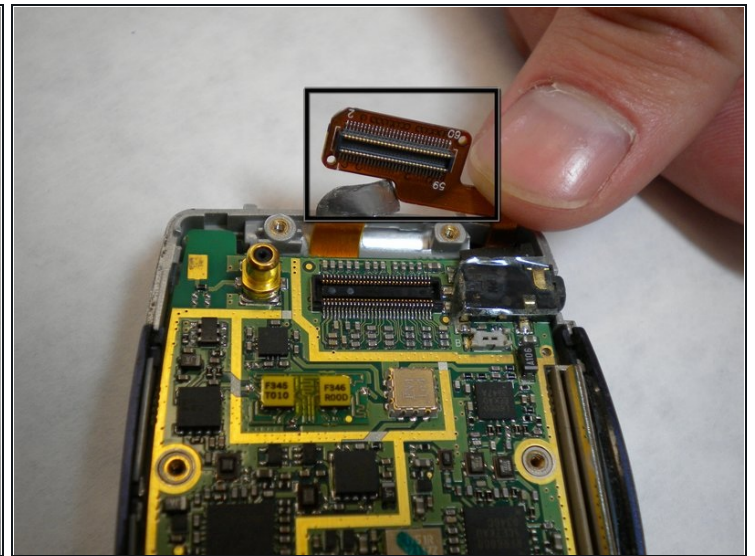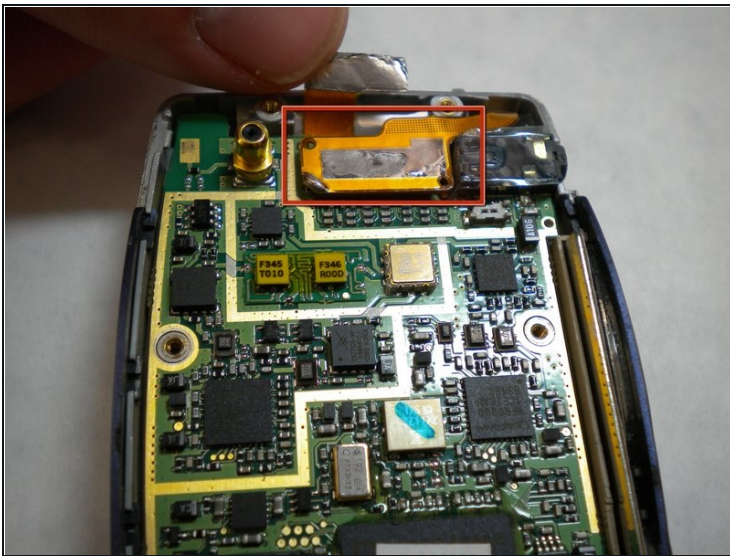

- Locate the yellow connection towards the top of the phone. This is directly connected to the screen.
- Remove the connector by carefully prying it away from the motherboard and lifting it away from the phone


⚠ Do not pull too hard on the connector.

Step 8

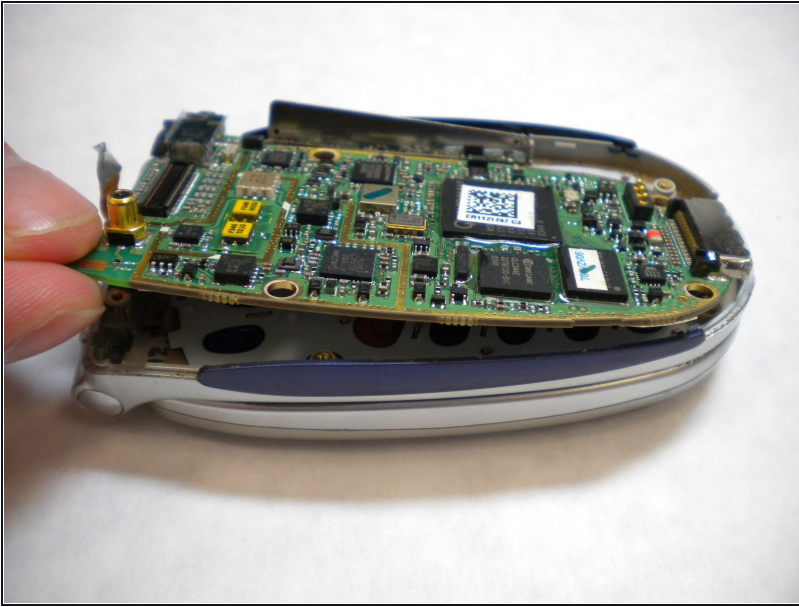

- Gently lift a corner of the motherboard away from the casing to remove.

Step 9 — Keyboard

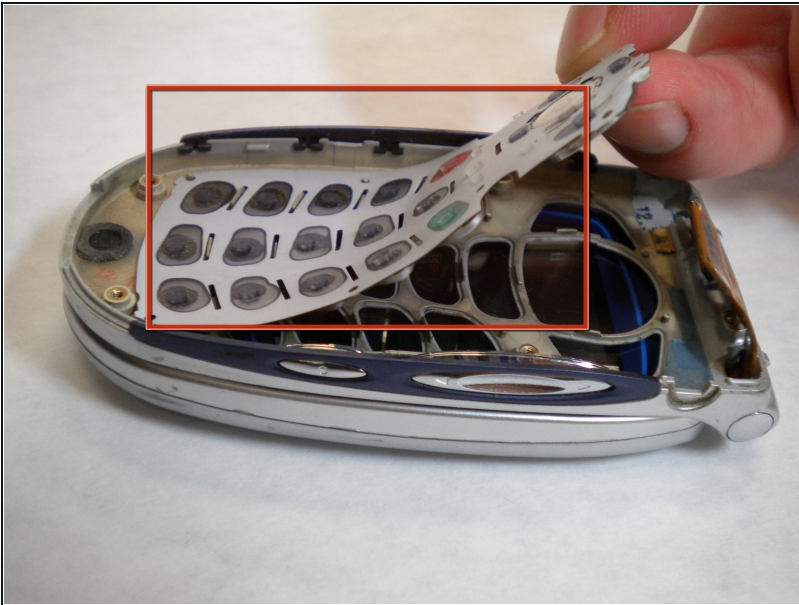

- Peel the white keypad off the casing.

To reassemble your device, follow these instructions in reverse order.