



Power Mac G4 M5183 Hard Drive Replacement

Written By: Justin Petrilli




INTRODUCTION

Removing the Hard Drive.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Opening PowerMac G4 M5183 Case

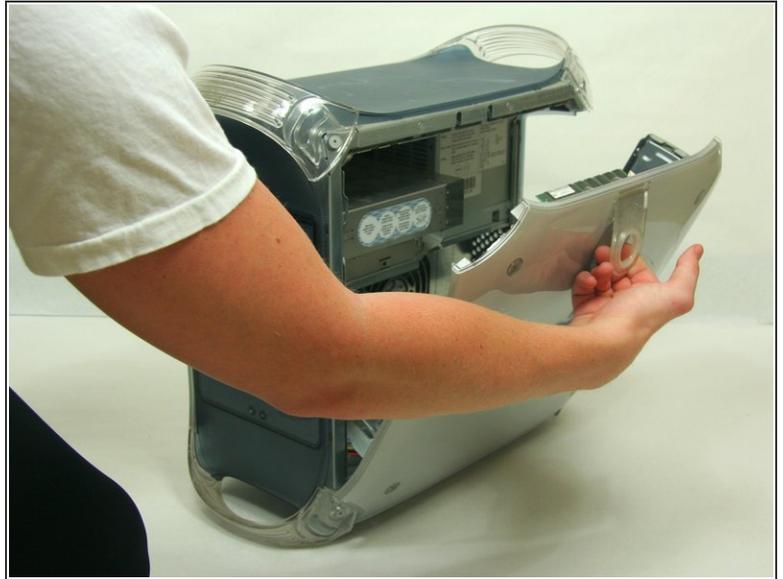

- Pull on outer latch.
- Lower door until it is level with your work surface.

⚠ Before working on the computer make sure it is not plugged into a power supply, then touch a metal object. This discharges static electricity, which could damage the computer.

Step 2 — Hard Drive



- Remove the ribbon cable and power cable from the Hard Drive.

Step 3




- Remove the screw which holds the Hard Drive tray in place.

Step 4



- Slide the Hard Drive tray out of the computer.

Step 5

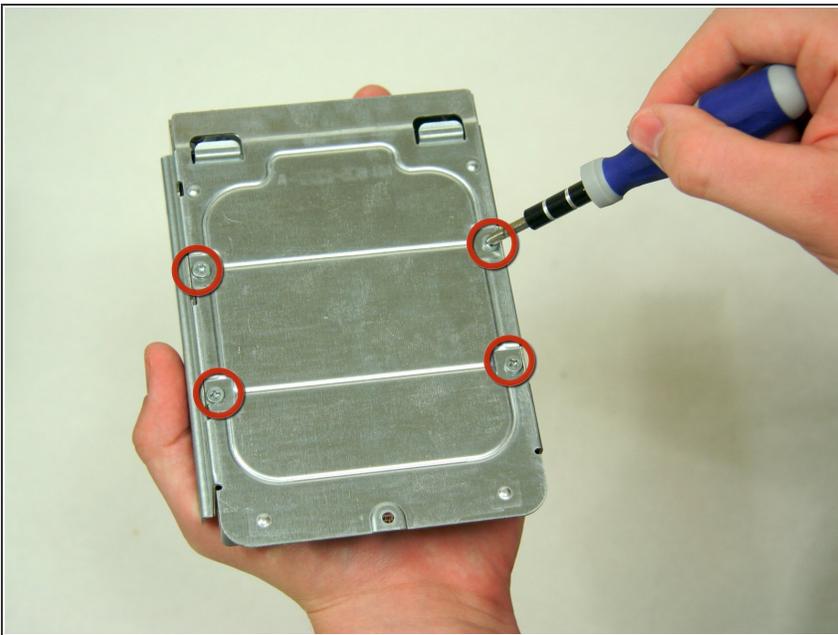

- To remove the Hard Drive from the tray, unscrew the 4 screws on the bottom of the tray.