




HP Pavilion dv6-1245dx RAM Replacement

If you want to increase the memory in your computer, or an internal memory card breaks, you can replace it with this guide.

Written By: Jaime

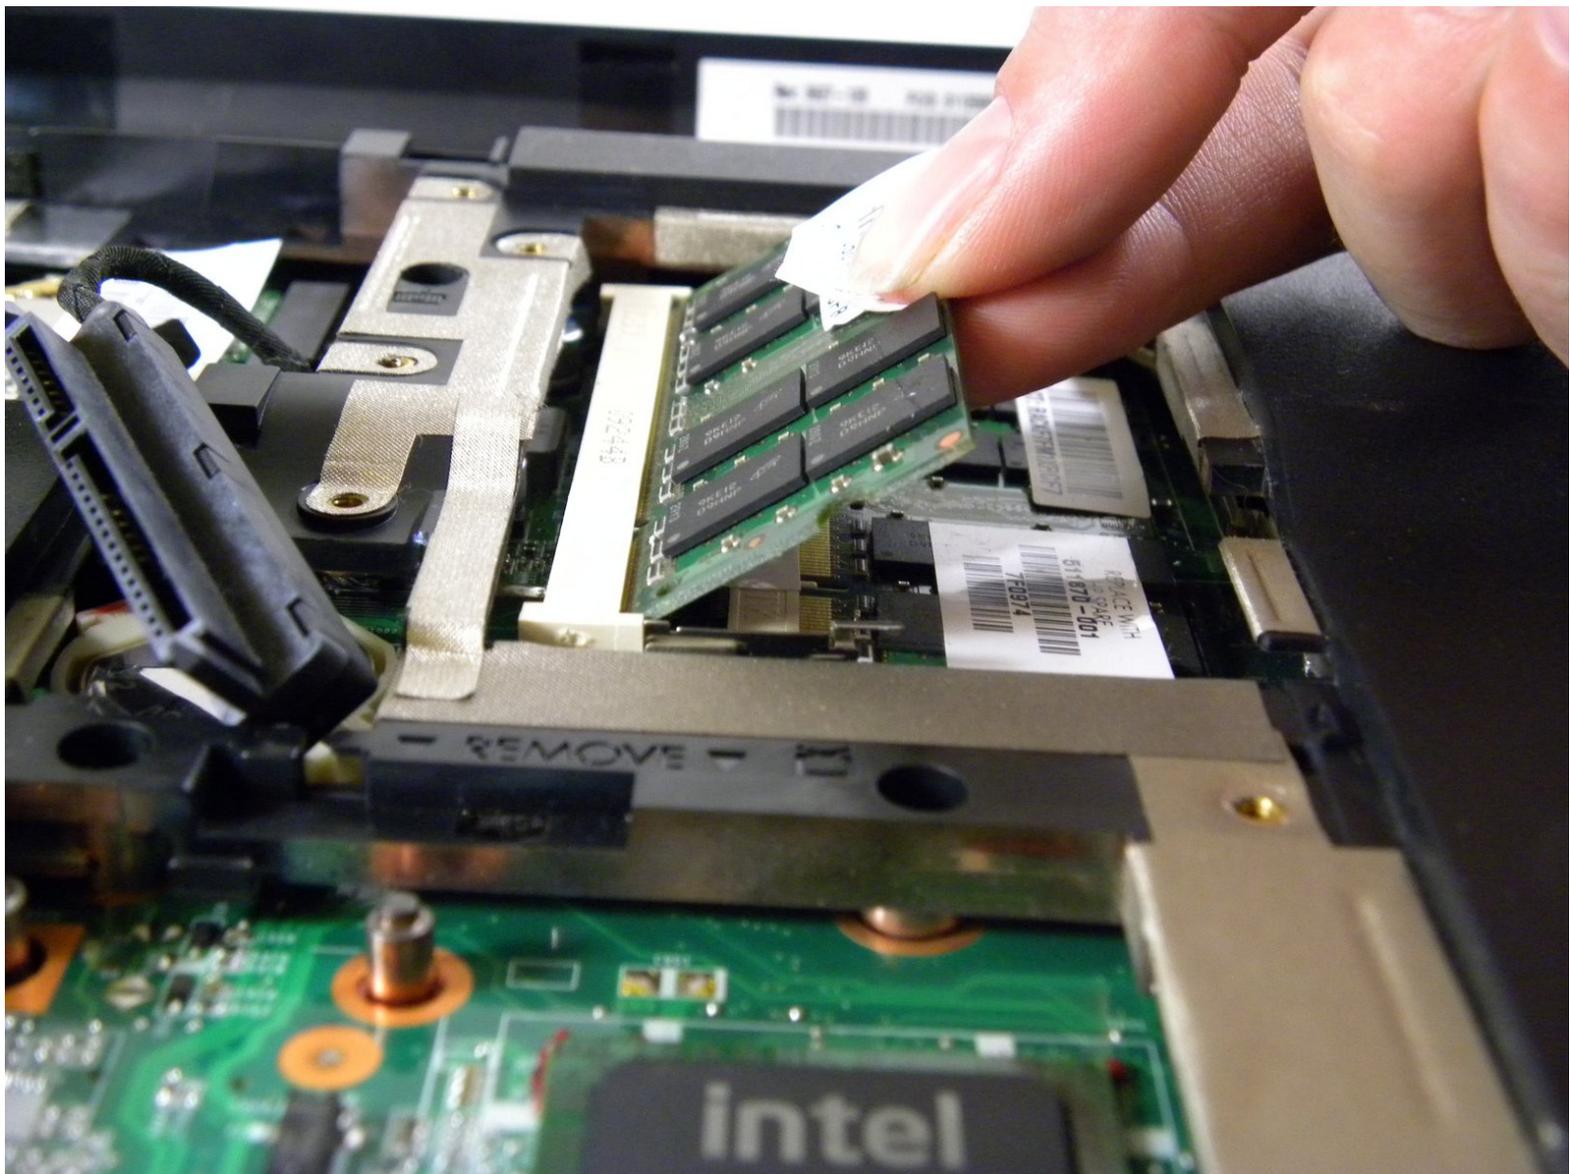

INTRODUCTION

In this guide, you will learn how to replace your RAM.

TOOLS:

- [Fingers](#) (2)
preferably human
- [Phillips #00 Screwdriver](#) (1)

PARTS:

- [HP Pavilion dv6-1245dx memory module](#) (1)

Step 1 — RAM




- Shut down the computer and unplug it from the outlet.
- ⓘ All screws removed in this guide will require a Phillips #00 screwdriver.

Step 2



- Turn the computer upside down.

Step 3

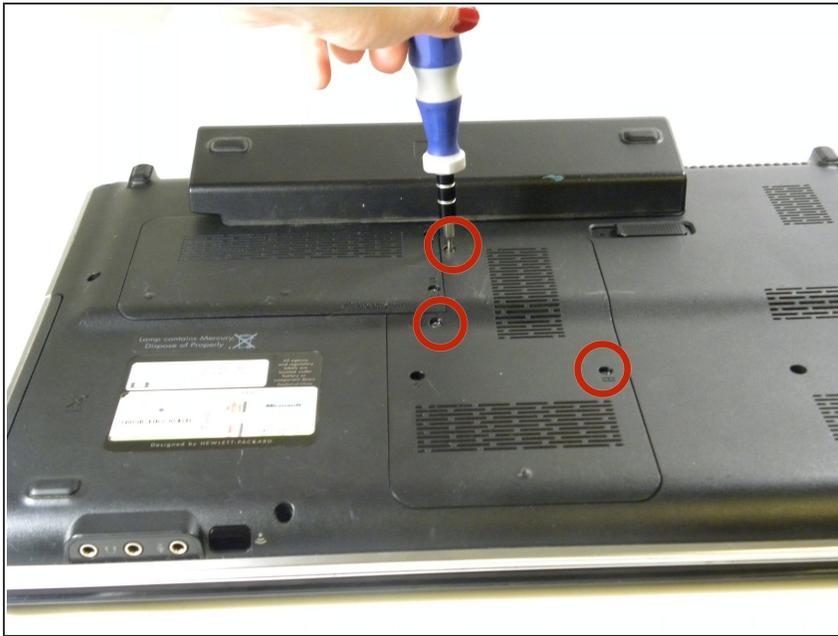

- Loosen the three screws from the memory module compartment cover
- ⓘ Screws will not come all the way out.

Step 4




- Remove the memory module compartment cover.

Step 5



- Remove the first memory module by spreading apart the two silver retaining tabs, using your thumb and index finger.
 - Pull and lift the green memory module upward at a 45-degree angle, and then pull the memory module out of the computer.
- i** If you are replacing both memory cards, repeat this step with the bottom memory card.

Step 6

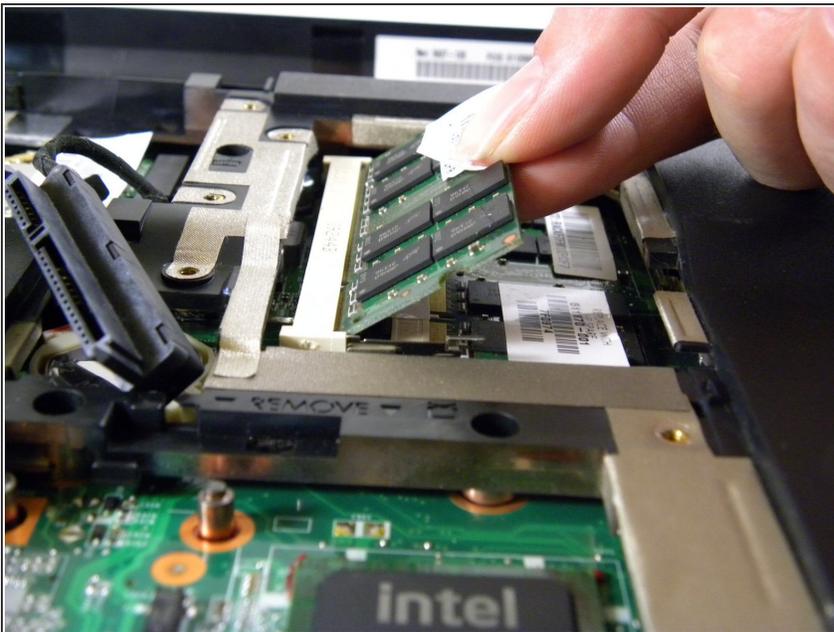

- To replace the memory card, insert the card at a 45-degree angle, then push into slot.
 - Push down gently so the silver retaining tabs click back into place.
- i** If you are replacing both memory cards, replace the bottom card (closest to the system board) first.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2021-07-25 02:07:14 AM (MST).

