


PlayStation 3 Slim (CECH-300X) Fan system Replacement

If you want to replace the fan or clean the fan...

Written By: ZFix



series 300X fan system

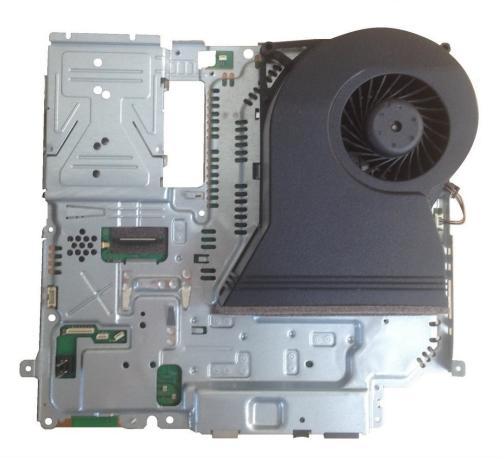

INTRODUCTION

If you want to replace the fan or clean the fan system - video tutorial:

[video: https://www.youtube.com/watch?v=jZlhd52g4mQ&feature=youtu.be&ab_channel=ZFix]


TOOLS:


PARTS:

T8 Torx Security Bit Screwdriver (1)
Phillips #1 Screwdriver (1)
Metal Spudger (1)

Sony PlayStation 3 Slim CECH-21xx Fan (1)

Step 1 — Fan system

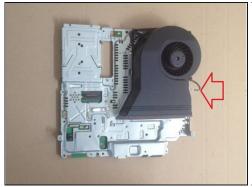

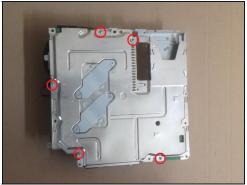



Disconnect the fan cable and remove the nine screws from the bottom side.

Step 2








 Remove the two heat sink clamps and bottom shield, then gently separate the motherboard off the top shield.

Step 3

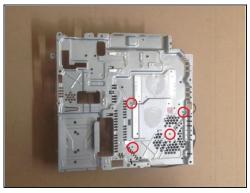





• Remove the four Phillips screws and lift the top shield.

Step 4







• That's all.

To reassemble your device, follow these instructions in reverse order.