



# Monteren en demonteren van een tablet

Written By: AFPD Conception




---

## TOOLS:

Pro Tech Toolkit (1)


---

### Step 1 — Monteren en demonteren van een tablet

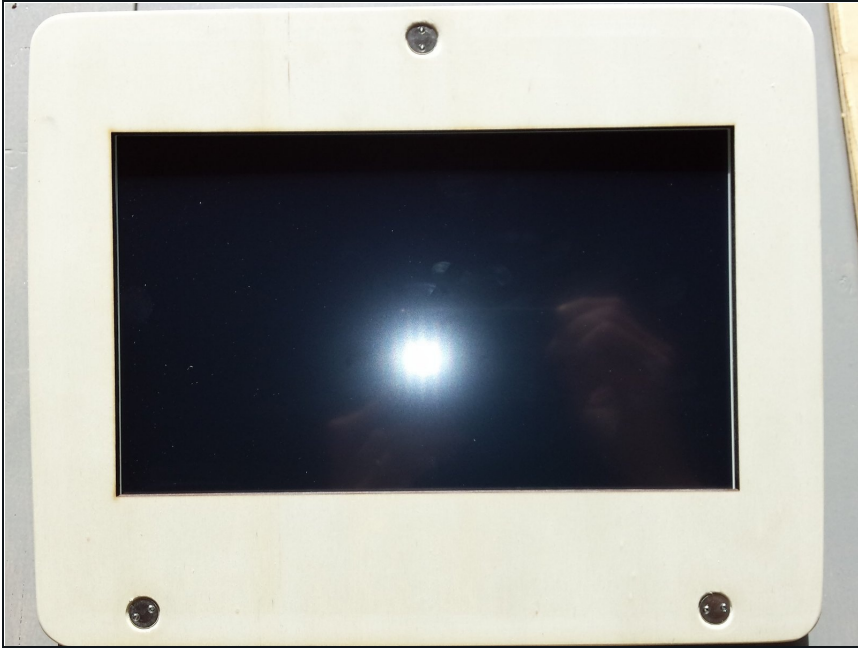


- The hull seen from the front.

### Step 2

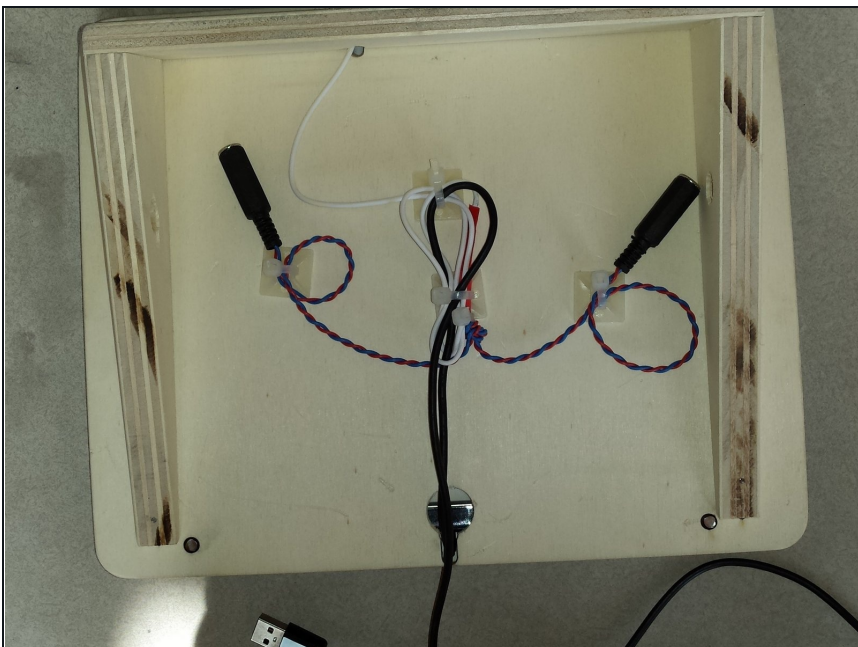


- The case seen from the back, with the jacks where to connect your handsets

### Step 3

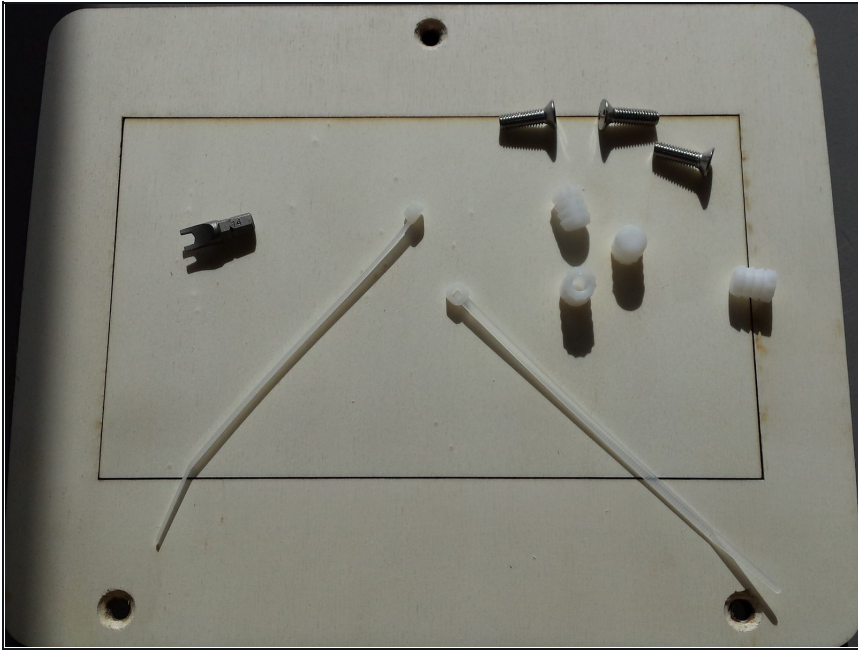

- Enough to redo a shell in case of problems, but without the feet.
- The T14 snake-eyes tip to disassemble the facade.
- Collars to block the jacks of your handsets under the shell.
- Replacement snake eyes M6 screws, M6 inserts to remake a shell

### Step 4

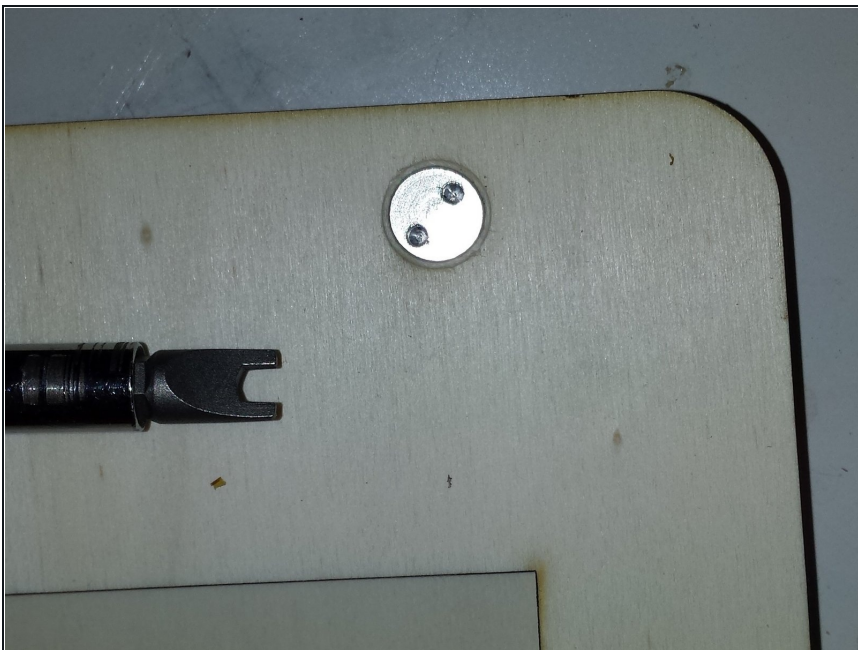

- Use the tip to disassemble the screws.
- DO IT MANUALLY!!!
- Not to the screwdriver, because it will rip. And the tip will damage the facade.



## Step 5




- To block the jacks of the handsets: make a knot on the collar.
- Thus, users will not be able to disconnect the handsets

## Step 6



- If you want to redo a shell:
- You have to cut the inserts, and pierce the bottom to pass the usb plug and the jack that connects to the tablet.
- Take the model delivered as an example

## Step 7

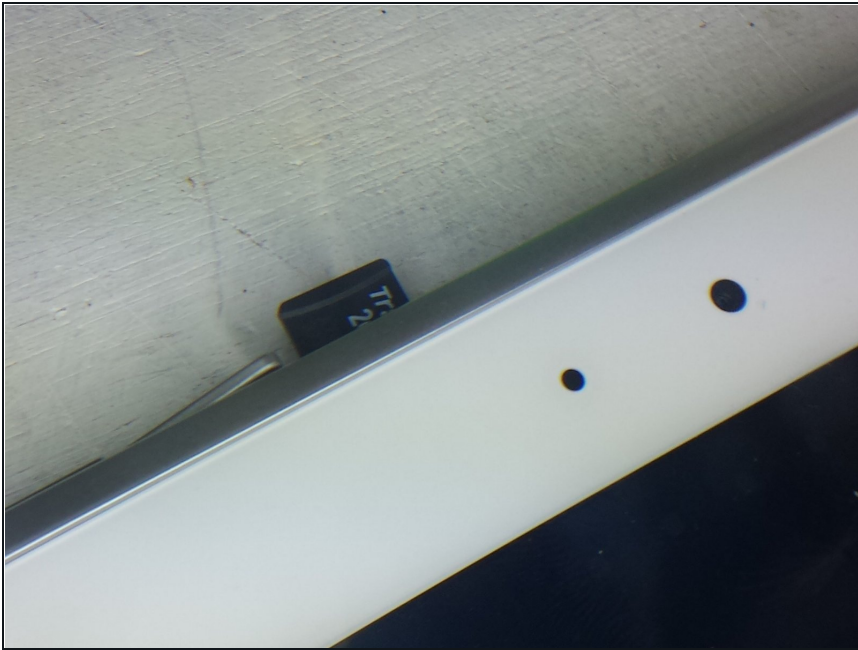

- To change the content of the micro SD card:
- You must disassemble the facade, remove the tablet from the shell and open the "SD card" hatch
- Create a file named: sexbreizh.avi
- AVI container, mp3 audio codec, xvid video codec
- Audio bitrate: 44100
- Video rate: 8000

---

Om het apparaat weer in elkaar te zetten, volg je deze instructies in omgekeerde volgorde.