


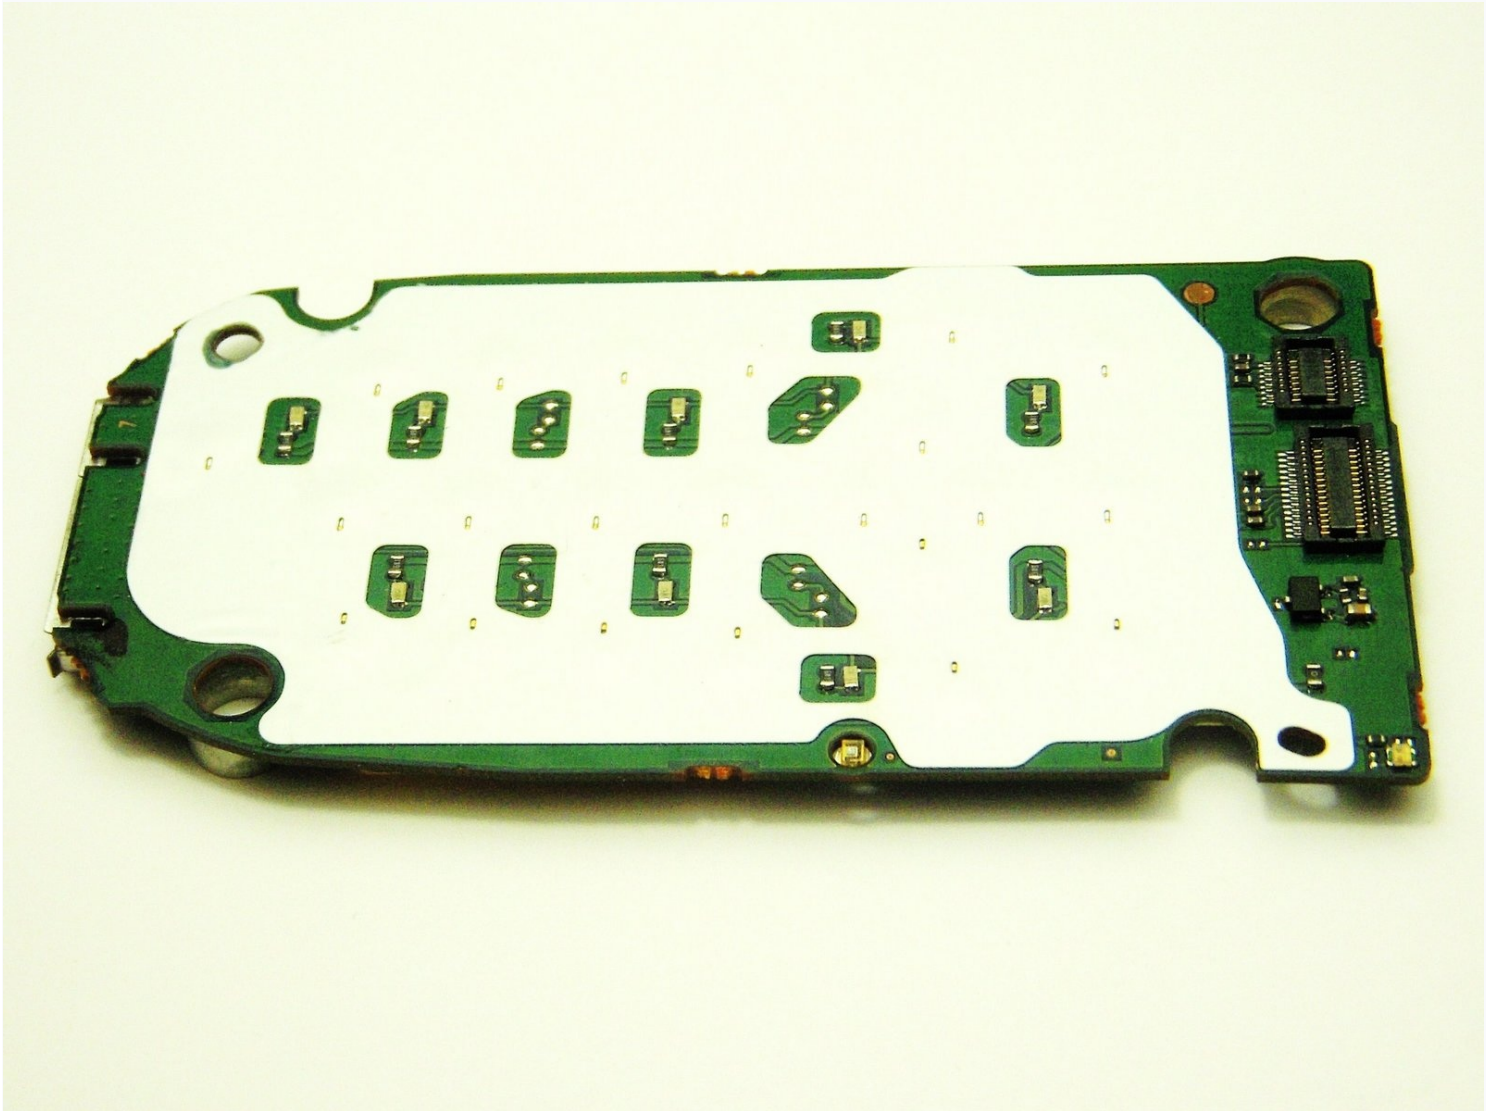

Disassembling Motorola i90c Keypad

Today we are going to take you to a step by...

Written By: Jorge



INTRODUCTION

Today we are going to take you to a step by step guide on how to install a new keypad.

TOOLS:

[Tweezers](#) (1)
[iFixit Opening Tool](#) (1)
[TR9 Torx Security Screwdriver](#) (1)

PARTS:

[Motorola Touchpad](#) (1)

Step 1 — Battery




- Slide the notch downward while pulling the back cover off to remove it.

Step 2



- Use your fingers to push the battery upward from the bottom.
- Lift upwards to remove the battery.

Step 3 — Antenna

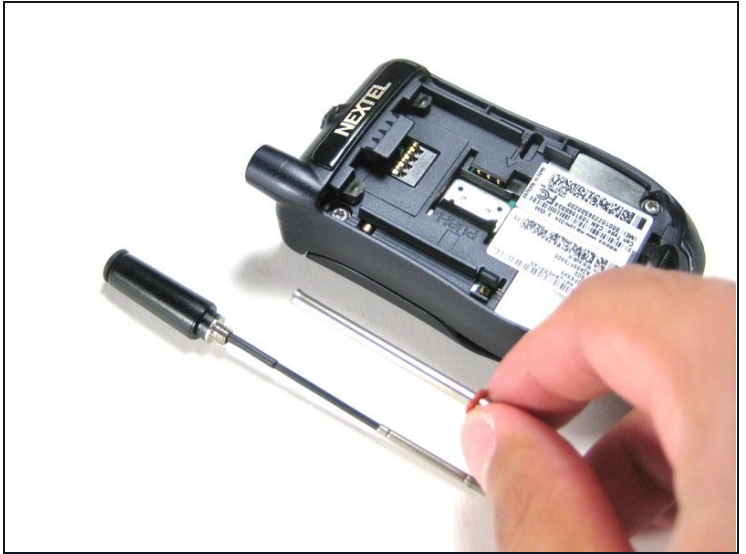

- Unscrew the antenna in a counter-clockwise fashion.
- Remove the aluminum cover.

Step 4 — Disassembling Motorola i90c Internal Backplate



- Unscrew the 3 screws shown.
- Lift up the right part of the Nextel logo and unscrew the screw underneath.



Step 5



⚠ DO NOT force the cover off as it could damage the ribbon cable!



- Gently lift the back cover off.

Step 6

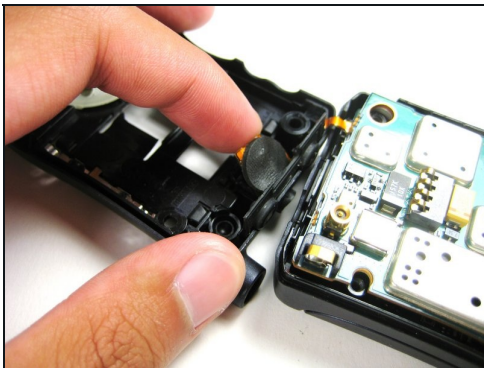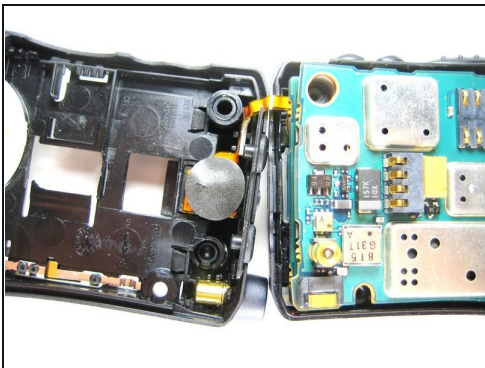


- Carefully pry off the connection between the headphone jack and logic board.

Step 7 — Logic Board

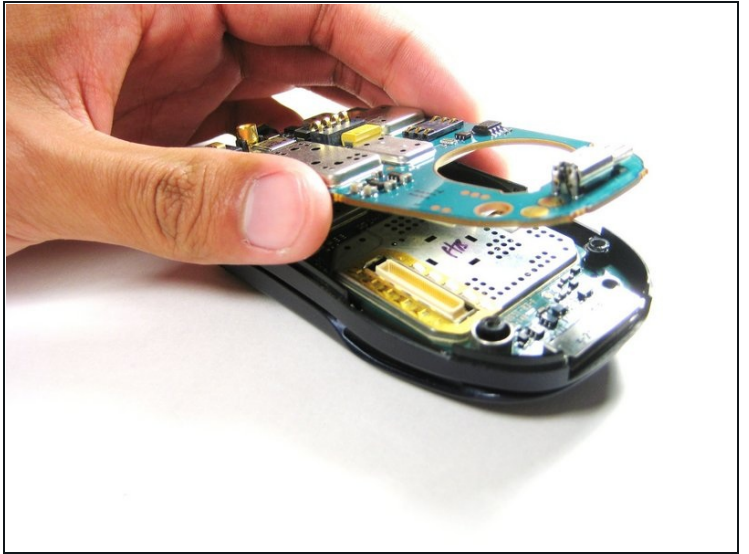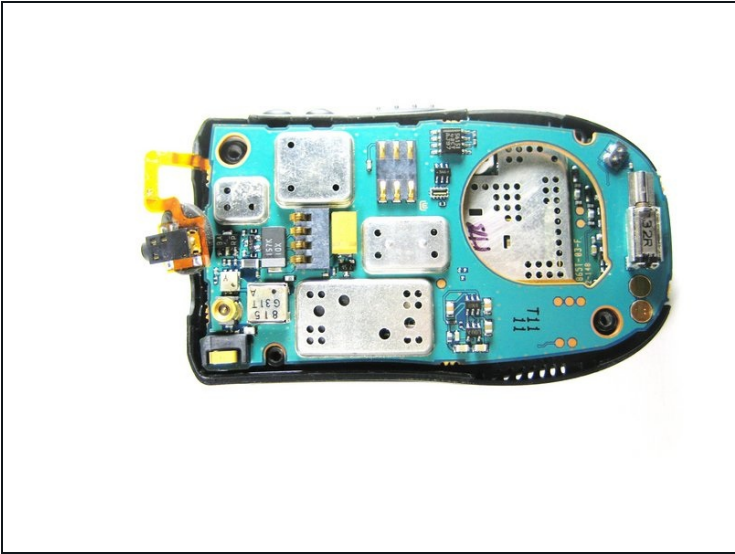

- Lift the first logic board off of the rest of the device.

Step 8

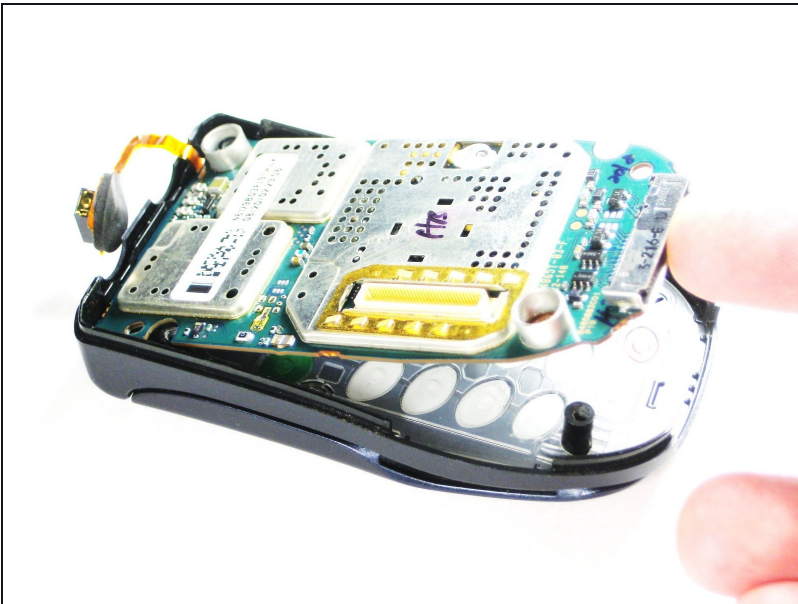

- Gently lift the second logic board from the rest of the device.

⚠ DO NOT force the board straight off as it could damage the ribbon cable!

Step 9



- Using [tweezers](#), carefully pull off the connector shown.

Step 10 — Keypad



- Remove the keypad buttons off the front cover of the phone.

To reassemble your device, follow these instructions in reverse order.