




# LG VX5400 Keypad Replacement

Written By: Vanessa Panchal

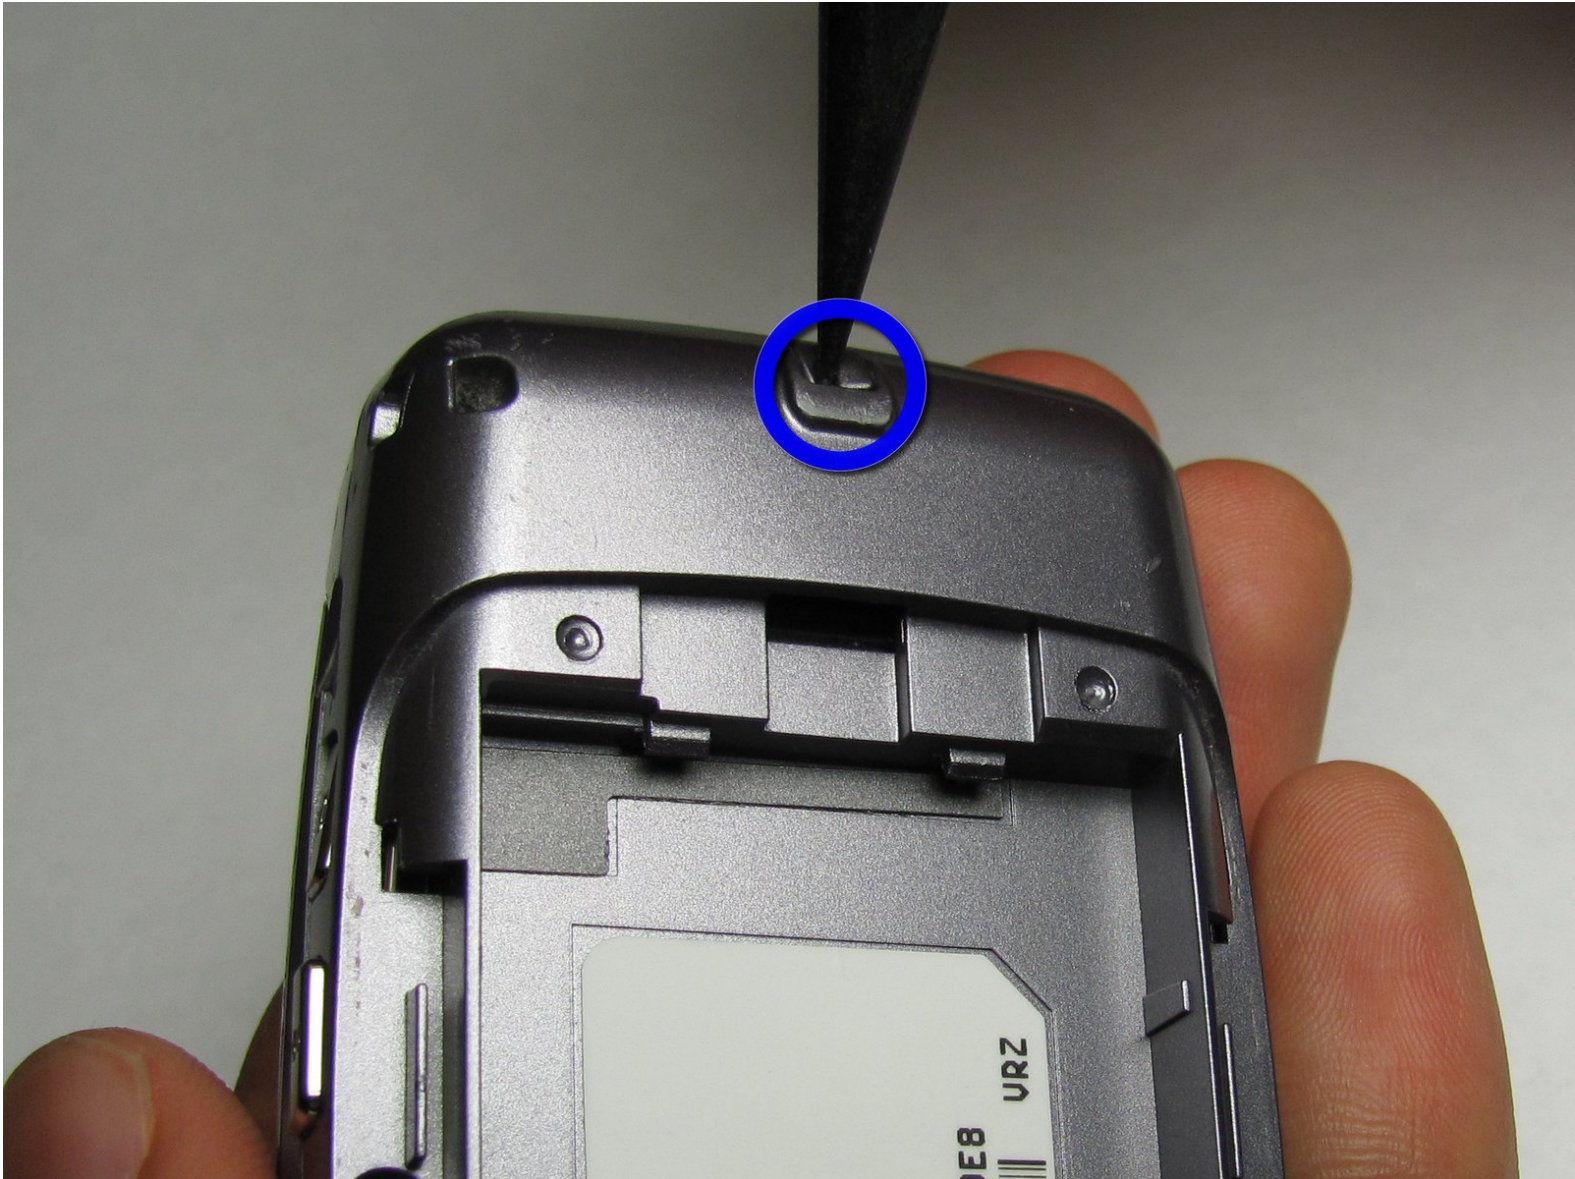

---

## INTRODUCTION

Often times the key pad could break or become worn. This repair guide will show you how to replace the the keypad of the LG VX5400.



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Battery



- Turn off the cell phone and turn it over on its back side

## Step 2



- Hold the phone case in your palm and slide the back cover towards yourself using your thumb



## Step 3



- Slide a tool or finger into the notch at the top of the battery to carefully remove it.

## Step 4 — Keypad



- Remove the rubber stopper from the back top of the phone with the pointed end of a spudger.

## Step 5



- Use the Phillip screw driver to remove the hidden screw, which is marked by the red square

## Step 6




- Gently split open the front and back of the bottom casing of the phone with fingers.

## Step 7



- Carefully pull the key pad from the phone through the opening.

## Step 8

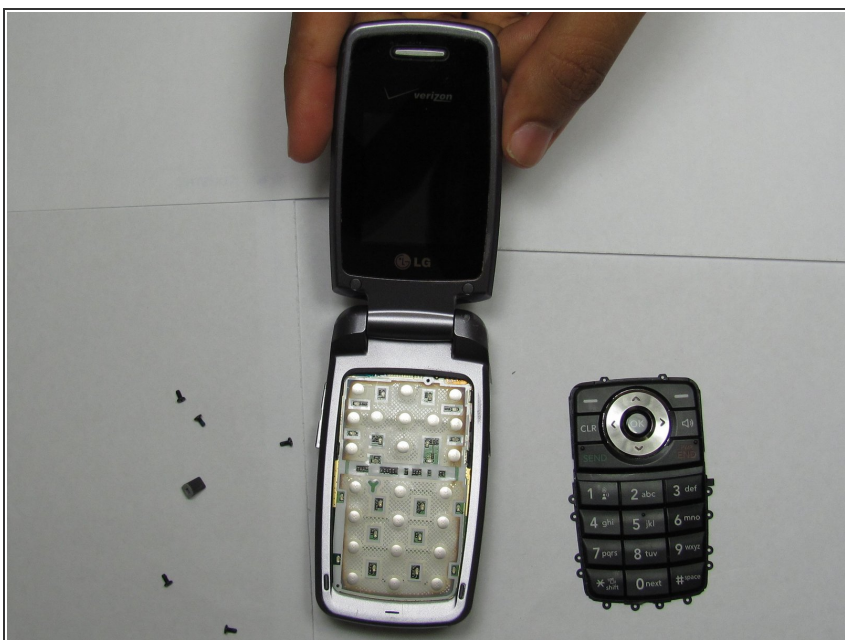

- See here for parts that have been removed.

To reassemble your device, follow these instructions in reverse order.