



Lenovo Golden Warrior S8 Display Replacement

Written By: Marco Conti





TOOLS:

- [Pro Tech Toolkit](#) (1)
-

Step 1 — Display



- Remove the back cover and the battery

Step 2






- Remove the eight screws

Step 3






- Carefully open the mid frame

Step 4

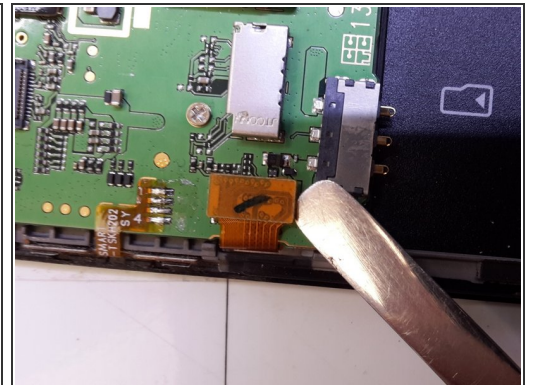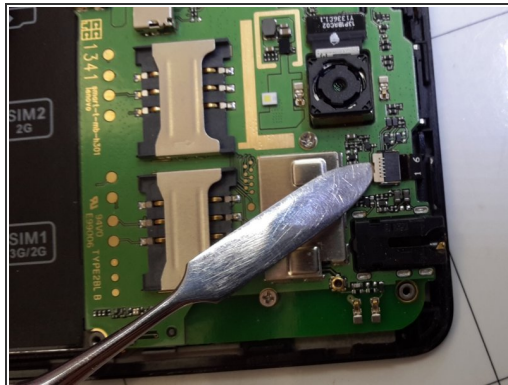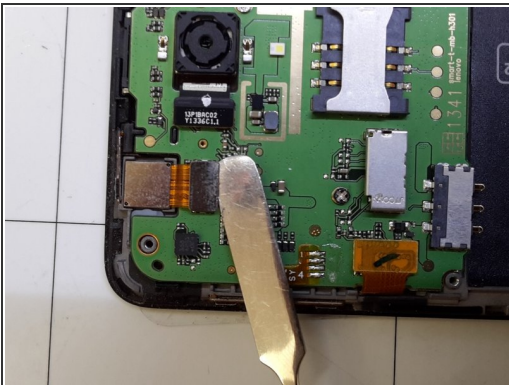


- Remove the flats

Step 5

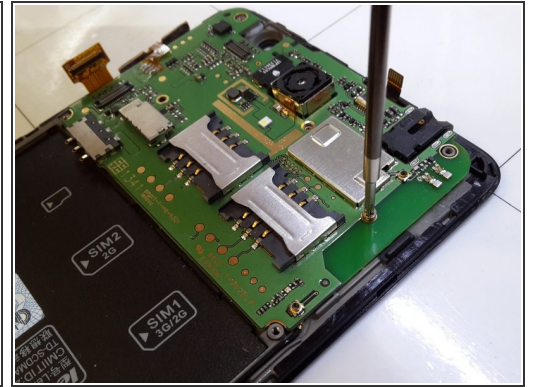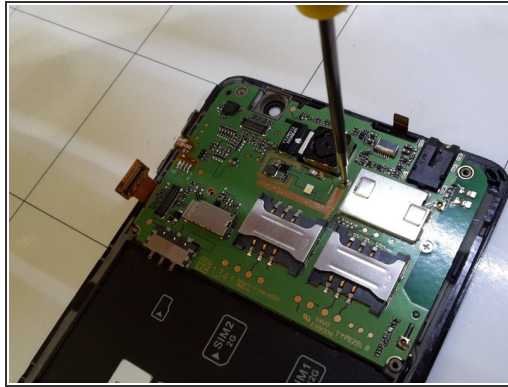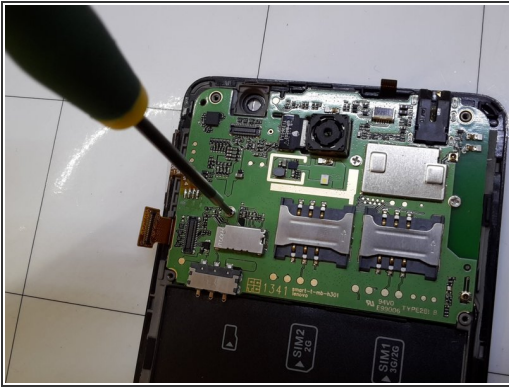




- Remove the three screws

Step 6

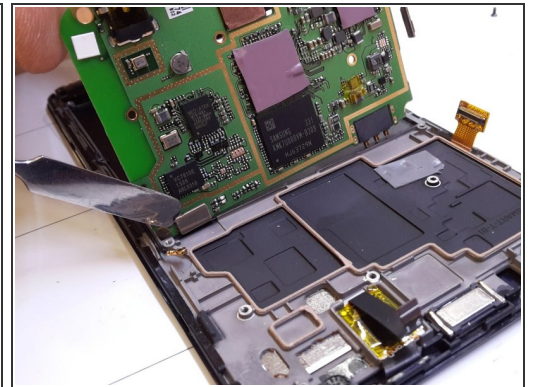

- Remove the flat power on
- Remove the antenna
- Remove the flat of the buttons below

Step 7

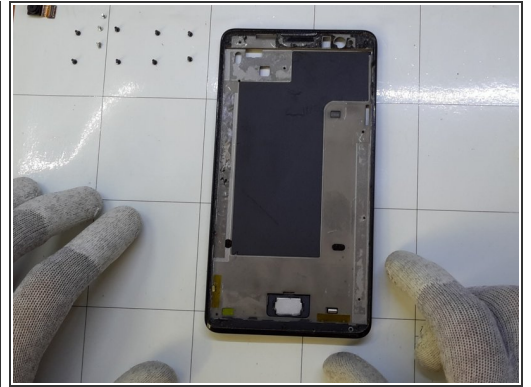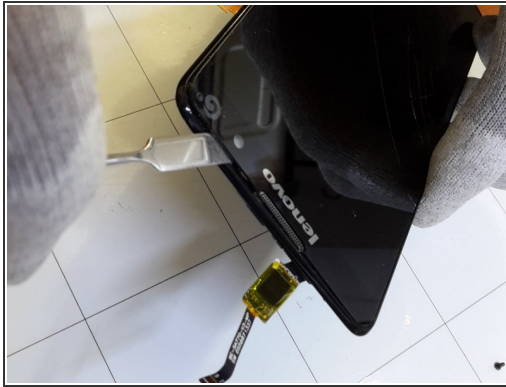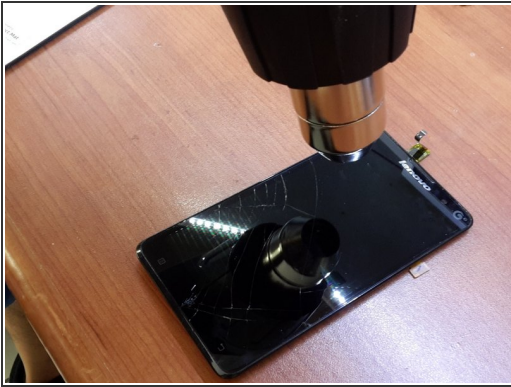

- Heat the front
- Carefully detach the front from the middle frame

To reassemble your device, follow these instructions in reverse order.