



# MacBook Core Duo Hard Drive Replacement

Written By: iRobot



---

## INTRODUCTION

How to remove the hard drive, along with its cable and bracket from your computer.

---

### TOOLS:


- [Coin](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Battery



- Use a coin or spudger to rotate the battery-locking screw 90 degrees clockwise.

## Step 2

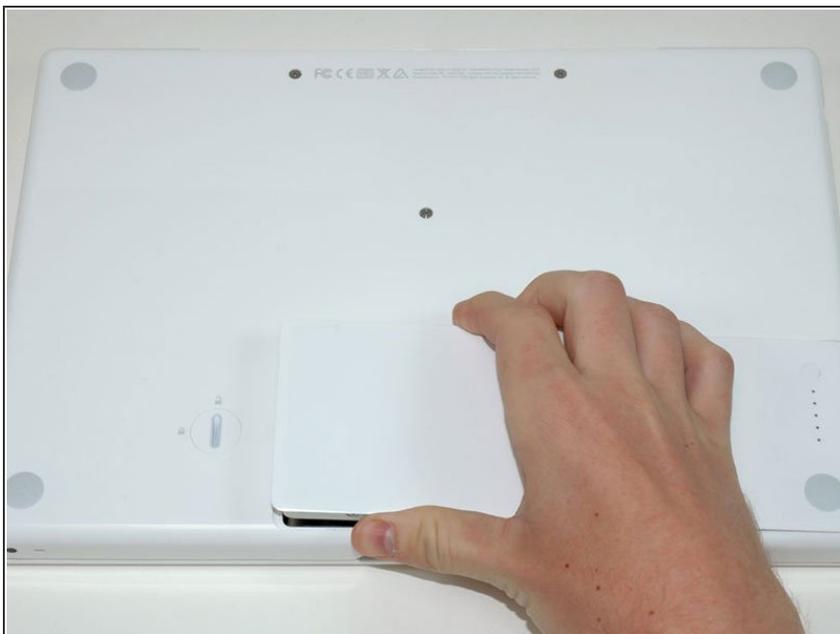

- Lift the battery out of the computer.



## Step 5 — Hard Drive



- Grasp the white plastic tab attached to the hard drive and pull it to the right, removing the hard drive from the computer.
- ☑ The hard drive goes back into its compartment with the label facing down.

To reassemble your device, follow these instructions in reverse order.