


iMac Intel 21.5" EMC 2805 SATA Data and Power Cables Replacement

Prereq for logic board.

Written By: Walter Galan

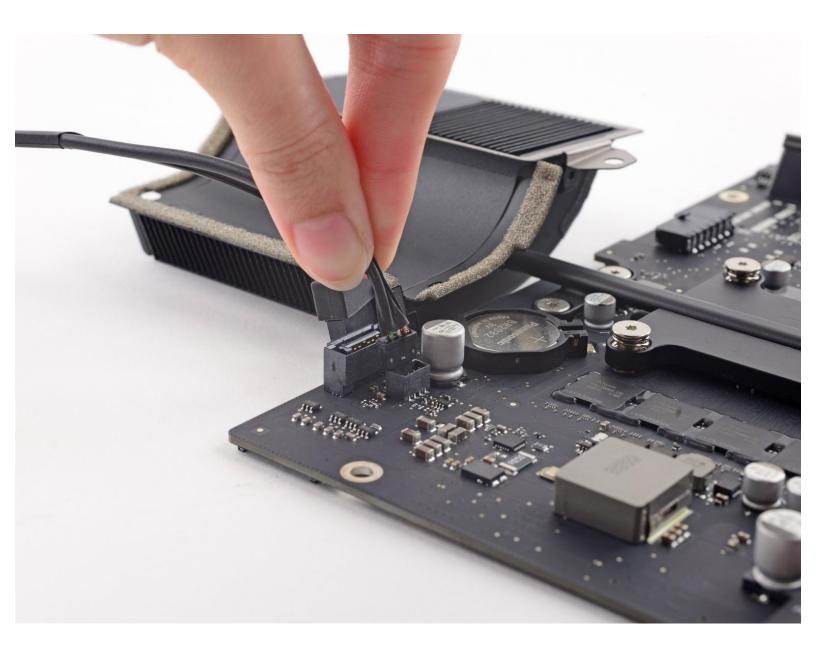


This document was generated on 2020-11-28 03:29:08 AM (MST).


INTRODUCTION

Prereq for logic board.

Step 1 — SATA Data and Power Cables




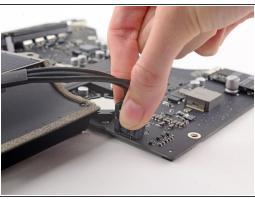


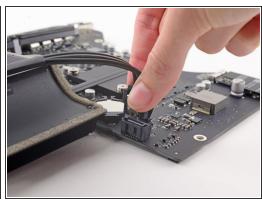

- (i) The SATA data connector has a clip that must be pressed to allow removal.
- While pressing on the clip with your thumb, lift and disconnect the SATA data connector from its socket on the logic board.

Step 2

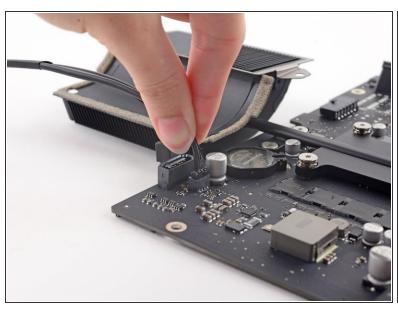

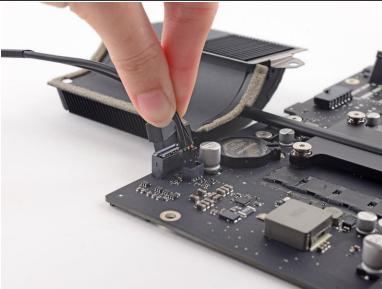

Grasp the hard drive power connector and gently pull it out of its socket on the logic board.

To reassemble your device, follow these instructions in reverse order.