



IBM ThinkPad T42 Battery Replacement


Written By: Kevin Rehm



INTRODUCTION


Changing the battery is easy -- you don't need a any tools.

Step 1 — Battery Clips

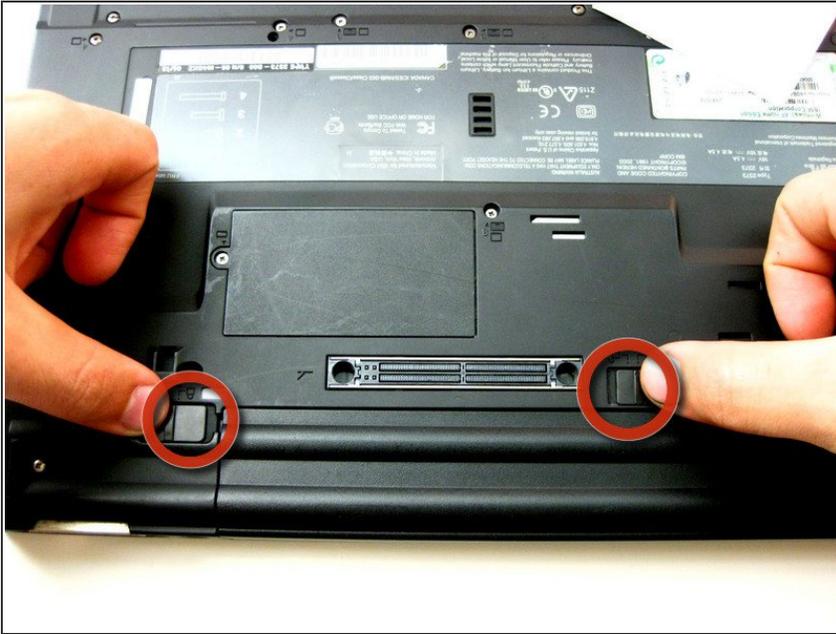

- Flip the laptop over so the underside is facing you, then, release the 2 clips holding the battery on.
- ⚠ Make sure the laptop is off when you do this, sudden power outages can cause data corruption.

Step 2 — Removing the Battery

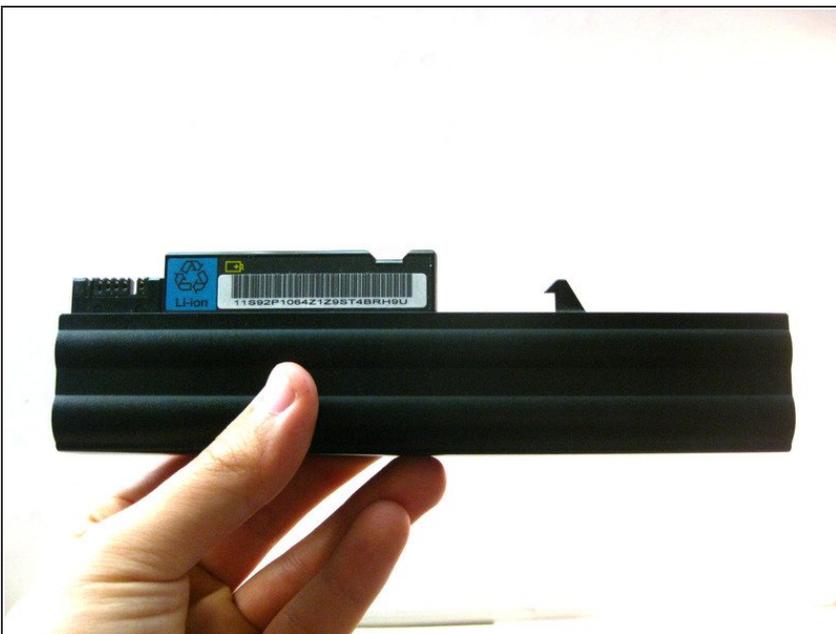

- Carefully grab the battery, then pull it straight out, not at an angle.

To reassemble your device, follow these instructions in reverse order.