



Compaq iPAQ Pocket PC 3830 Motherboard Replacement

This guide will help users replace the Motherboard of the device. With a step by step process, a novice will be able to to remove the backboard and remove all the wires from the motherboard to free the motherboard in order to replace it.

Written By: Sedina Cavcic



10.11.2014

INTRODUCTION

This guide is to help users replace the motherboard from the Compaq iPAQ Pocket PC 3830.



TOOLS:


- [Phillips #0 Screwdriver](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Motherboard





- Remove the four 0.8mm Phillips #00 screws from the back cover.

Step 2

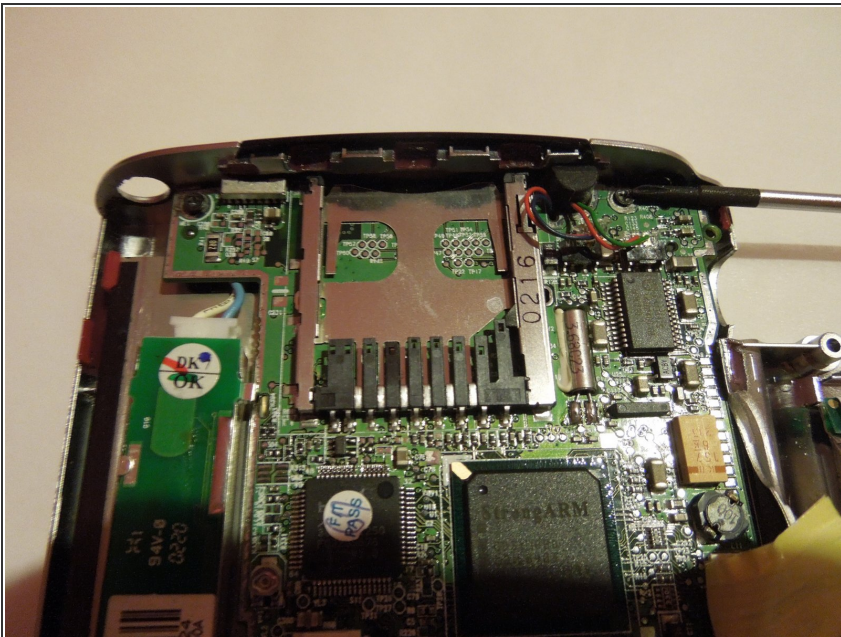


- Remove the two screws on top of the motherboard and the two screws on bottom of motherboard

Step 3

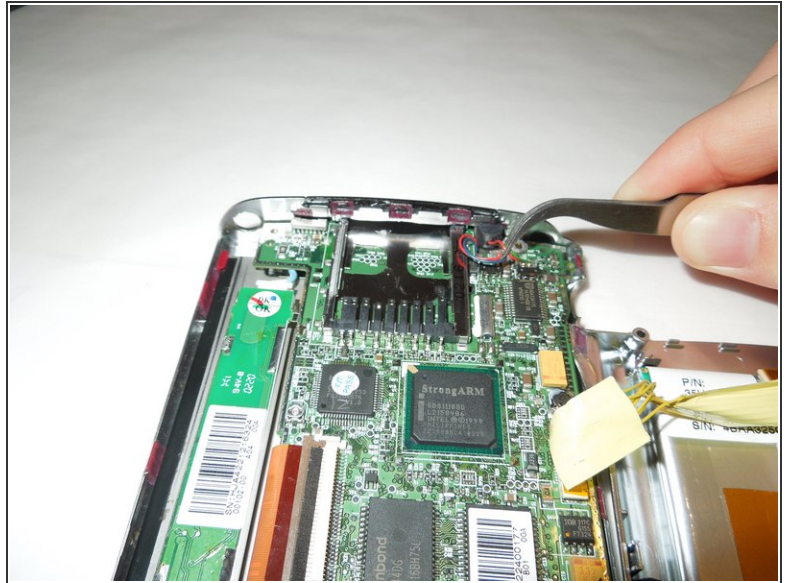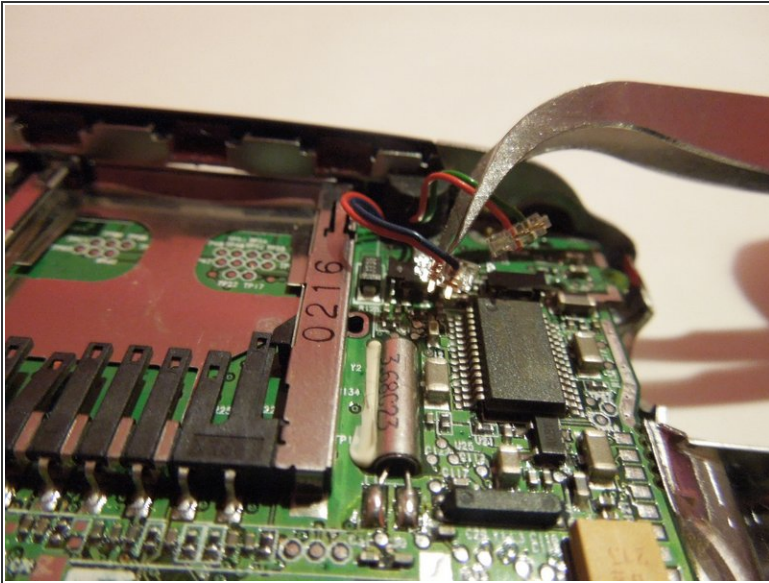



- Detach the wires from their combs on the motherboard.

Step 4

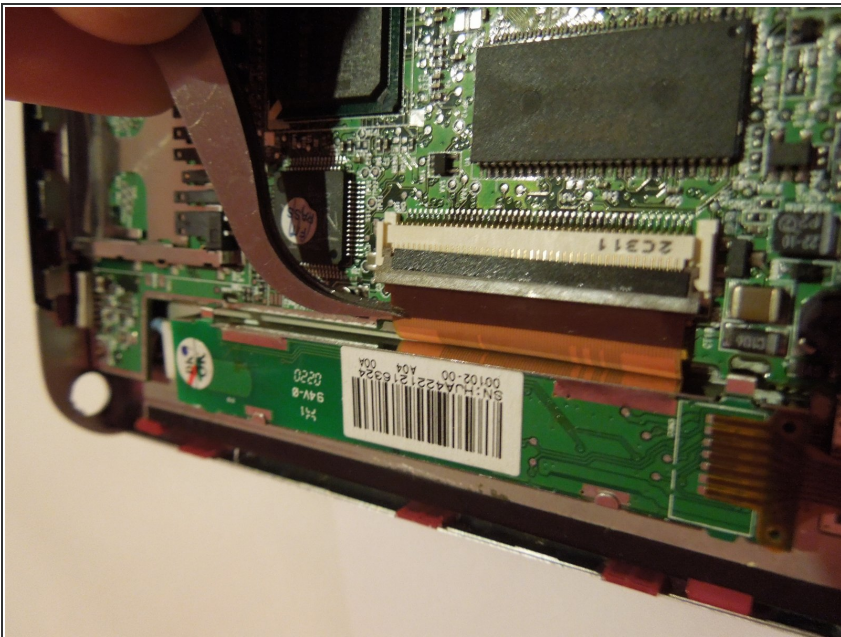


- Detach from comb that is located on motherboard.

Step 5

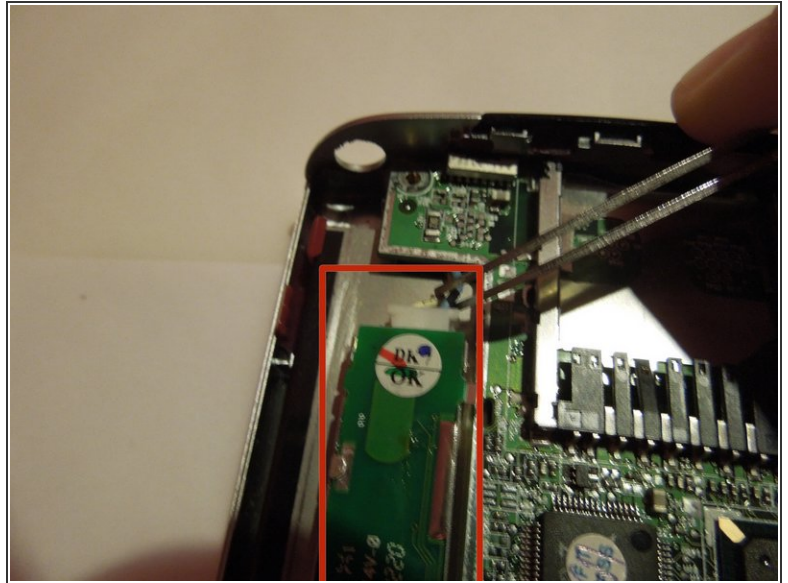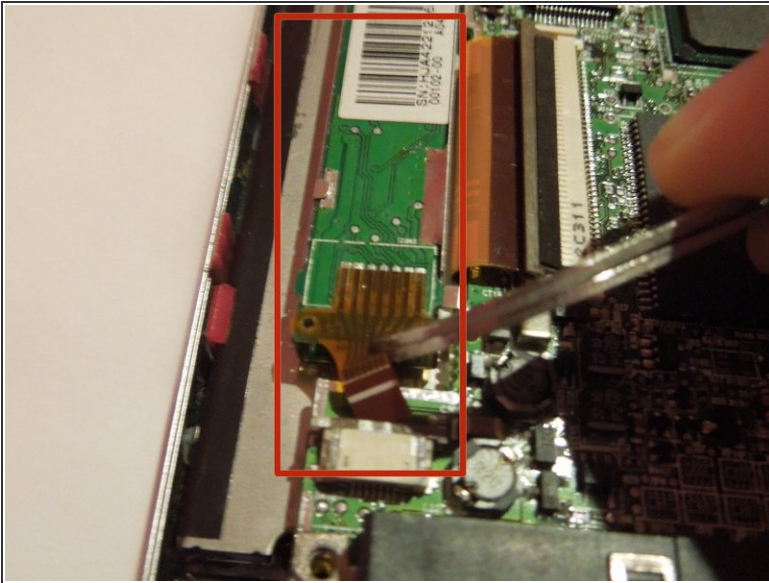


- Remove the small piece from the motherboard.

Step 6

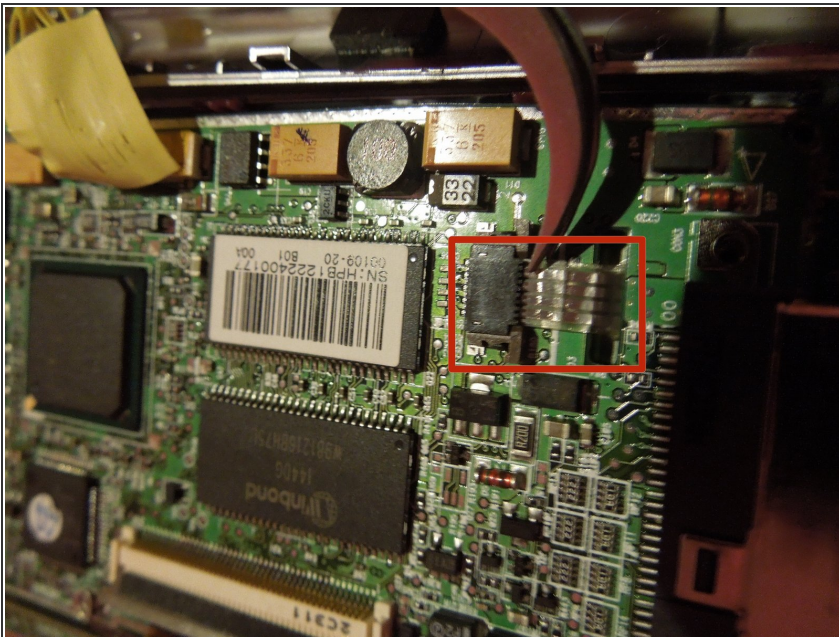

- Use tweezers to remove last piece from the comb on the motherboard.

Step 7

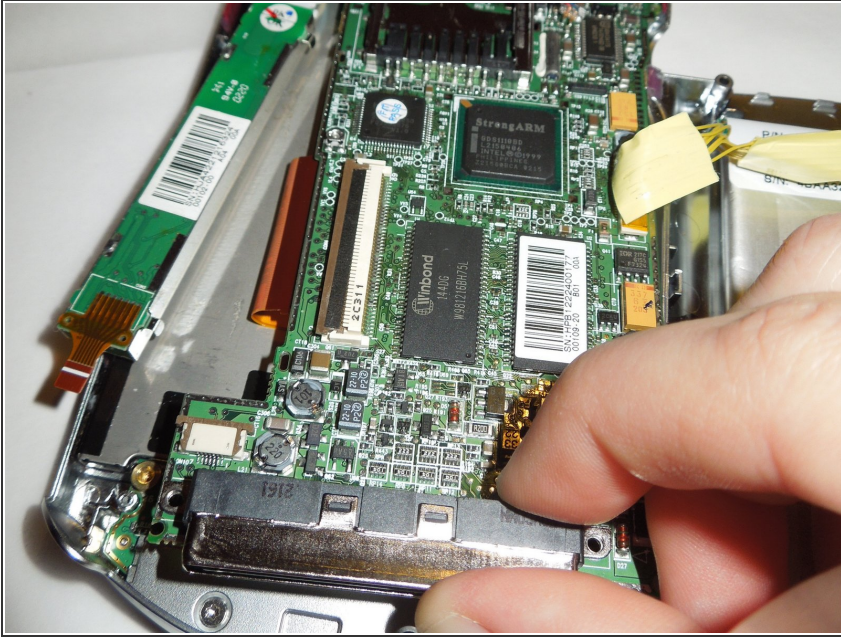

- Remove the motherboard by simply lifting it.

To reassemble your device, follow these instructions in reverse order.