




Kyocera Marbl K127 Headphone Jack Replacement

This guide will show you how to remove and replace a broken headphone jack.

Written By: Brittany Mitchell

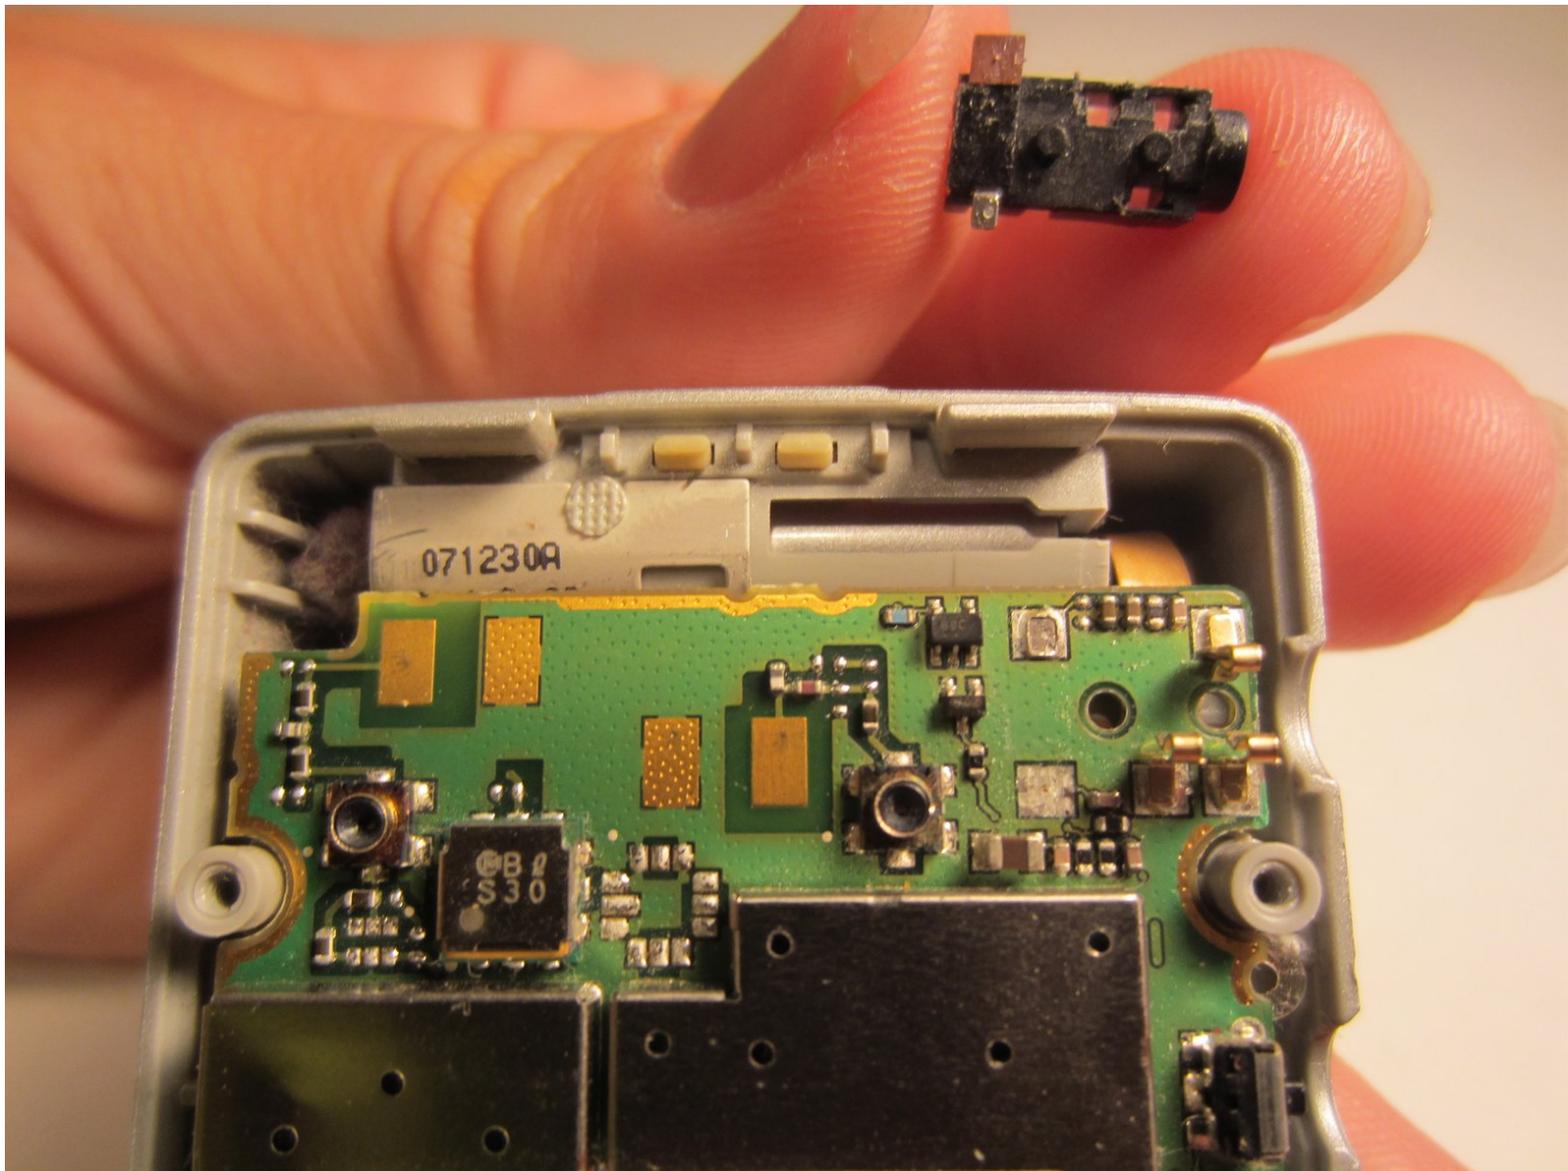

INTRODUCTION

This guide will teach you how to replace the headphone jack in the Kyocera Marbl K127 cell phone. This is useful in the event that sound is no longer audible or is distorted when delivered through the headphone jack. This process involves just four easy steps.

TOOLS:


- [Y1 Tri-point Screwdriver](#) (1)

Step 1 — Remove the cover on the back of the phone.



- Place your thumbs on the pack of the phone and slide them in a downward motion to remove the cover.

Step 2 — Remove the battery

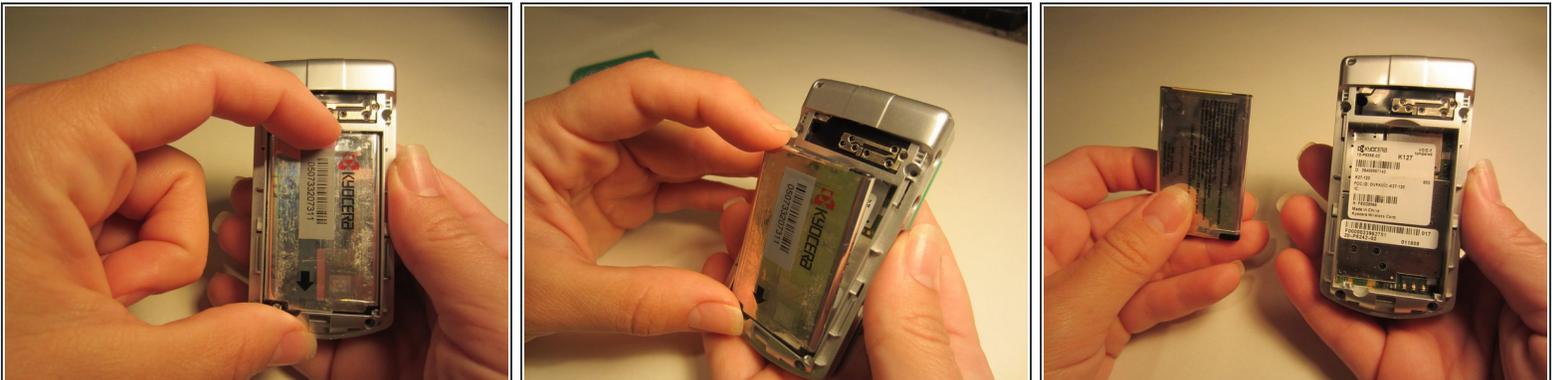


- Use your index finger at the top of the battery and pull it towards your body.

Step 3 — Remove the phone backing.



- Use the Y1 tri-wing screwdriver to remove the four 2.4mm screws and then pry the entire backing off of the phone including the black clip attached to the top of the motherboard.

Step 4 — Remove existing headphone jack.

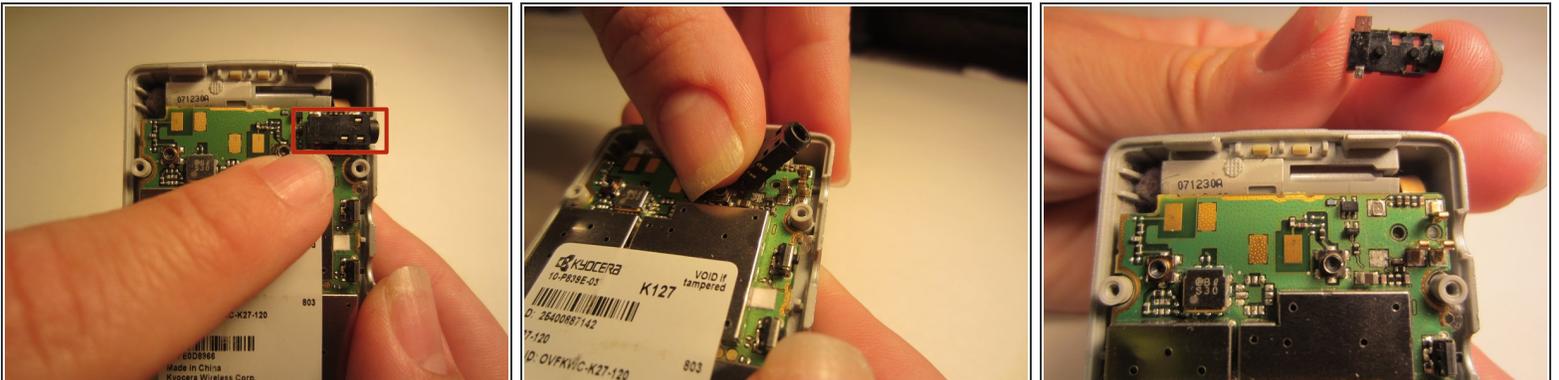

- Locate the headphone jack attached to the top right of the motherboard and pull it off using your thumb and index fingers.

To reassemble your device, follow these instructions in reverse order.