




Sony Xperia TL Loud Speaker Replacement

Replacing the phones loud speaker module.

Written By: Adam Giniger

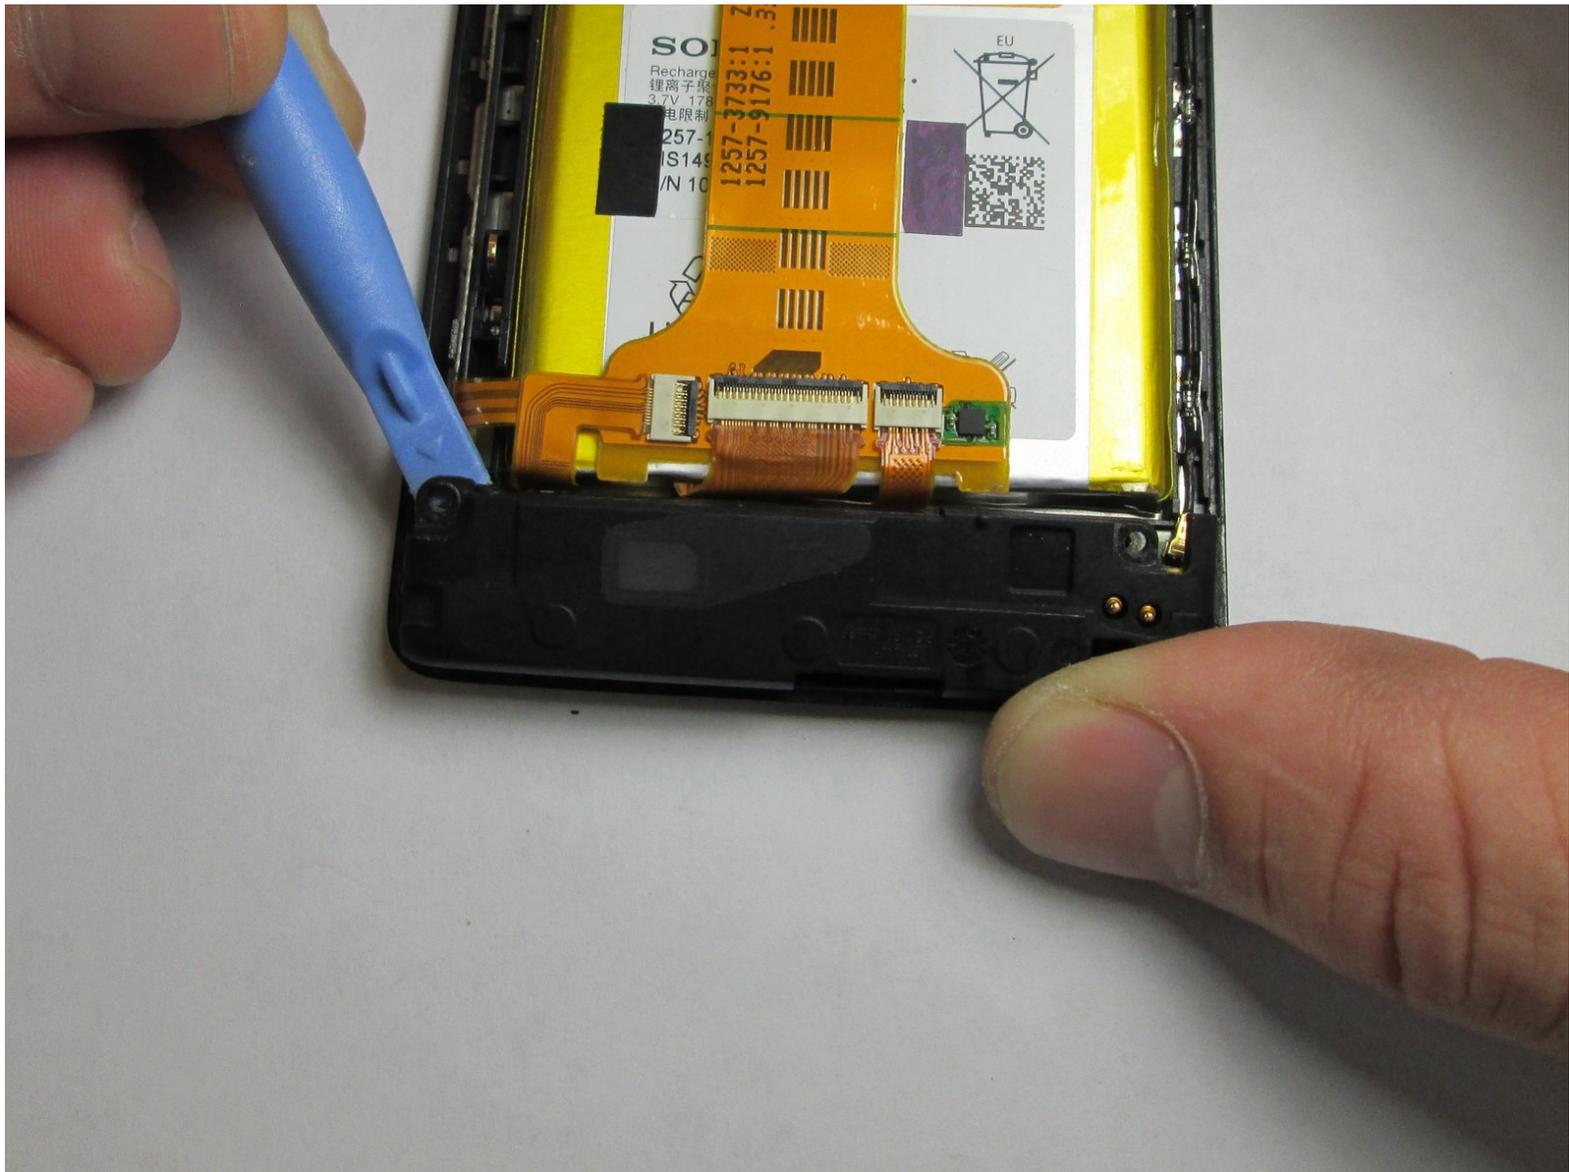

INTRODUCTION

We will show the user how to access and remove the phones loud speaker module.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Remove Top Plastic Section



- Use the plastic opening tool to pry the top plastic section off.

Step 2 — Remove Bottom Plastic Section




- Use the plastic opening tool to pry the bottom plastic section off.

Step 3 — Unscrewing the Back Off



- Remove the four 5mm screws.
- Use the plastic opening tool to pry off the back.

Step 4 — Loud Speaker

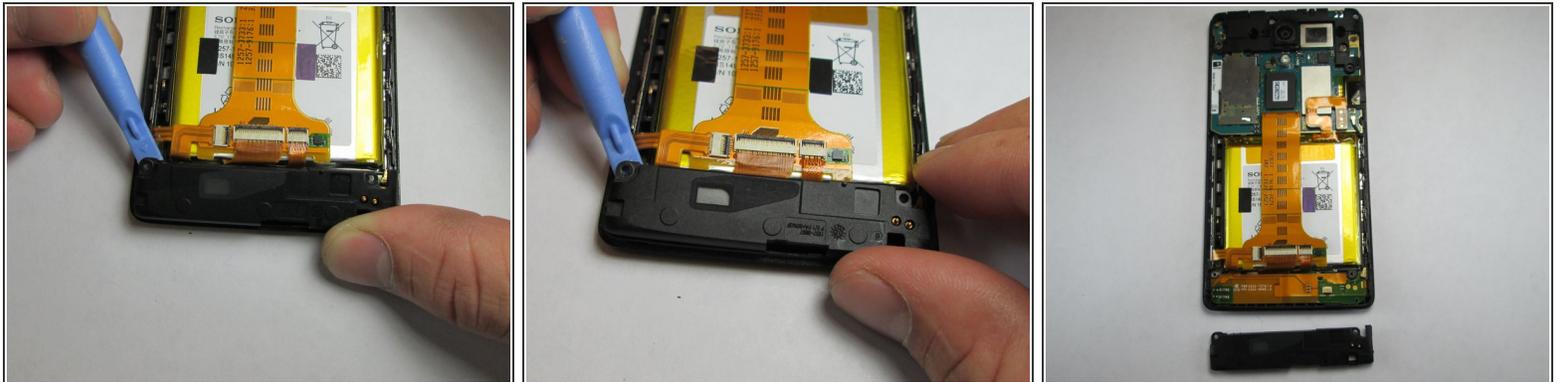

- Use the plastic opening tool to remove the loud speaker module.

To reassemble your device, follow these instructions in reverse order.