




# OnePlus One Front Facing Camera Replacement

Written By: Chad Jackson

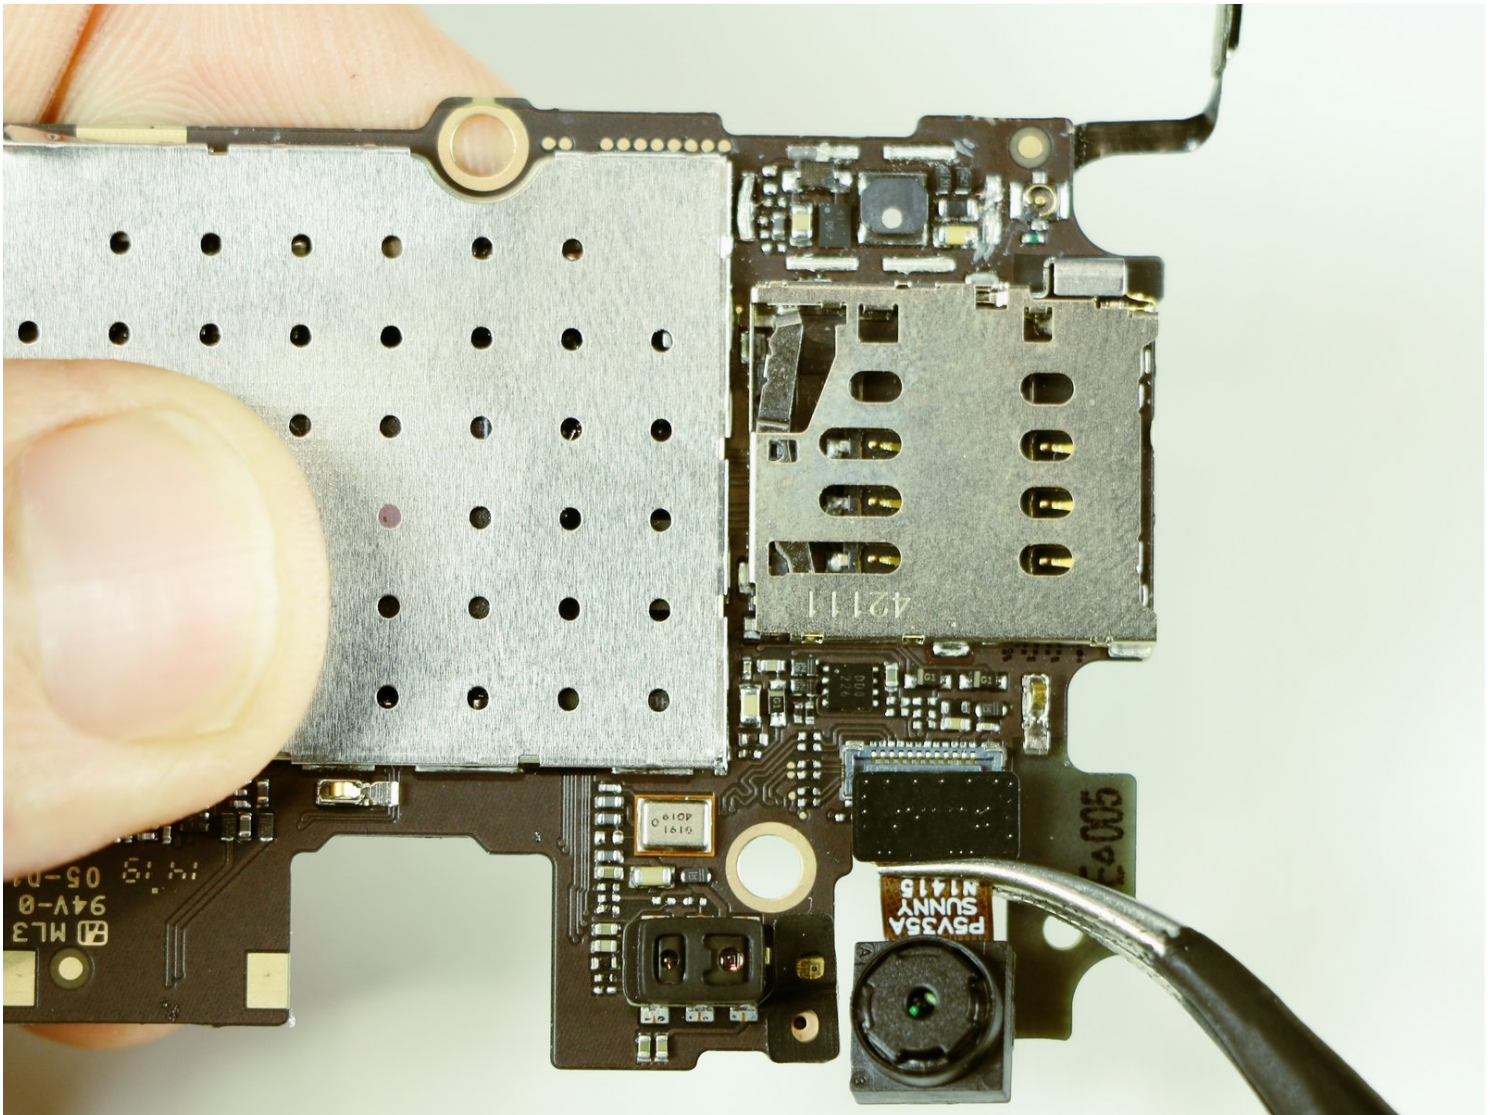

## 🔧 TOOLS:

Tweezers (1)  
Phillips #00 Screwdriver (1)  
iFixit Opening Tool (1)  
SIM Card Eject Tool (1)  
Spudger (1)

## ⚙️ PARTS:

OnePlus One Front Camera (1)

### Step 1 — Battery



- Remove the SIM tray.
- Using a plastic opening tool, carefully separate the back panel from the main body assembly of the phone. Be extra careful around the SIM slot or other weak areas.
- You may encounter some resistance due to hidden locking clips around the inside edge of the phone. Not to worry; just move in one consistent direction around the phone as opposed to jumping from spot to spot!
- Top to bottom, left to right, clockwise or counter clockwise, once we make it about half way around the device, the panel is easily removable by hand.

**⚠️ It is of utmost importance that you do not attempt to free the battery from the device at this point without proceeding to the following step!** This is an *integrated* battery that can easily be damaged or destroyed if the proper steps are not taken.

## Step 2



- Using a pair of [tweezers](#), remove the plastic plugs.
- Once the hidden screws are revealed, use a PH #00 screwdriver to remove the three 3.175mm screws.
- Use the PH #00 screwdriver to remove the remaining six 3.175 screws.

## Step 3



- Using a plastic opening tool, gently pry up the black plastic cover and remove it from the device.




## Step 4



- After we have removed the motherboard cover, we notice that the battery is intact and has a black ribbon attached to it, which is mounted on the logic board.
- Using the spudger, carefully begin to lift the the battery up from the side opposite the ribbon. Be aware that there is high-grade adhesive holding the battery in its bay, so proceed with caution.


⚠ This battery is not encased in a hard shell so it is soft and malleable. Caution must be taken during removal so as not to cause permanent damage.

## Step 5

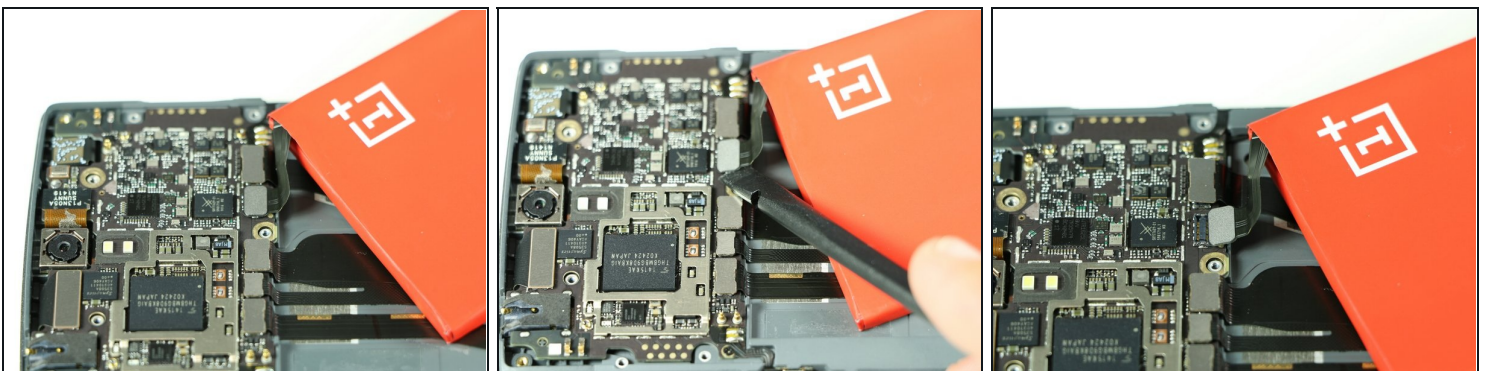


- Once the battery has been freed, we use the ever handy black spudger to pry up and free the battery ribbon from its dock.
- ① You can disconnect the battery before freeing it to make removal easier.

## Step 6 — Removal of Ribbons

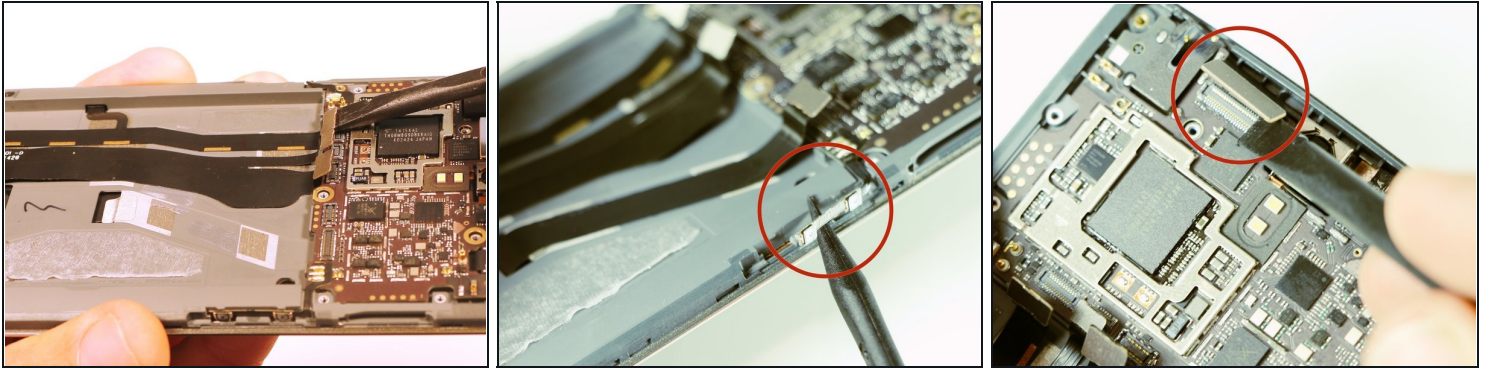

- After the battery has been removed, use the spudger to disconnect the remaining ribbons.
- Notice that there are two side ribbons, one on each side (volume up/down and power), and a top ribbon as well as those from the battery compartment.


## Step 7 — Removal of Motherboard

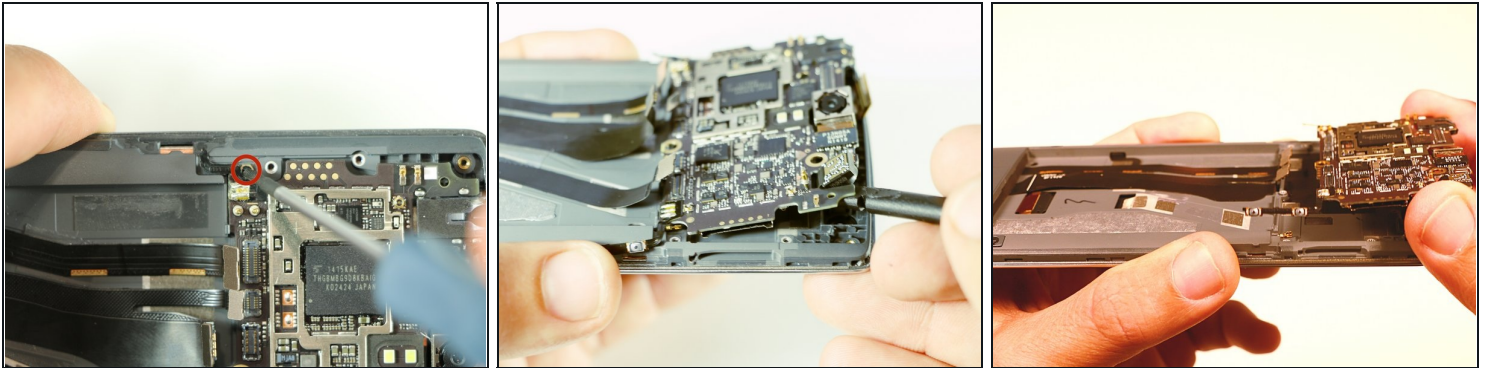

- After removal of the ribbons, there is one final screw. Once you have removed this, the motherboard easily pries out with spudger.
- This is the only screw that differs in size. This screw is a philips 00, 3.00 mm. in length.




## Step 8 — Removal of Rear Facing Camera

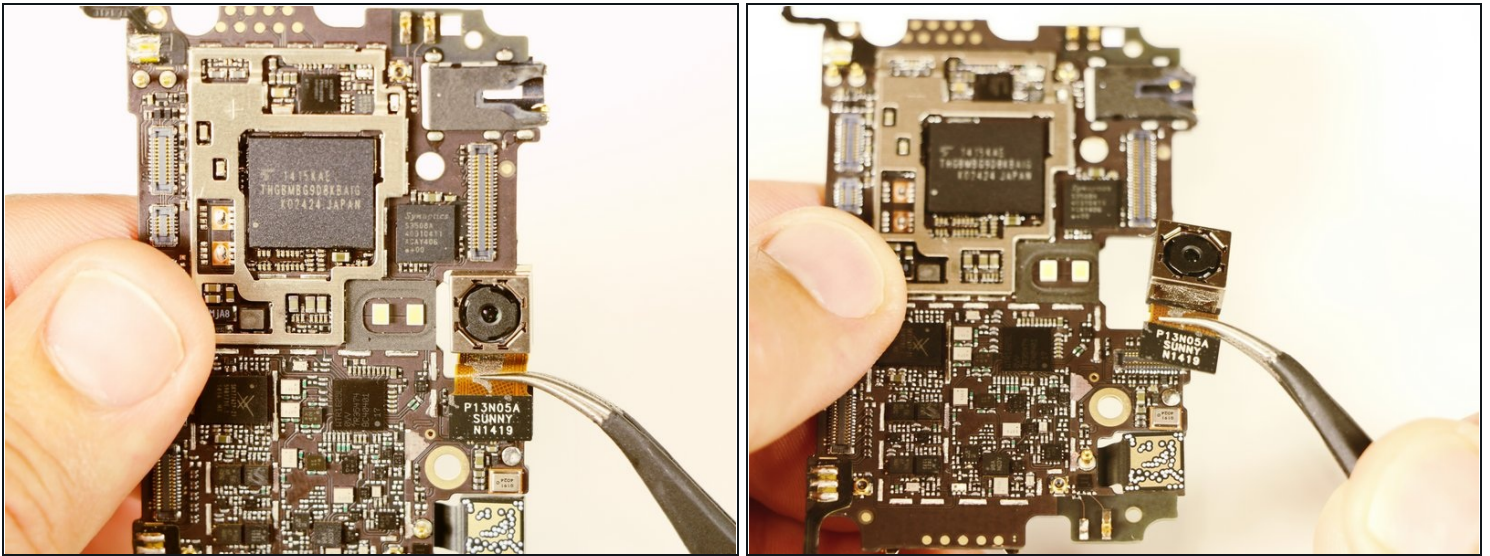

- Once the motherboard has been removed simply pry off the rear facing camera with a spudger or angled [tweezers](#).

## Step 9 — Removal of Front Facing Camera

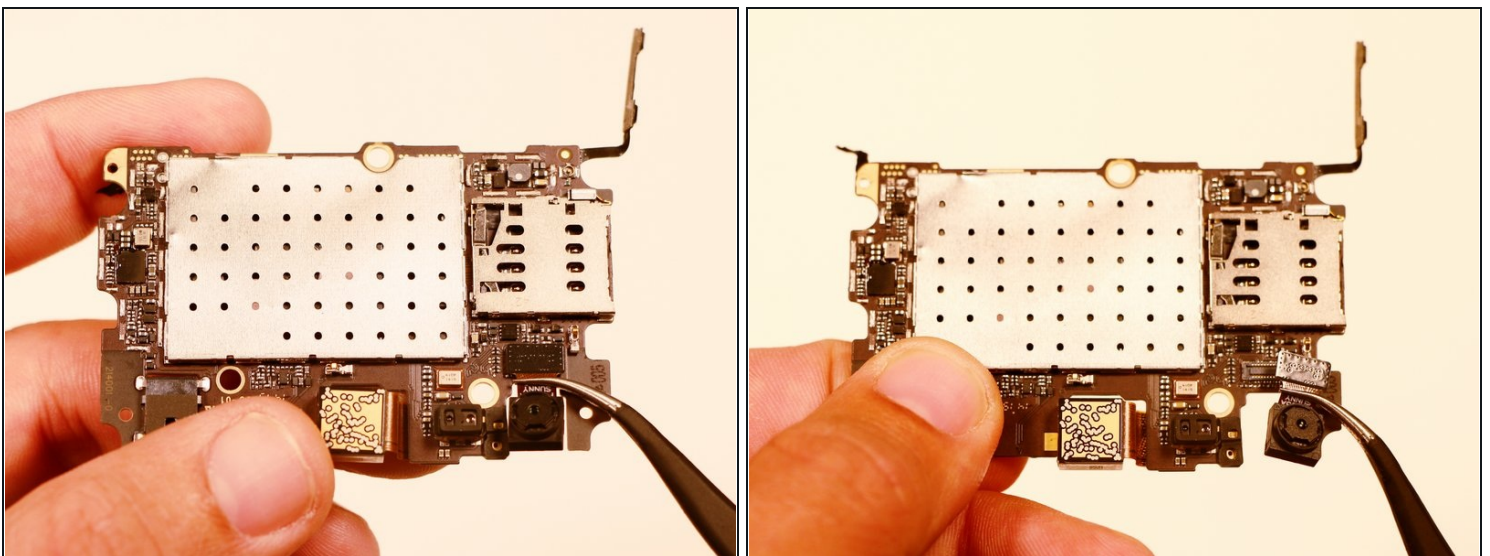

- Once the motherboard has been removed simply pry the front facing camera off of its connector with a spudger or angled [tweezers](#).

---

To reassemble your device, follow these instructions in reverse order.