



iPhone 6 Plus Lightning Connector Assembly Replacement

Prereq for removing Lightning Connector.

Written By: Walter Galan



INTRODUCTION

Prereq for removing Lightning Connector.

TOOLS:


- [Tweezers](#) (1)
 - [Spudger](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
-

Step 1 — Lightning Connector Assembly



- Remove the two 3.3 mm Phillips #00 screws securing the metal bracket to the Lightning connector assembly.

Step 2

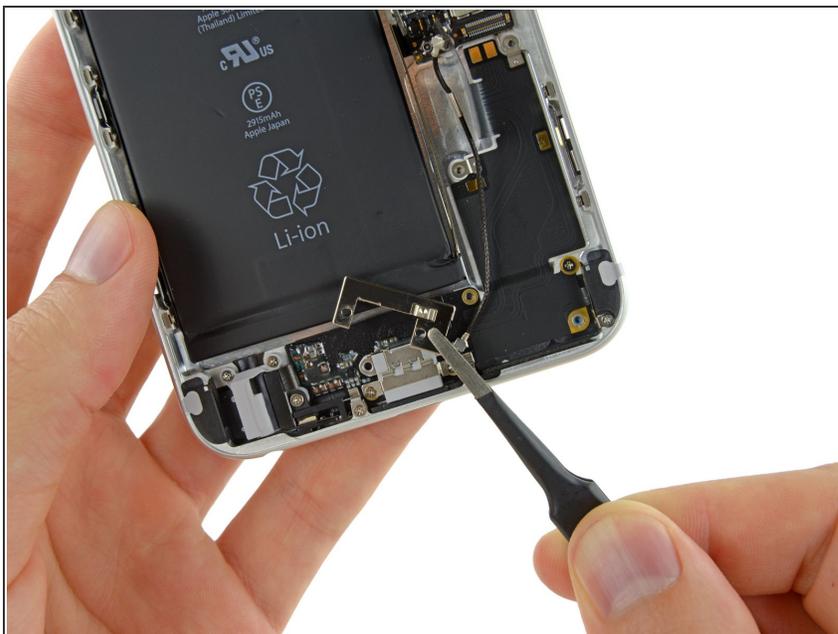

- Use a pair of tweezers to lift and remove the metal bracket out of the iPhone.

Step 3



- Use the flat edge of a spudger to pry the antenna connector cable up off its socket on the Lightning connector assembly.

Step 4



- Lift and remove the antenna connector out of the iPhone.

Step 5



- Remove the following Phillips #00 screws securing the Lightning connector assembly to the rear case:
 - Two 3.2 mm screws
 - One 3.8 mm screw
 - Two 1.7 mm screws
 - Two 1.5 mm screws
 - Two 1.4 mm screws

Step 6



- Use a pair of tweezers to grasp the plastic clip that is situated to the right of the headphone jack and remove it from the iPhone.

To reassemble your device, follow these instructions in reverse order.