




# Samsung Galaxy Fame S6812i SPEAKER Replacement

Replacing speaker.

Written By: hayat soufiani

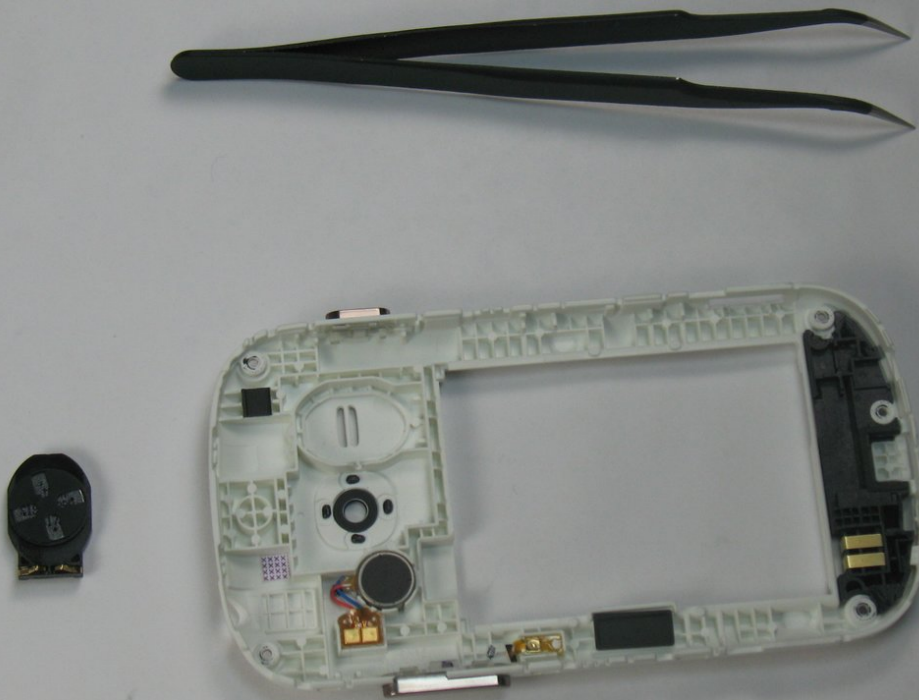

---

## INTRODUCTION

Use this guide to replace your Samsung Galaxy Fame S6812i's speaker.

---



### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
  - [Tweezers](#) (1)
-

## Step 1 — Remove the battery cover



- Turn the phone off and completely. Use your thumb nail or a plastic spudger to pry open the back cover,

## Step 2 — Remove the battery



- Use the plastic opening tool or your thumb nail to lift the battery out of the receptacle.

## Step 3 — Removing screws and stickers



- Remove the five 4 mm screws with a Phillips#00 screwdriver.
- Make sure you remove the sticker hiding the screw on the left bottom corner.




## Step 4 — Removing the mid-frame



- Using the plastic opening tool pry into the bezel to remove the mid-frame
  - Continue moving the plastic opening tool around the mid-frame to separate it from the display assembly.
- ⚠ Be gentle the plastic mounting clips are very fragile. Pay extra attention when working around the volume button.

## Step 5 — Remove the speaker

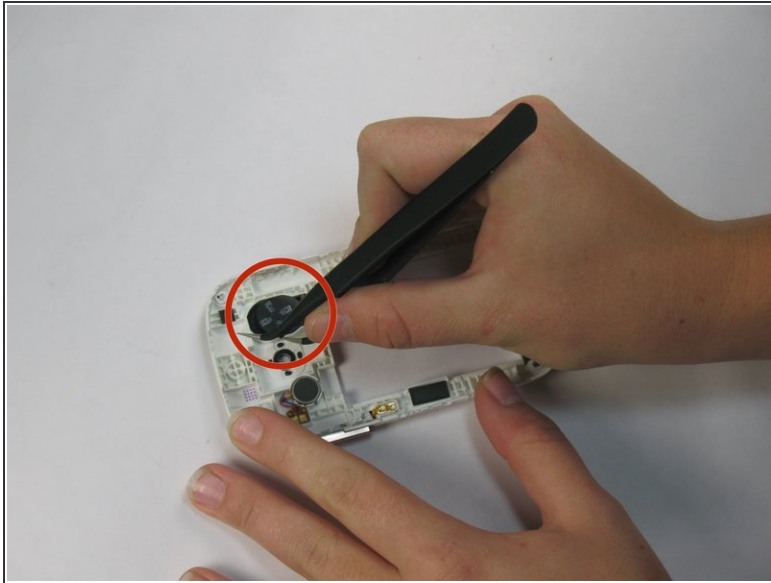

- Pull the speaker off the system by using the tweezers. Perform this step with caution.
- Replace the new speaker and re-assembly the phone.

To reassemble your device, follow these instructions in reverse order.