




Archived

How to clean a Audiovox CDM 9000

The Audiovox was released in December 1998....

Written By: Summer Sines

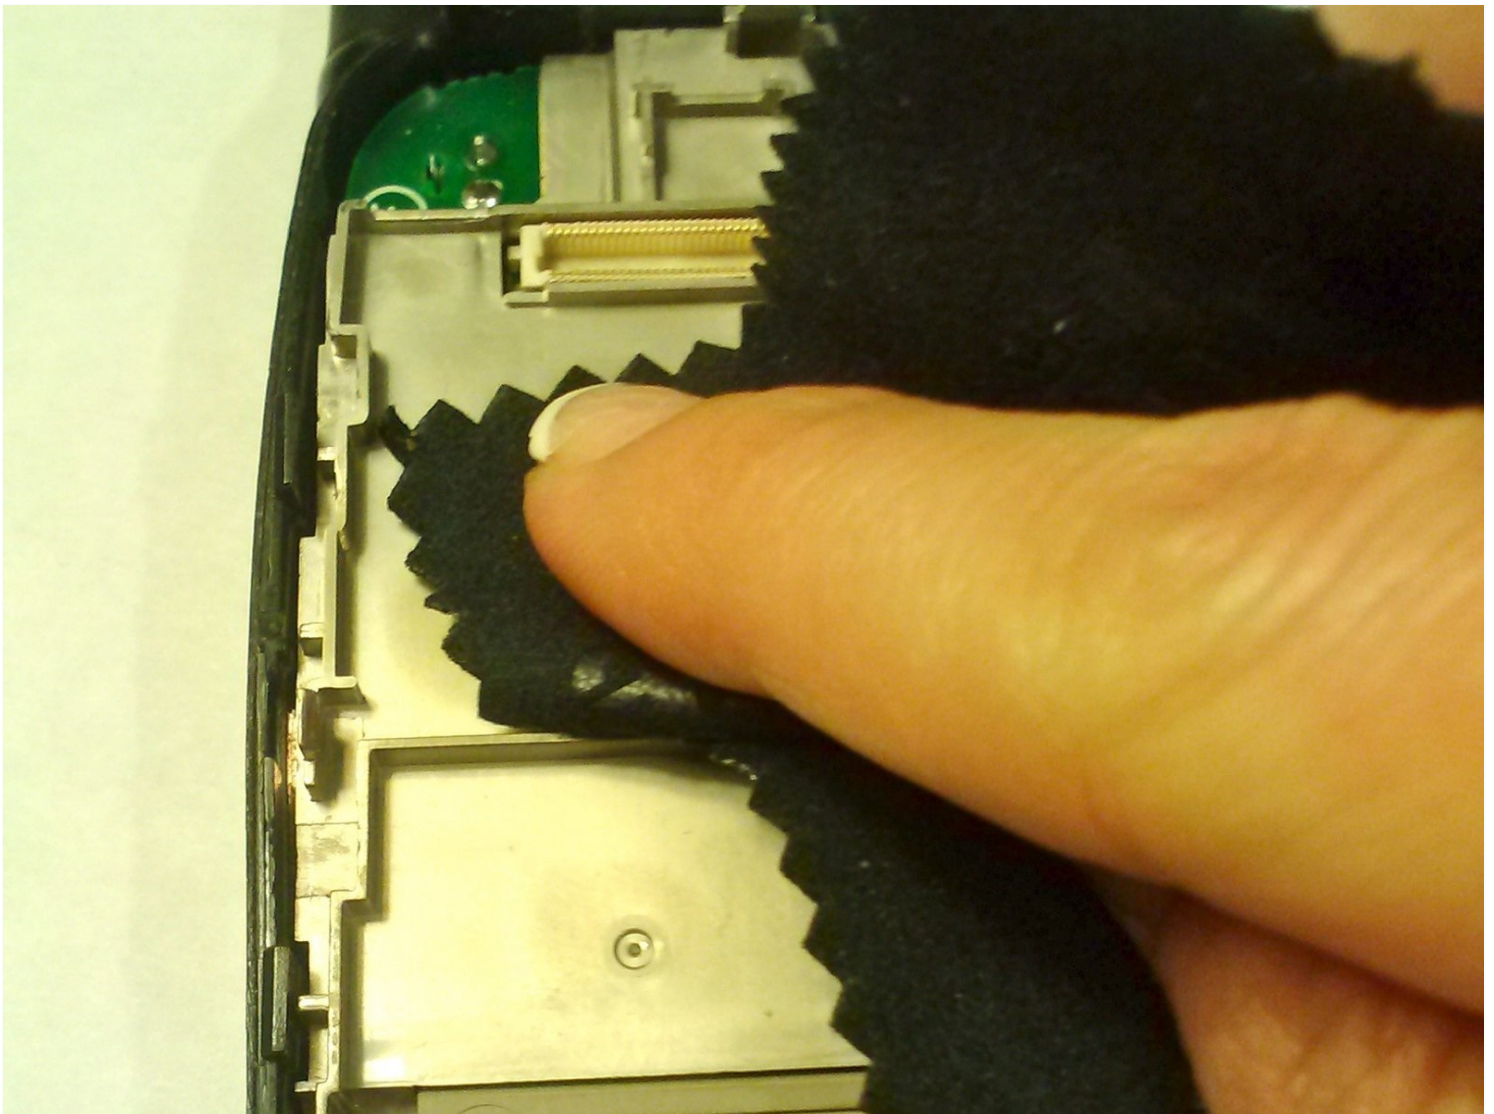


INTRODUCTION

The Audiovox was released in December 1998. This a how to guide on cleaning the Audiovox.

TOOLS:



Pair of tweezers and a tooth brush (1)

Step 1 — How to clean a Audiovox CDM 9000

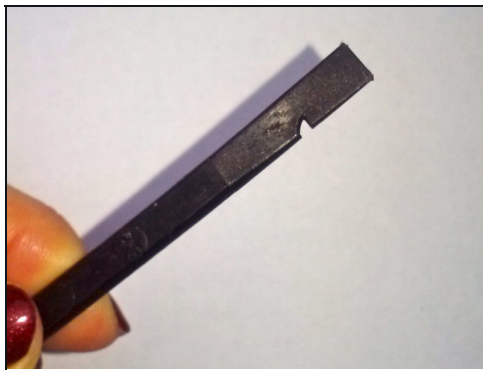



- Place the device so the screen is facing up.
- Use a spudger tool to pry apart the phone. It may be a little difficult to pry open. Use the flat part of the spudger tool and go all around the phone.

Step 2

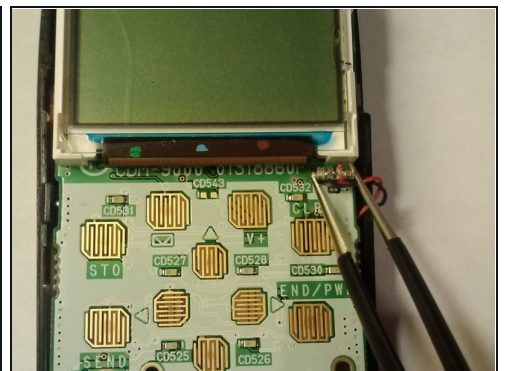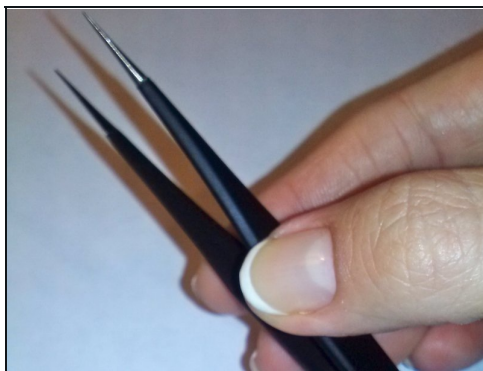


- Using the pointer end of the spudger, go around the phone prying apart the Intel piece.
- Use some tweezers to pull out the little plastic piece with the black and red wires. Now you can completely remove the Intel piece.

Step 3

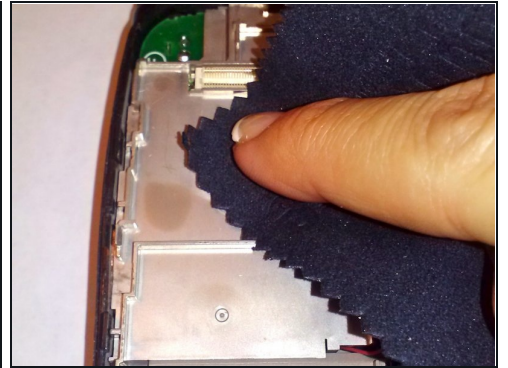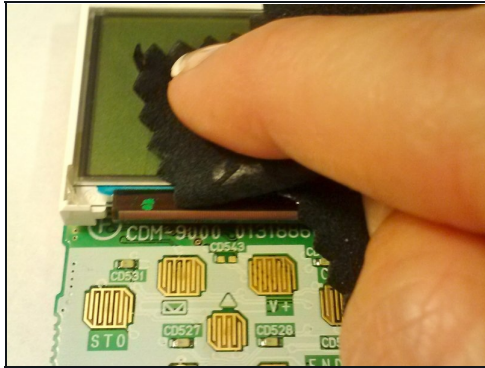

- Use a screen and device cleaner to wiping down the device.
- Use screen cleaning spray, and a [microfiber](#) type cloth. These will not scratch the screen.

Step 4

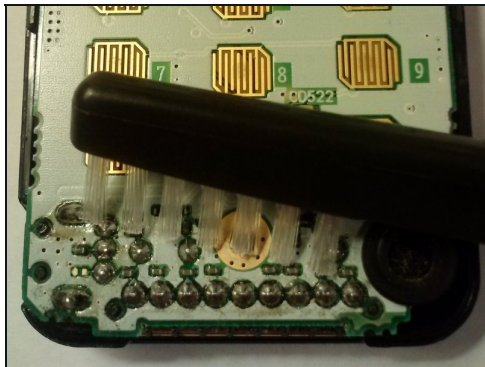

- Use a brush, like a tooth brush.
- Go over the device with the brush to get into the places you cannot reach with your hands/fingers.

To reassemble your device, follow these instructions in reverse order.