




Sony Xperia U Headphone Jack Replacement

This guide will show how to replace the Headphone jack when it needs to be changed.

Written By: Bader

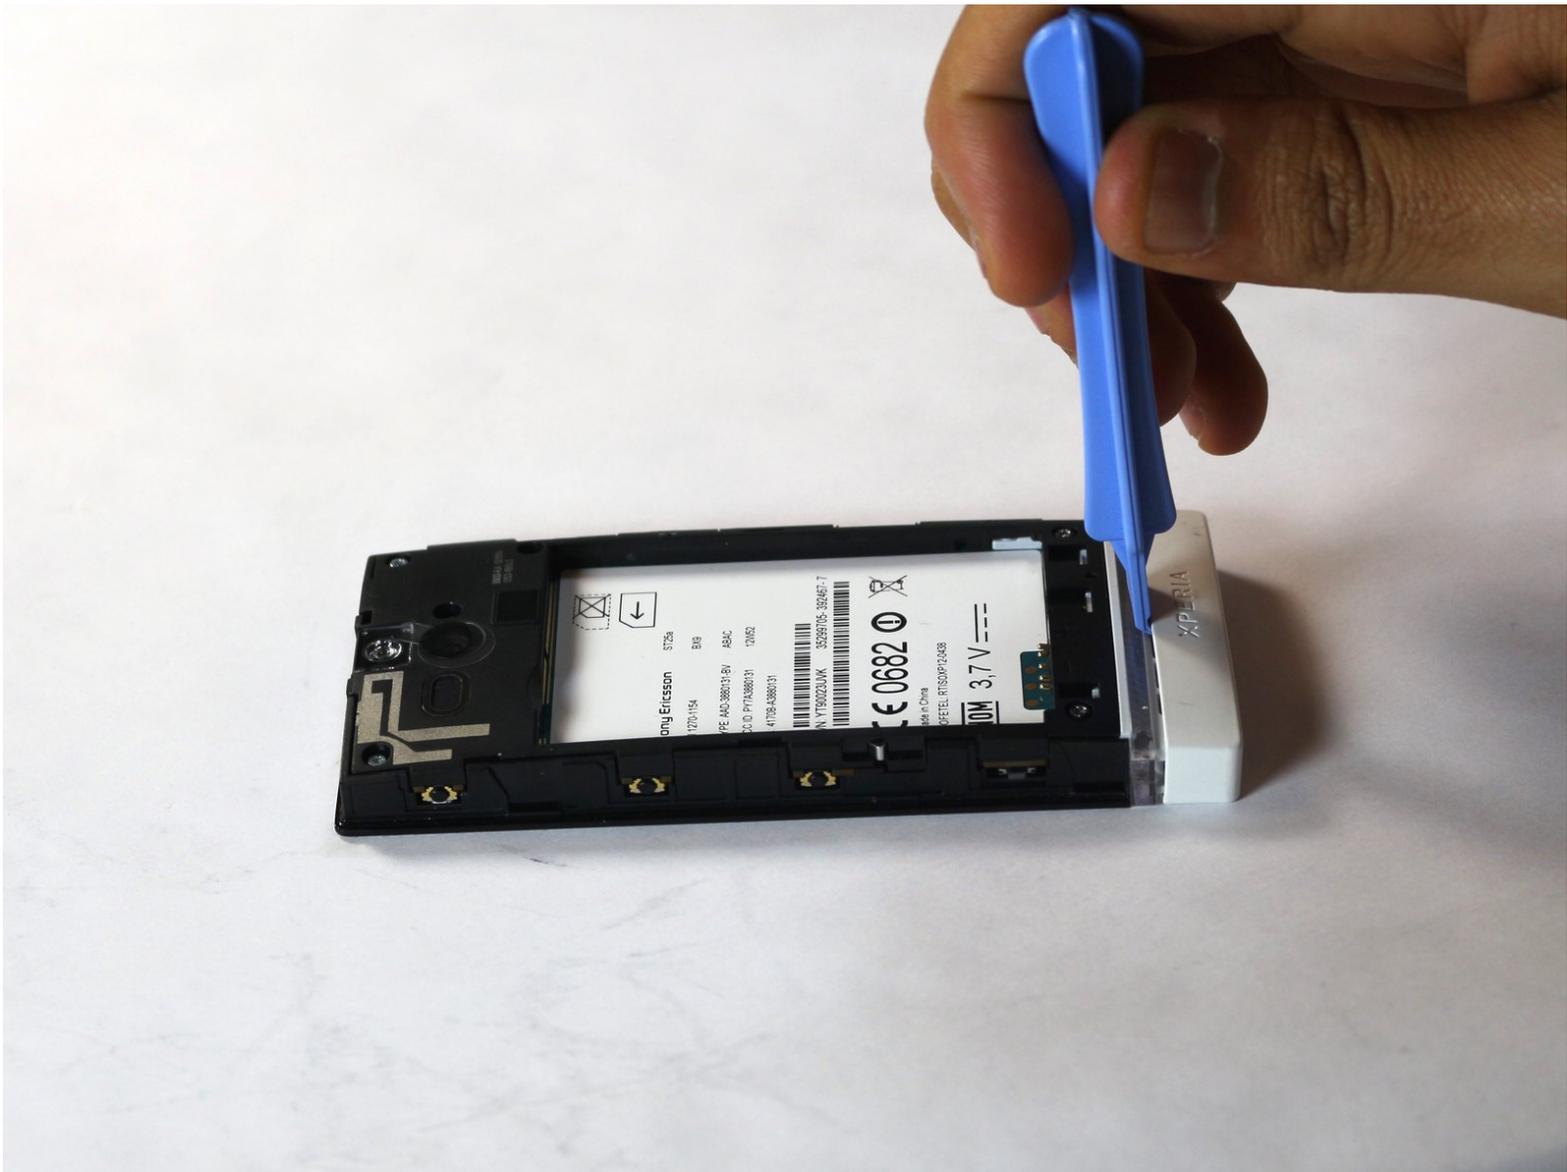


INTRODUCTION

If your phone's earphone jack is not working properly, follow these steps to assist you in replacing the headphone jack.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Battery

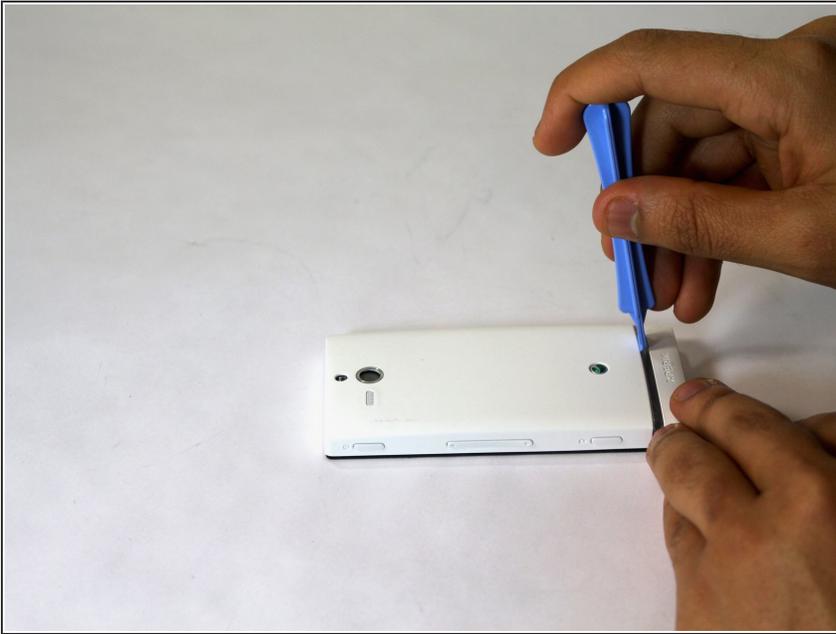


- Set the phone screen down on a clean flat, surface.
- Insert the plastic opening tool into the groove located between the body of the phone, and the back plate protecting the battery.
- Open the back of the device by prying around the sides of the back panel using the plastic opening tool.

Step 2



- Insert the plastic opening tool in between the battery and the phone body.
- Pry up on the side of battery, and remove it.

Step 3 — Headphone Jack

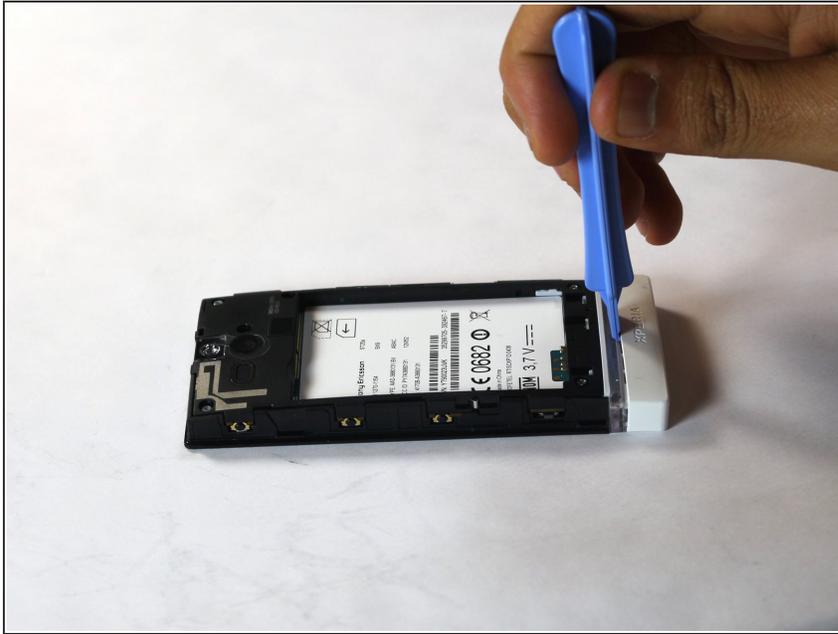


- Insert the plastic opening tool in between the white plastic cover, and the body of the phone.
- Pop the plastic cover off. To do this, gently push forward on the plastic opening tool while it is in between the cover and the phone.

Step 4




- Remove the six size 0 Phillips screws.

Step 5

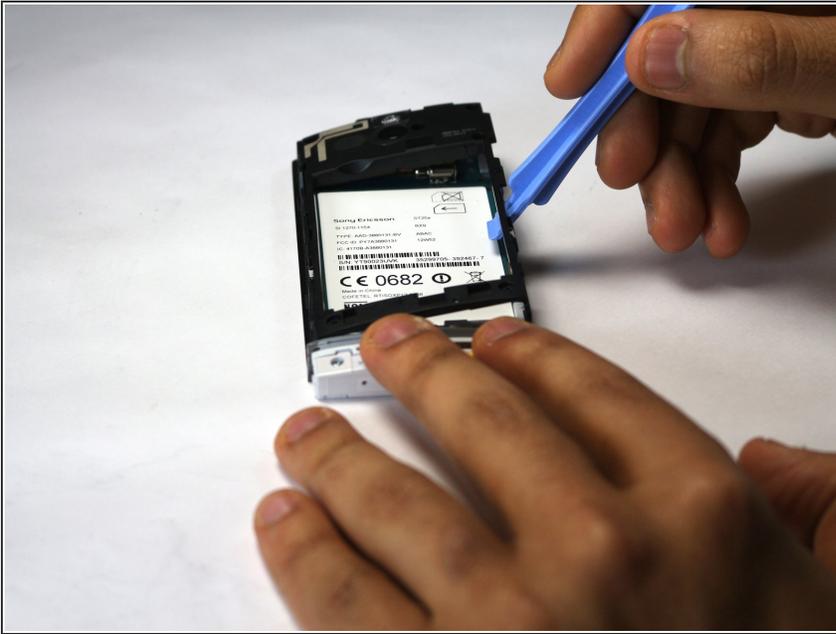

- Insert the plastic opening tool in between the body of the phone and the thin plastic back cover.
- Lift the black back cover off of the body with the plastic tool.

Step 6

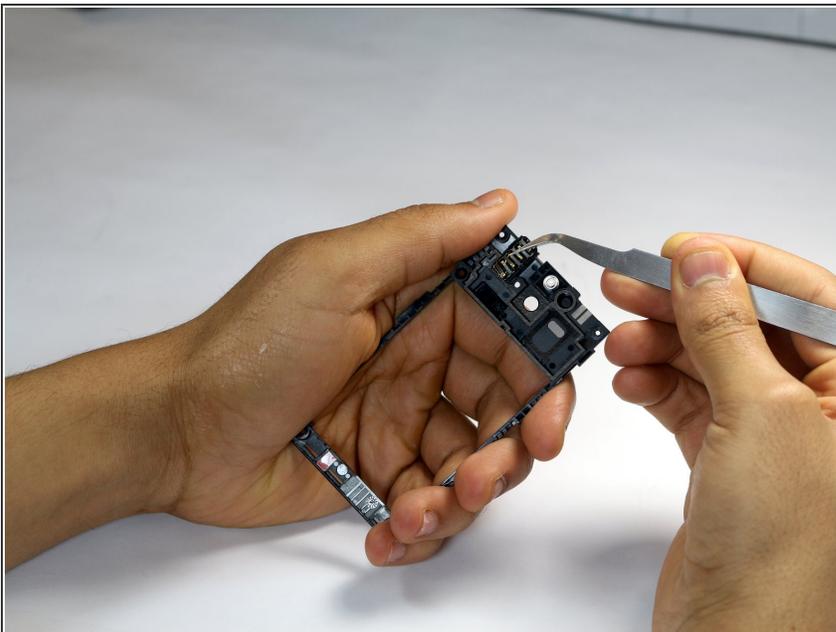

- Locate the earphone jack on the top left of the black plastic back cover.
- Use the tweezers to pinch the earphone jack and remove it from the back cover.

To reassemble your device, follow these instructions in reverse order.