



LG Optimus Dynamic II L39C Battery Replacement

Correctly open the back case and remove the battery for replacement.

Written By: Stephanie Reyes



INTRODUCTION



For replacing your battery or troubleshooting your phone.




TOOLS:

- [iFixit Opening Tools](#) (1)
-

Step 1 — Remove the back case

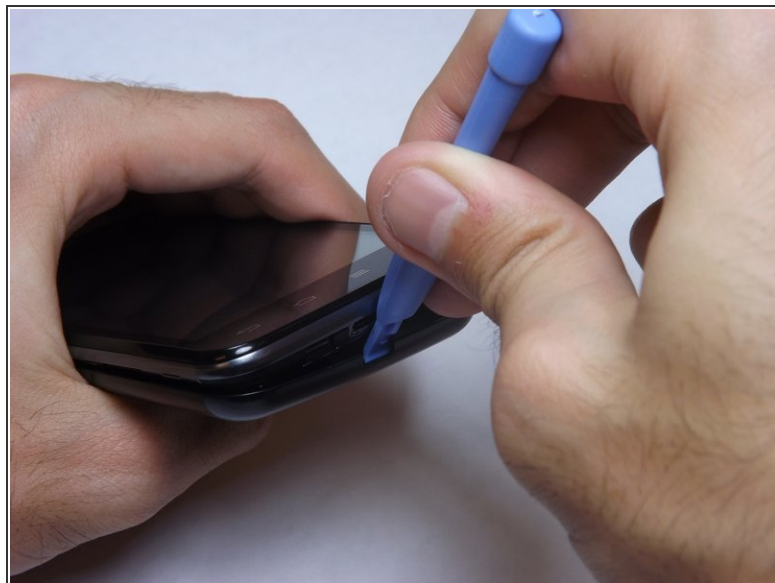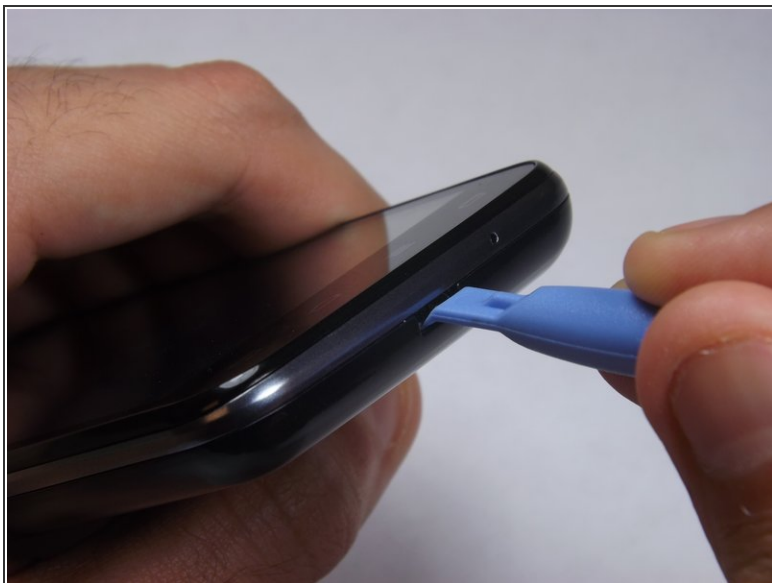

 Make sure not to push the tool into the USB port. Doing so may cause damage to your phone.

- Hold the blue plastic opening tool at the edge of the USB opening. Push down and pry the case off the phone gently.

Step 2 — Remove the Battery



- Lift the battery out of the phone and replace with your new one.

To reassemble your device, follow these instructions in reverse order.