




# iPhone 6 Plus Audio Control and Rocker Switch Cable Replacement

Prereq only for rear case.

Written By: Walter Galan

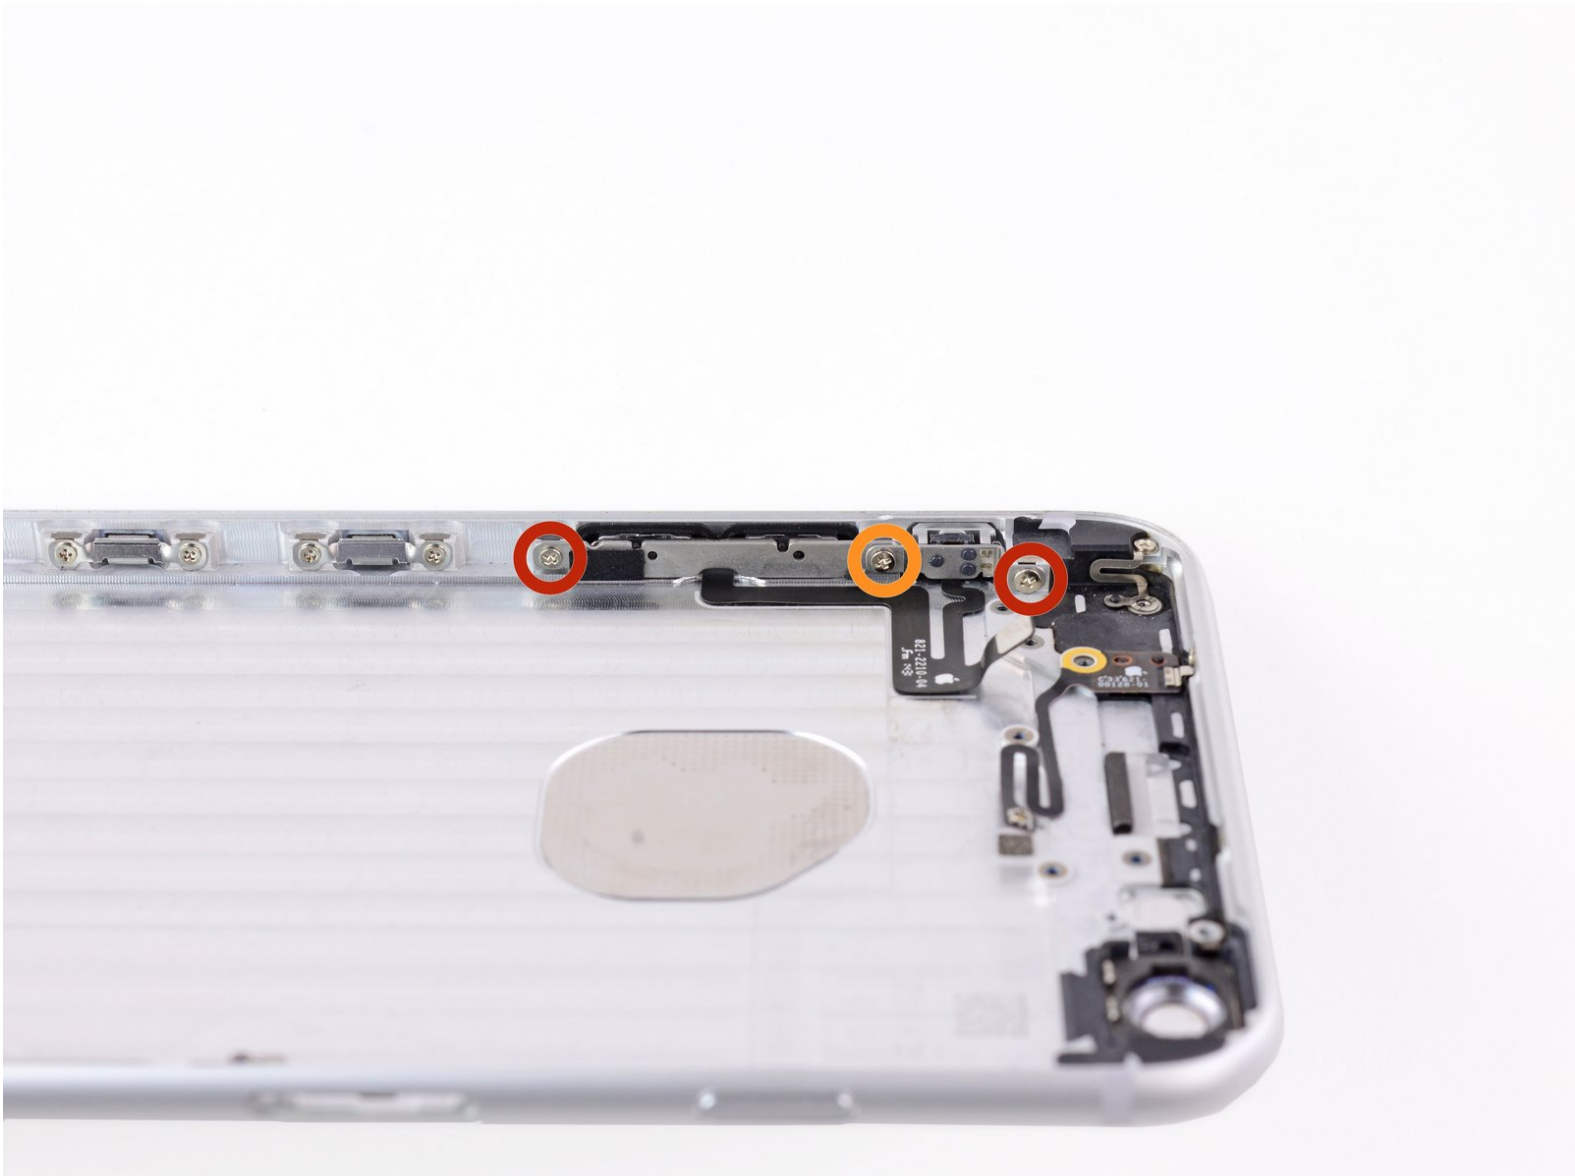

---

## INTRODUCTION


Prereq only for rear case.



### TOOLS:


- [Phillips #000 Screwdriver](#) (1)
  - [Tweezers](#) (1)
-

## Step 1 — Audio Control and Rocker Switch Cable

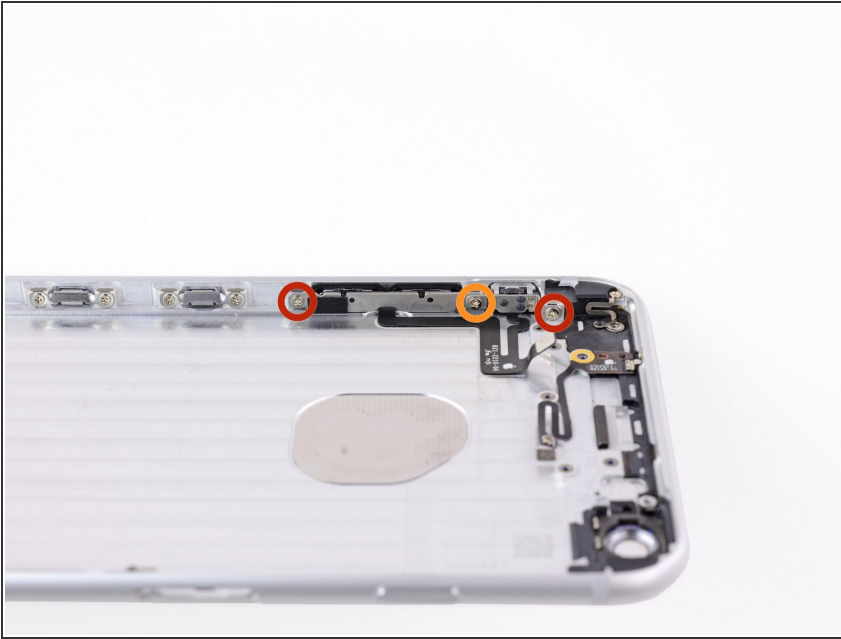

- Remove the following screws securing the audio controls and rocker switch to the rear case:
  - Two 2.0 mm Phillips #00 screws
  - One 2.5 mm Phillips #00 screw

## Step 2

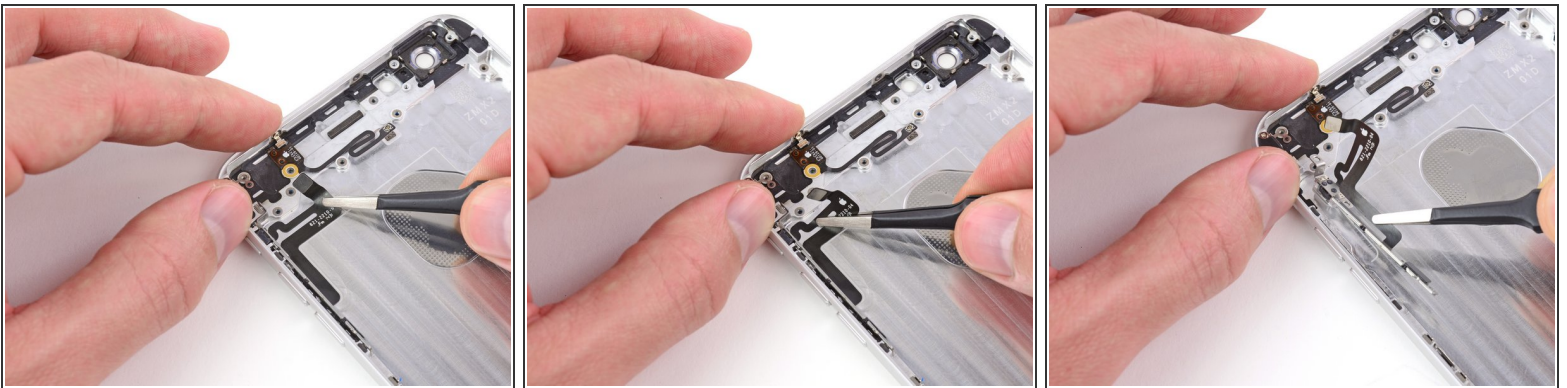

- Grasp the audio control and rocker switch cable with a pair of tweezers.
- Slowly peel the audio control and rocker switch cable up off the rear case.

 Peel with care. The cable is secured to the rear case with mild adhesive.

To reassemble your device, follow these instructions in reverse order.