



# Nerf N-Strike Maverick Chamber Replacement

This guide will help you figure out what steps you need to take in order to replace the chamber of your Nerf gun.

Written By: Sam Preston



---

## INTRODUCTION

Once you have gotten to step 7 of the [tear down guide](#) you're ready to replace the chamber of the gun.



### PARTS:


- [A replacement chamber](#) (1)
-

## Step 1 — Releasing the Chamber



- Use your fingers to grasp the orange circle piece that's in direct contact with a small device protruding from the chamber of the gun, and slide the circle towards the trigger.
- Move the chamber slightly so that the orange piece no longer connects to the chamber.

## Step 2

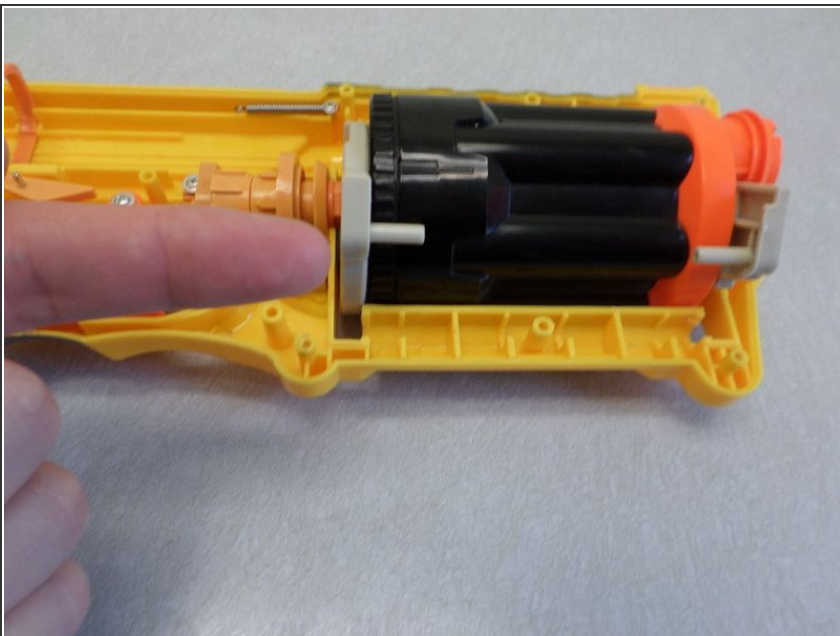

- Release the two tan sticks from the holes that they are placed by sliding them upwards.

### Step 3



- Once you have released the tan sticks, and pulled back on the orange circle, the tension should release the chamber making it easily removable.

To reassemble your device, follow these instructions in reverse order.