




Samsung Galaxy S4 Active Battery Replacement

Learn how to replace the battery.

Written By: Josh Forester

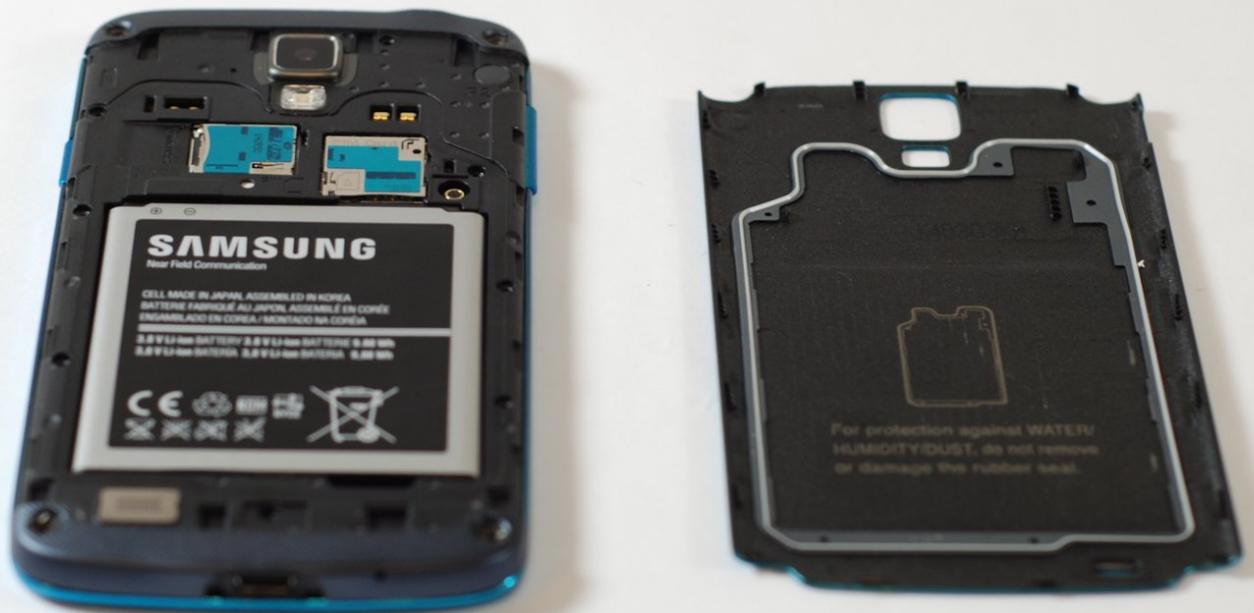

INTRODUCTION

Use this guide to replace a worn-out or defective battery on your Samsung Galaxy S4 Active.

If your battery is swollen, [take appropriate precautions](#).

TOOLS:

- [iFixit Opening Tools](#) (1)
-

Step 1 — Rear Case



- Pry with a plastic opening tool, or your fingernail, in the divot to the left of the rear-facing camera, near the power button.
- Lift the rear case by the corner nearest the divot and remove it from the phone.

Step 2 — Battery



- Insert a plastic opening tool, or your finger, into the notch of the battery compartment and lift the battery upward to remove it.

To reassemble your device, follow these instructions in reverse order.