



Parrot AR.Drone 2.0 Propeller and Gear Replacement

Use this guide to replace, propellers, shafts, and gears on a Parrot AR.Drone 2.0.

Written By: David Hoyt



INTRODUCTION

Use this guide to replace, propellers, shafts, and gears on a Parrot AR.Drone 2.0.

AR.Drone 2.0 spare parts and mounting tools are available from [several Parrot retailers](#).

[video: <http://youtu.be/Qx01V37QbnY>]

TOOLS:


- [iFixit Opening Tools](#) (1)
-

Step 1 — Propeller and Gear



- Remove the foam body.

Step 2

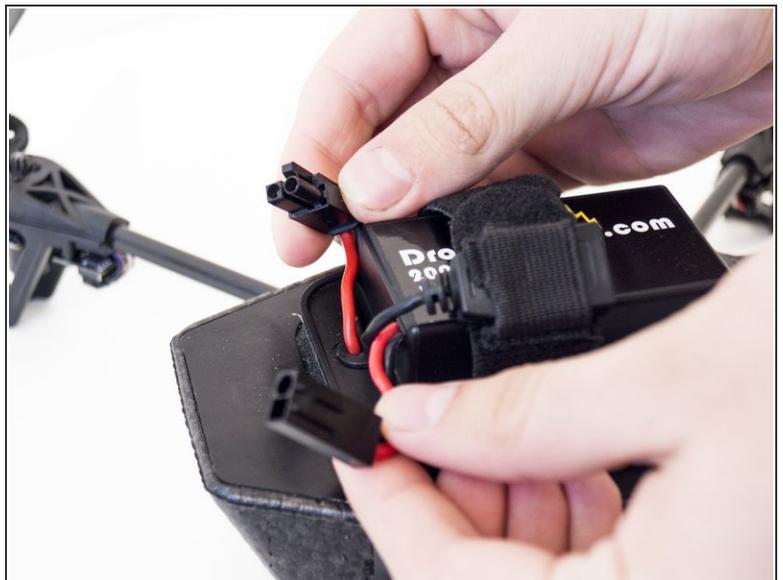

- Disconnect the battery by pulling the two red wires apart.
- Remove the battery by releasing the battery retaining straps.

Step 3



- Remove the small retaining clip using a plastic opening tool.
- ⓘ Be careful as these clips can fly off and can be difficult to find.

Step 4



- The propeller, gear, and rod can be removed by simply lifting them off the motor.

To reassemble your device, follow these instructions in reverse order.