



Ematic Model FTABMP2 Screen Replacement

If your Ematic Model FTABMP2 has a cracked or...

Written By: Timothy



INTRODUCTION

If your Ematic Model FTABMP2 has a cracked or damaged screen, refer to this guide to learn how to replace it. The screen on this device is a Full 4.3 LCD Screen Display with Touch Screen Digitizer Glass Panel.

Make sure your device is powered off before you begin.

TOOLS:


[iFixit Opening Tool](#) (1)

Step 1 — Screen




- Gently insert the blue spudger in between the two sections of the tablet and go around breaking the glue seal.
- Gently take off the back side of the tablet.

Step 2

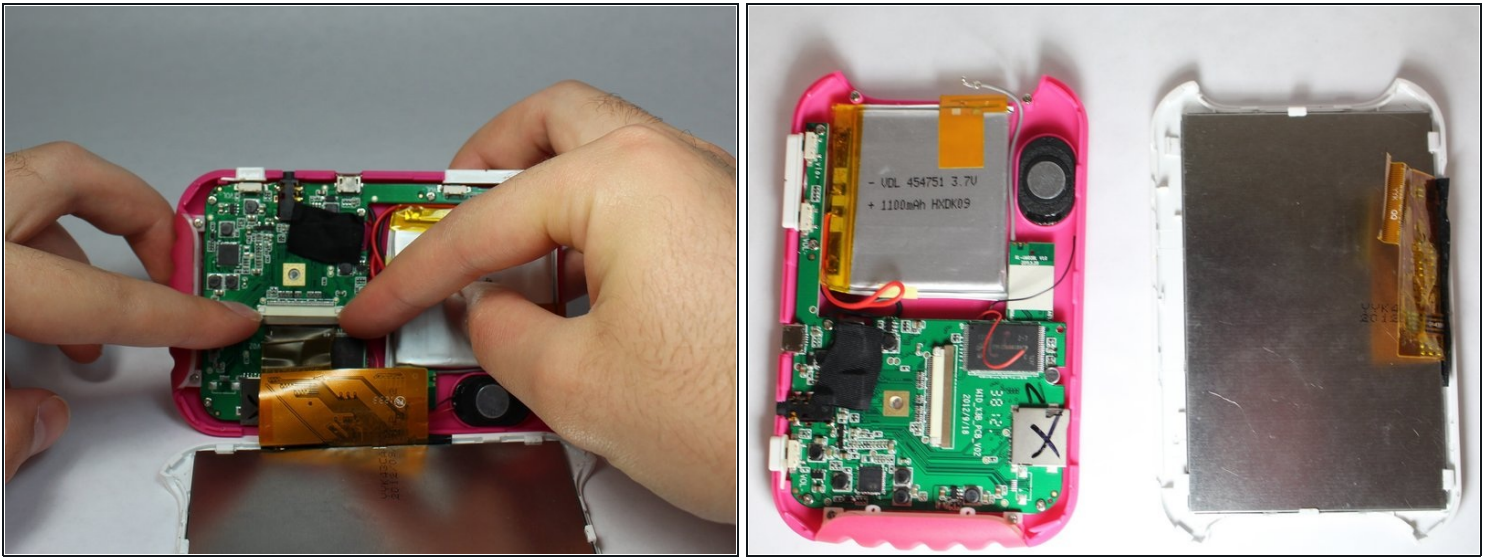

- Locate the light grey clamp on the motherboard and gently use two index fingers to disconnect the black LCD cable from the motherboard.

Step 3

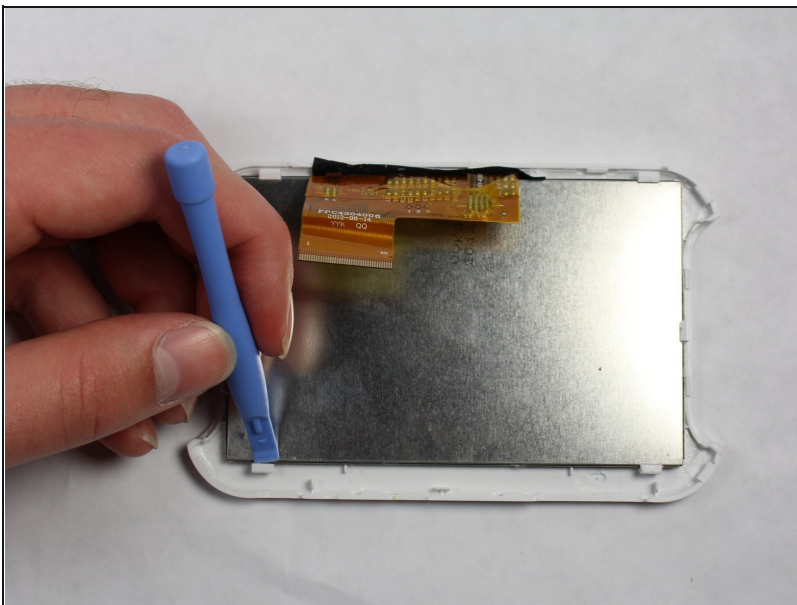

- Gently press on the white clamp using the blue spudger to remove the metal panel.

To reassemble your device, follow these instructions in reverse order.