



ASUS MeMo Pad FHD10 Battery Replacement

This guide is for battery's replacement. The...

Written By: Dmitry



INTRODUCTION



This guide is for battery's replacement. The guide follows a step-by-step sequence to take out the back panel, unplug cables and replace the batter. The battery type is 6760mAh Li-polymer with 10 hours battery life.



TOOLS:

- [iFixit Opening Tool](#) (1)
 - [Tweezers](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
-



Step 1 — Battery

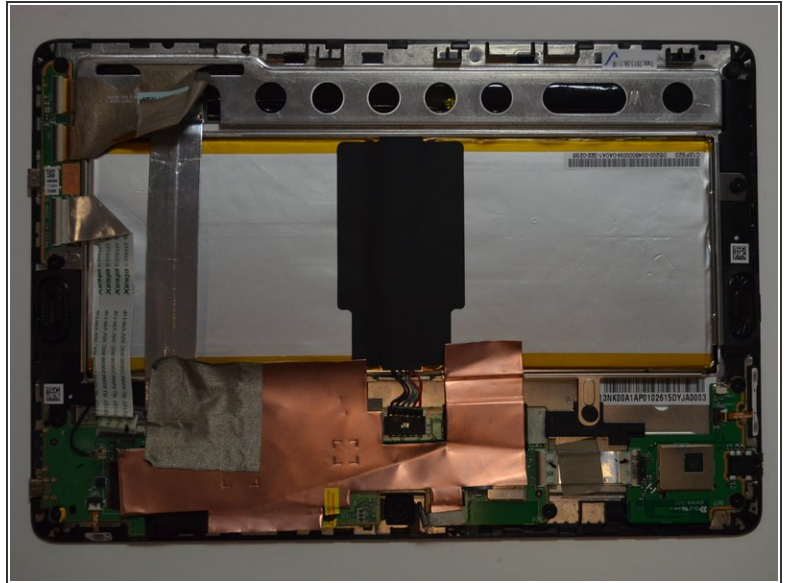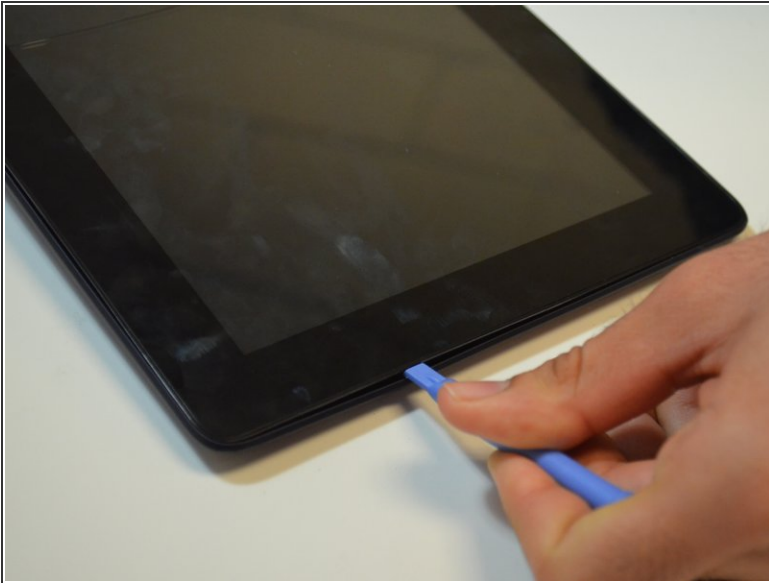

⚠ Make sure that the device is turned off as a precaution.


- Unplug the charger and remove any memory card you may have in the device.
- Wedge the plastic opening tool between the front and back cover on every side.
- Slide the plastic opening tool back and forth to make sure that the back cover is disconnected.
- Once disconnected, remove the back cover from the device screen.

Step 2

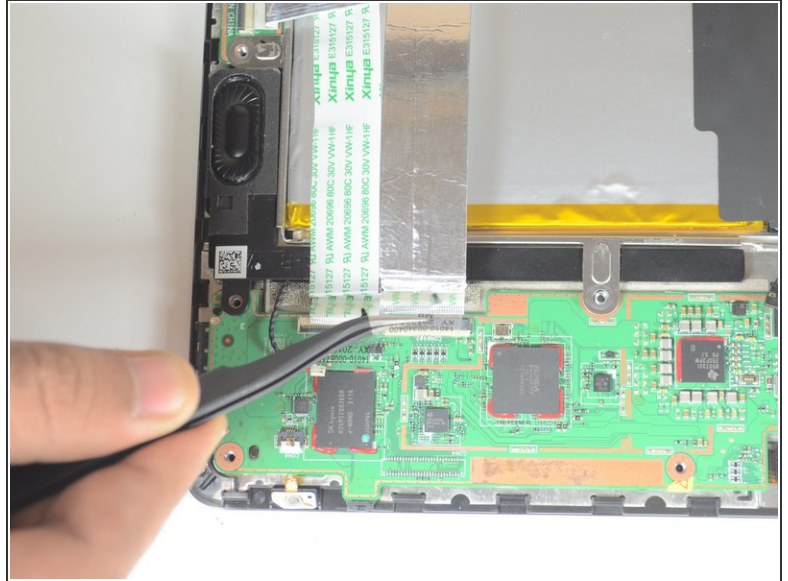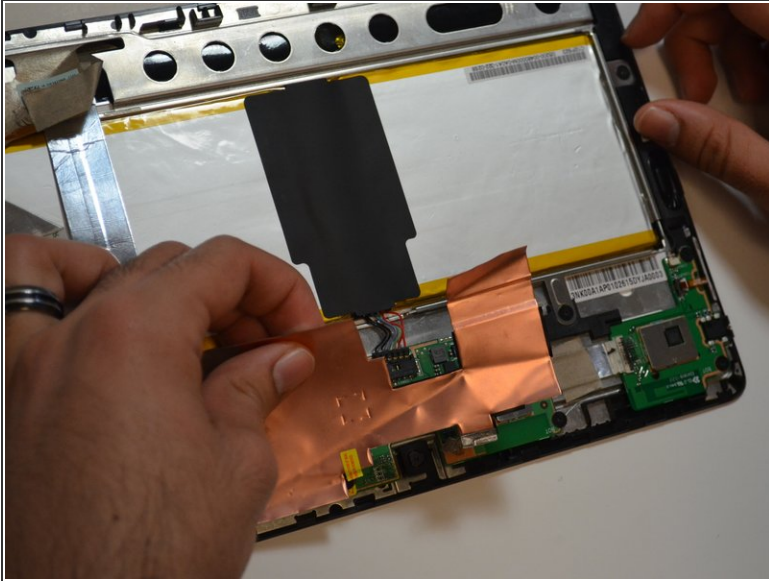

- Remove the protective copper sticker and all tape fixed on the device.
 - Using tweezers, remove the ribbon cable from their connections attached to the motherboard.
- ⚠ While using the tweezers, make sure to use minimum force and precision to avoid damaging any components.



Step 3

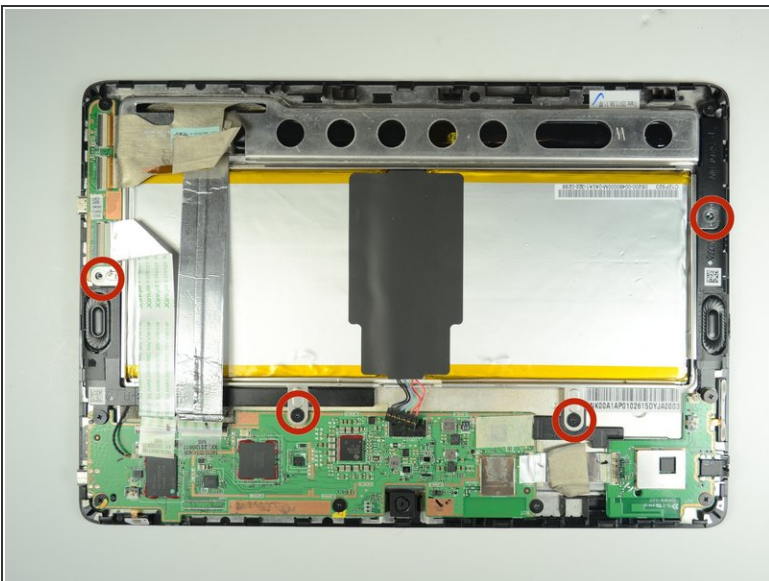

- Remove the four 2 mm Phillips #00 screws holding the battery tray in place.

This document was generated on 2023-01-28 01:17:12 AM (MST).

Step 4

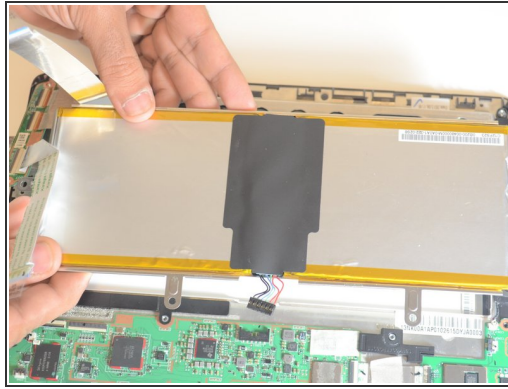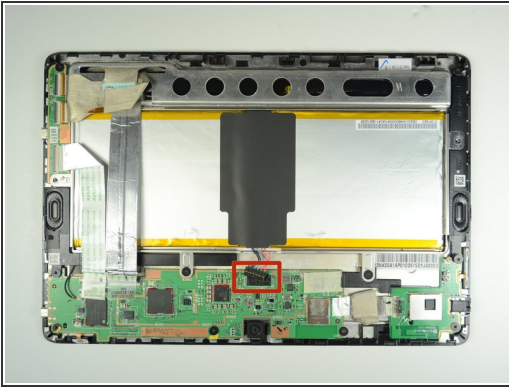

- Locate the battery cable attached to the motherboard. Using the same technique used on the ribbons, do the same with the battery.
- Remove the battery from the device. Once removed, use the plastic tool to separate the metal frame from the battery.
- ⓘ When separating the metal frame, be sure to hold on in the center as the battery is two separate cells.

To reassemble your device, follow these instructions in reverse order.