




HP ZBook 15 Hard Drive Disassembly

Prerequisite Only

Written By: Grant Terris

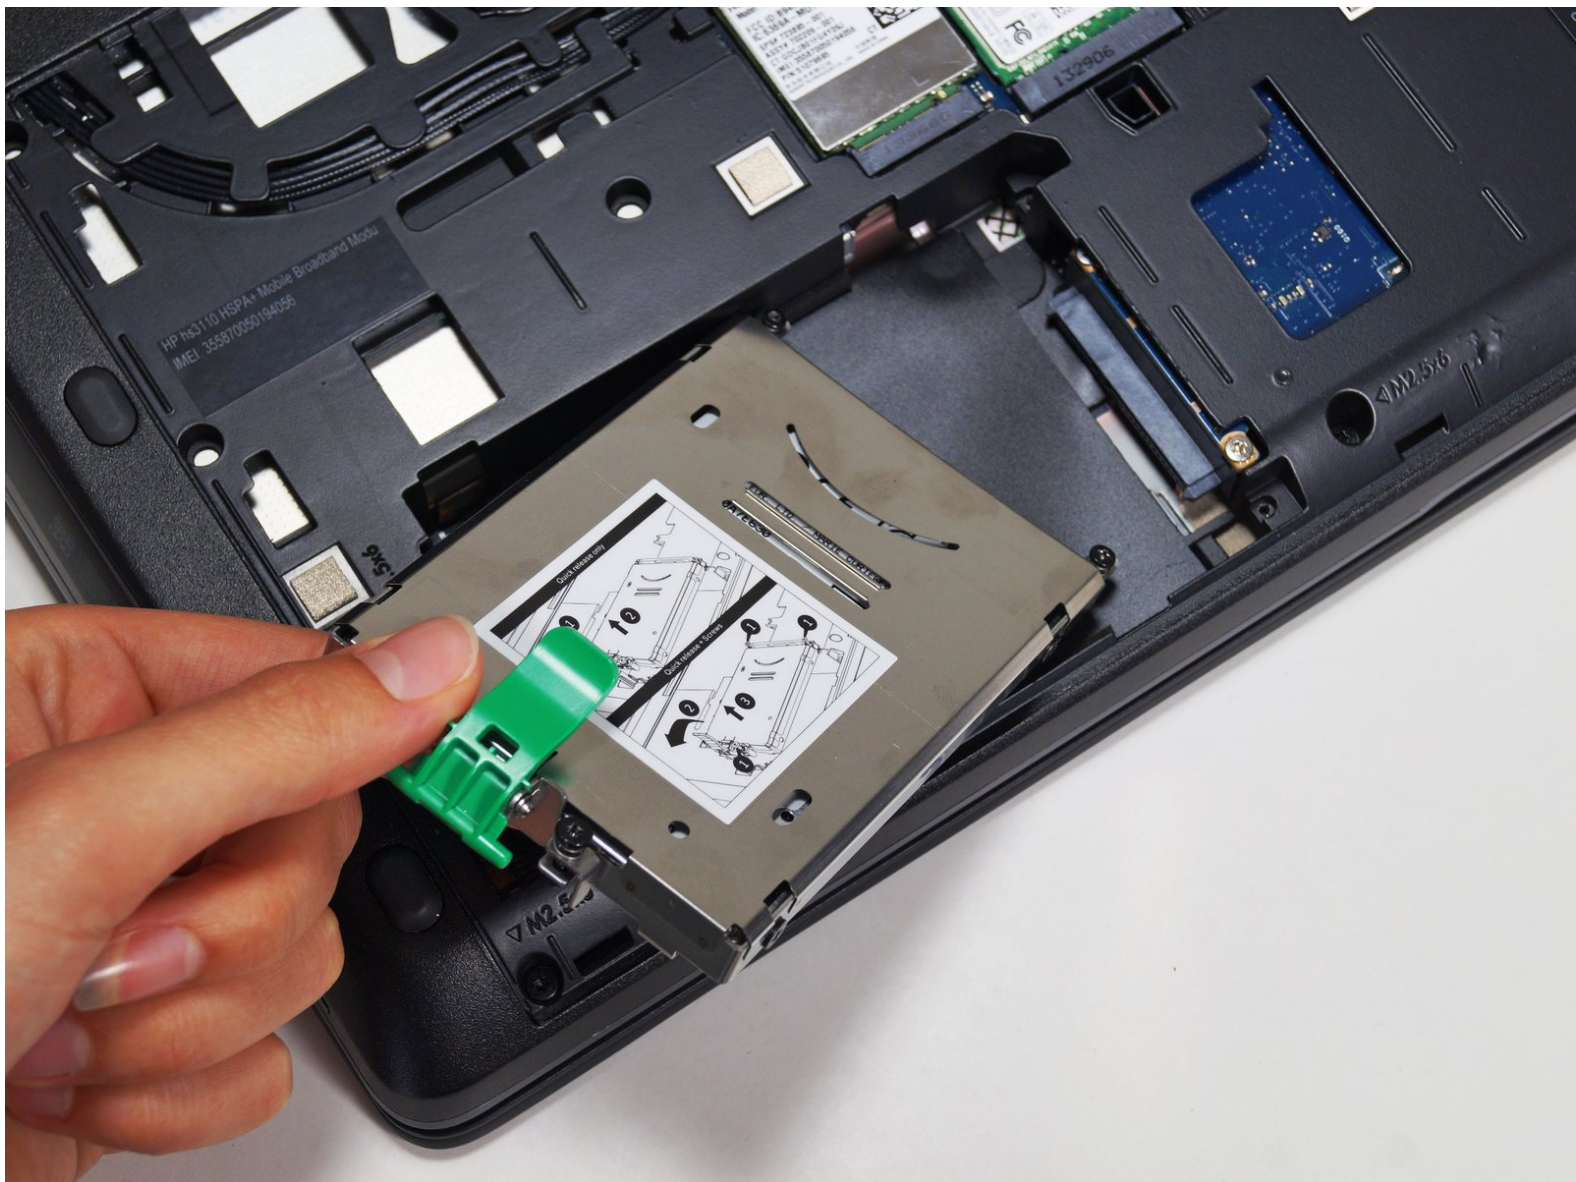

INTRODUCTION

Prerequisite Only



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Battery



- Flip the laptop over.
- Slide the lever with the battery symbol beside it firmly until the battery pops out.
- Remove the battery from the laptop.

Step 2 — Back Cover




- Slide the right lever firmly to the right.
- Slide the cover towards yourself to remove it.

Step 3 — HP ZBook 15 Hard Drive Disassembly



- Unscrew the three captive screws holding the drive in place with a Phillips #0 screwdriver.
- ❗ The screws will remain inside the springs of the hard drive caddy cover.

Step 4

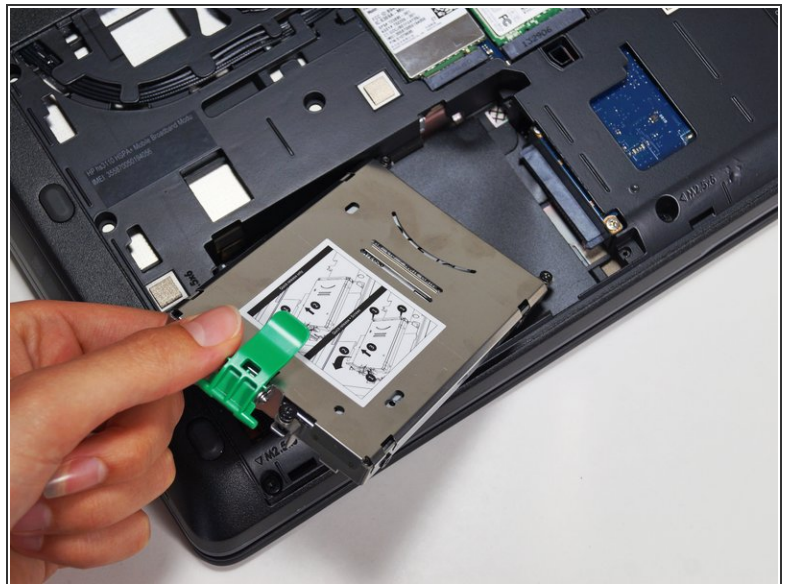

- Pull the green tab away from the metal casing and lift the drive out.

To reassemble your device, follow these instructions in reverse order.