




# Acer Aspire V5-571 Optical Drive Replacement

Acer Aspire V5-571 Optical Drive Replacement

Written By: ZFix

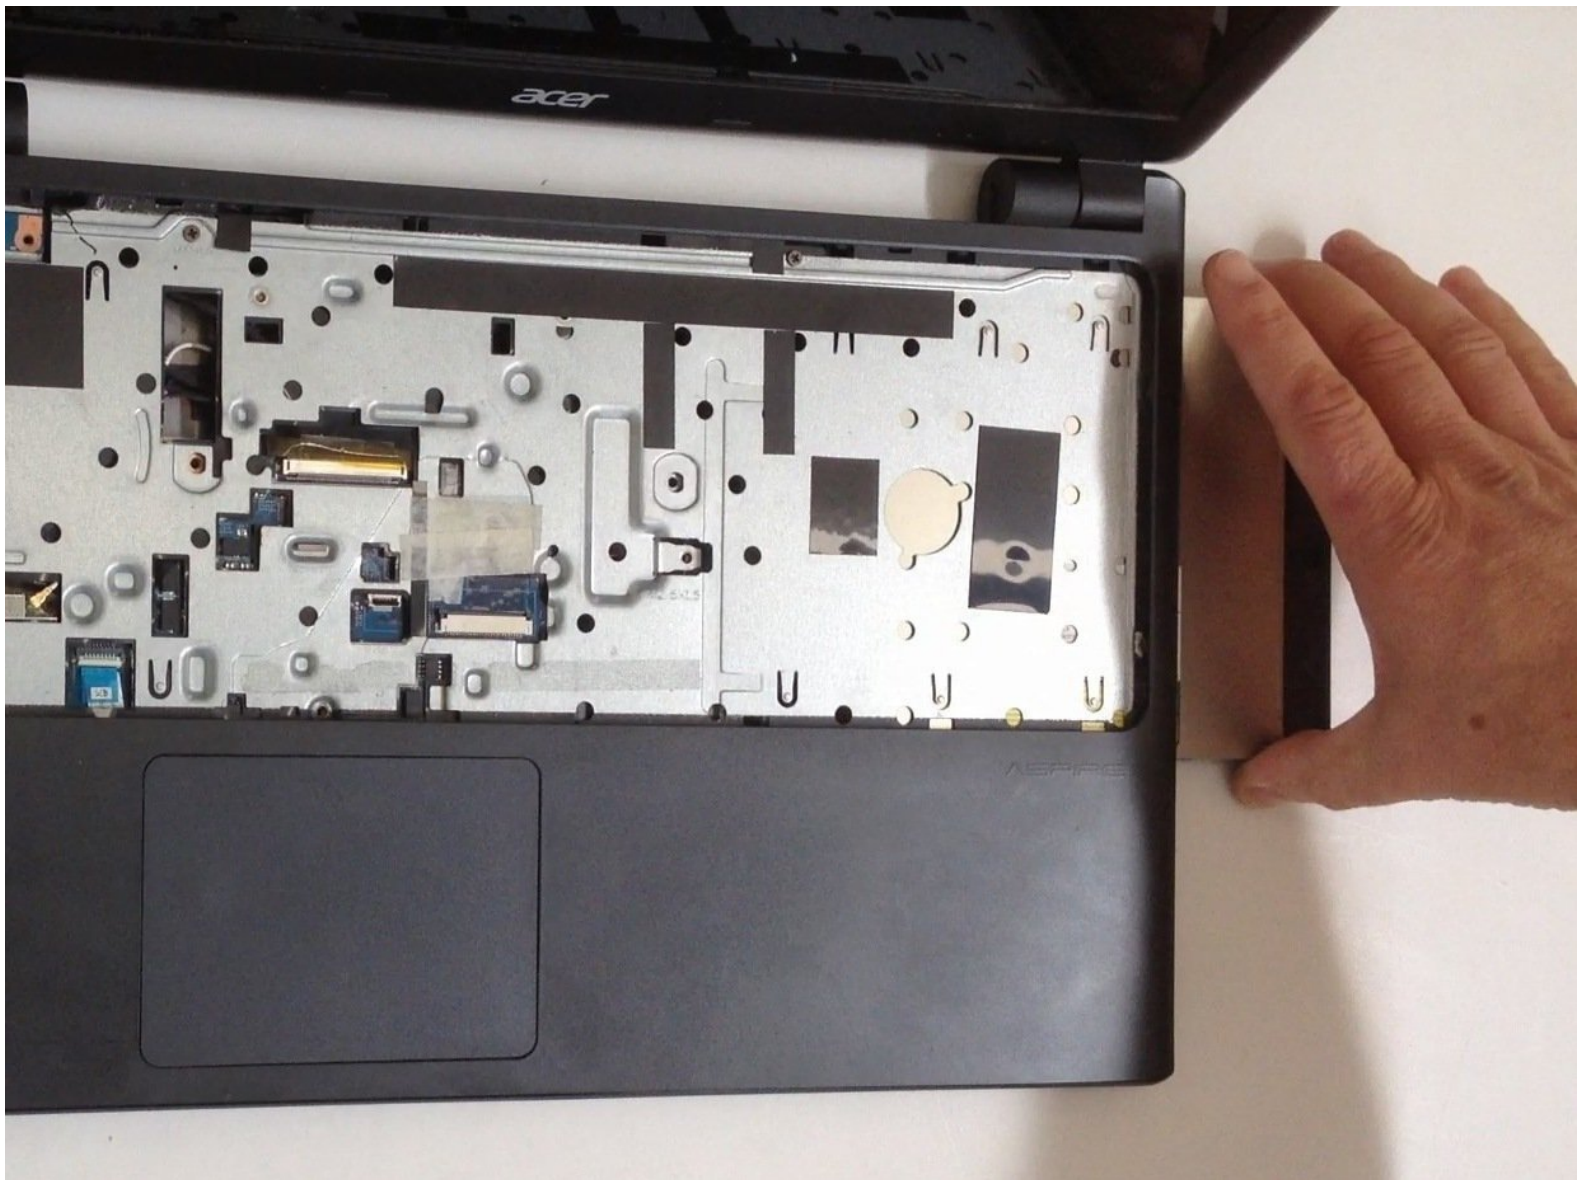

---

# INTRODUCTION

Optical drive replacement.


[video: <http://youtu.be/mrKPisD7H0U>]



## TOOLS:


- [Phillips #0 Screwdriver](#) (1)
  - [Spudger](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Keyboard

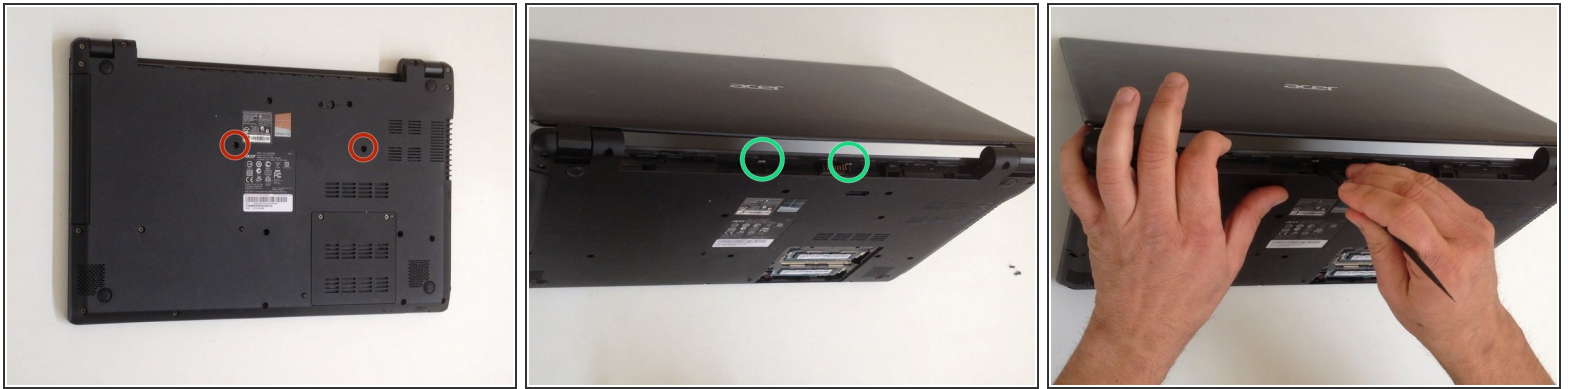

- Turn off the laptop and remove the battery.
- Remove two screws securing the Keyboard.
- The Keyboard is held by two locking clips, under the battery. Use the sharp tip of a plastic tool to release the keyboard.

## Step 2

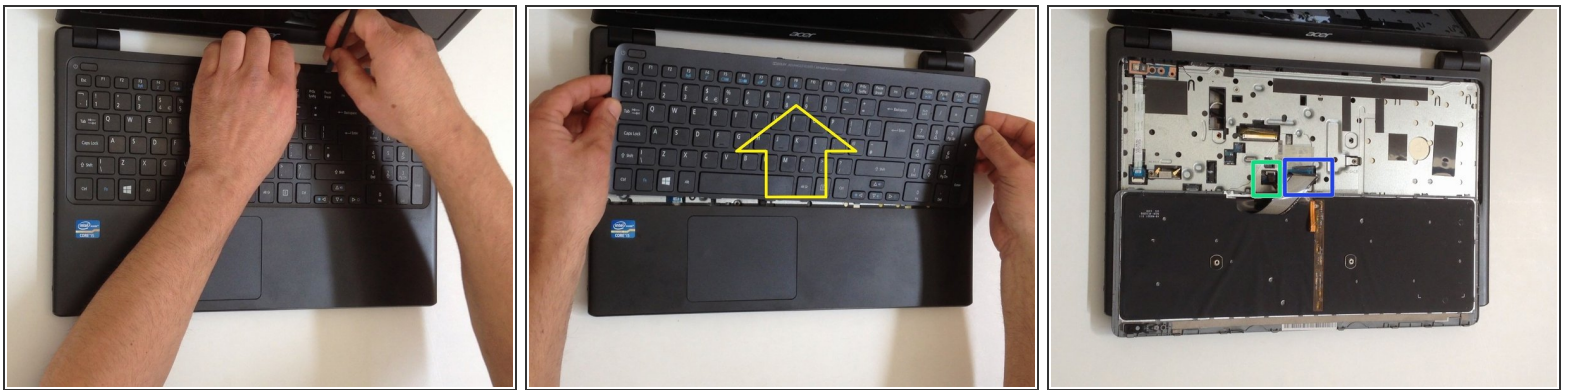

- Remove the Keyboard and disconnect the two flex cables:
  - Keyboard flex cable
  - Keyboard Light flex cable



[Please SUBSCRIBE to my channel ツ](#)

## Step 3 — Optical Drive



- Remove the screw securing the Optical drive and gently press the drive to show slightly as at the second pic.
- Slide the drive to the left and remove it.

To reassemble your device, follow these instructions in reverse order.