


Nokero N400 Suction Cup Replacement

In this guide we walk you through the steps in replacing the suction cup on your Nokero N400.

Written By: Daniel Bumiller

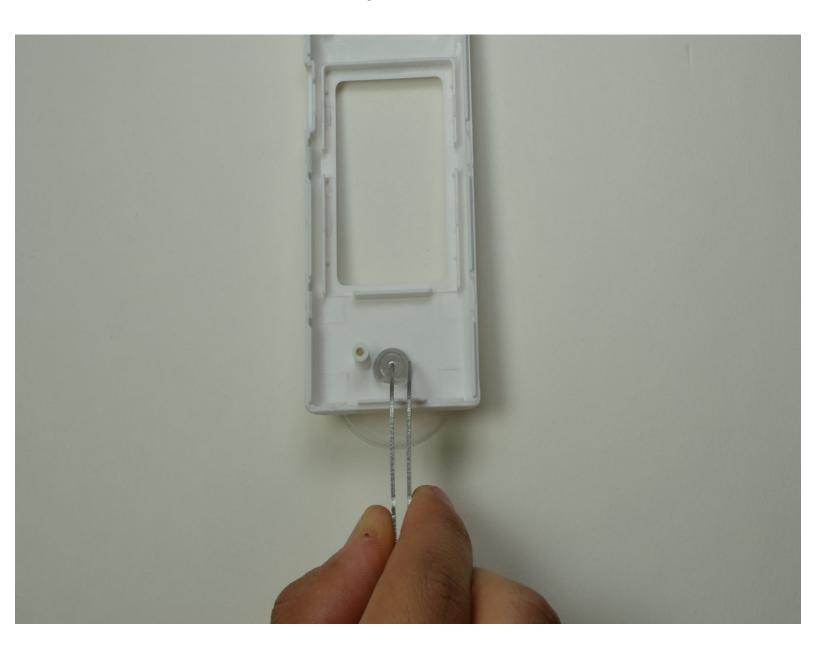


INTRODUCTION

If the suction cup no longer sticks to surfaces or if the plastic has split, you will need to replace the suction cup with a new one.



Step 1 — Remove Battery Cover



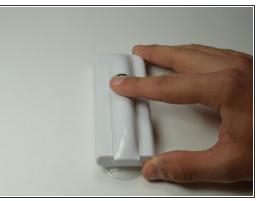



Guide ID: 36624 - Draft: 2018-01-29

- Press down firmly to remove the battery cover and display battery.
- Then remove the battery.


Step 2 — **Unscrew Back Cover**






Remove the 7mm Phillips #1 screw.


Step 3 — Pry Open Back Cover

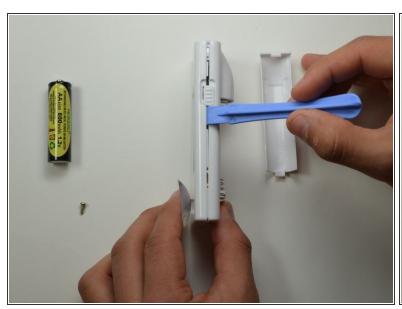

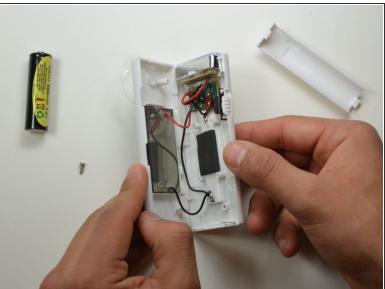

- Place the plastic opening tool in between the two plastic panels and slowly work your way around the device.
- Unlatch the clips on the inside and pull device apart.
- (i) Some clips will break when forced open.


Step 4 — Begin Removal

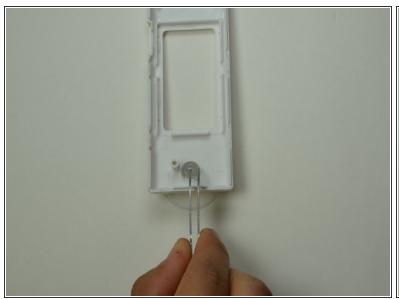



Using tweezers, push the edges of the back end of the suction cup inward.

Step 5 — Remove Suction Cup

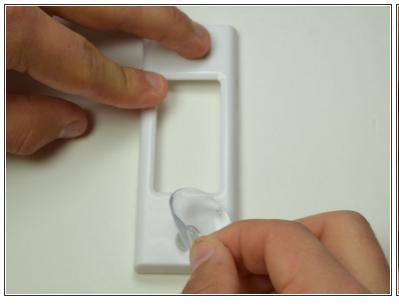



- Flip the cover over and remove the suction cup by pulling at an angle.
- Be careful not to tear the plastic housing.
- During reassembly, make sure to press down uniformly on the suction cup for an even fit.

To reassemble your device, follow these instructions in reverse order.