




Nokero N400 Suction Cup Replacement

If the suction cup no longer sticks to surfaces...

Written By: Daniel Bumiller

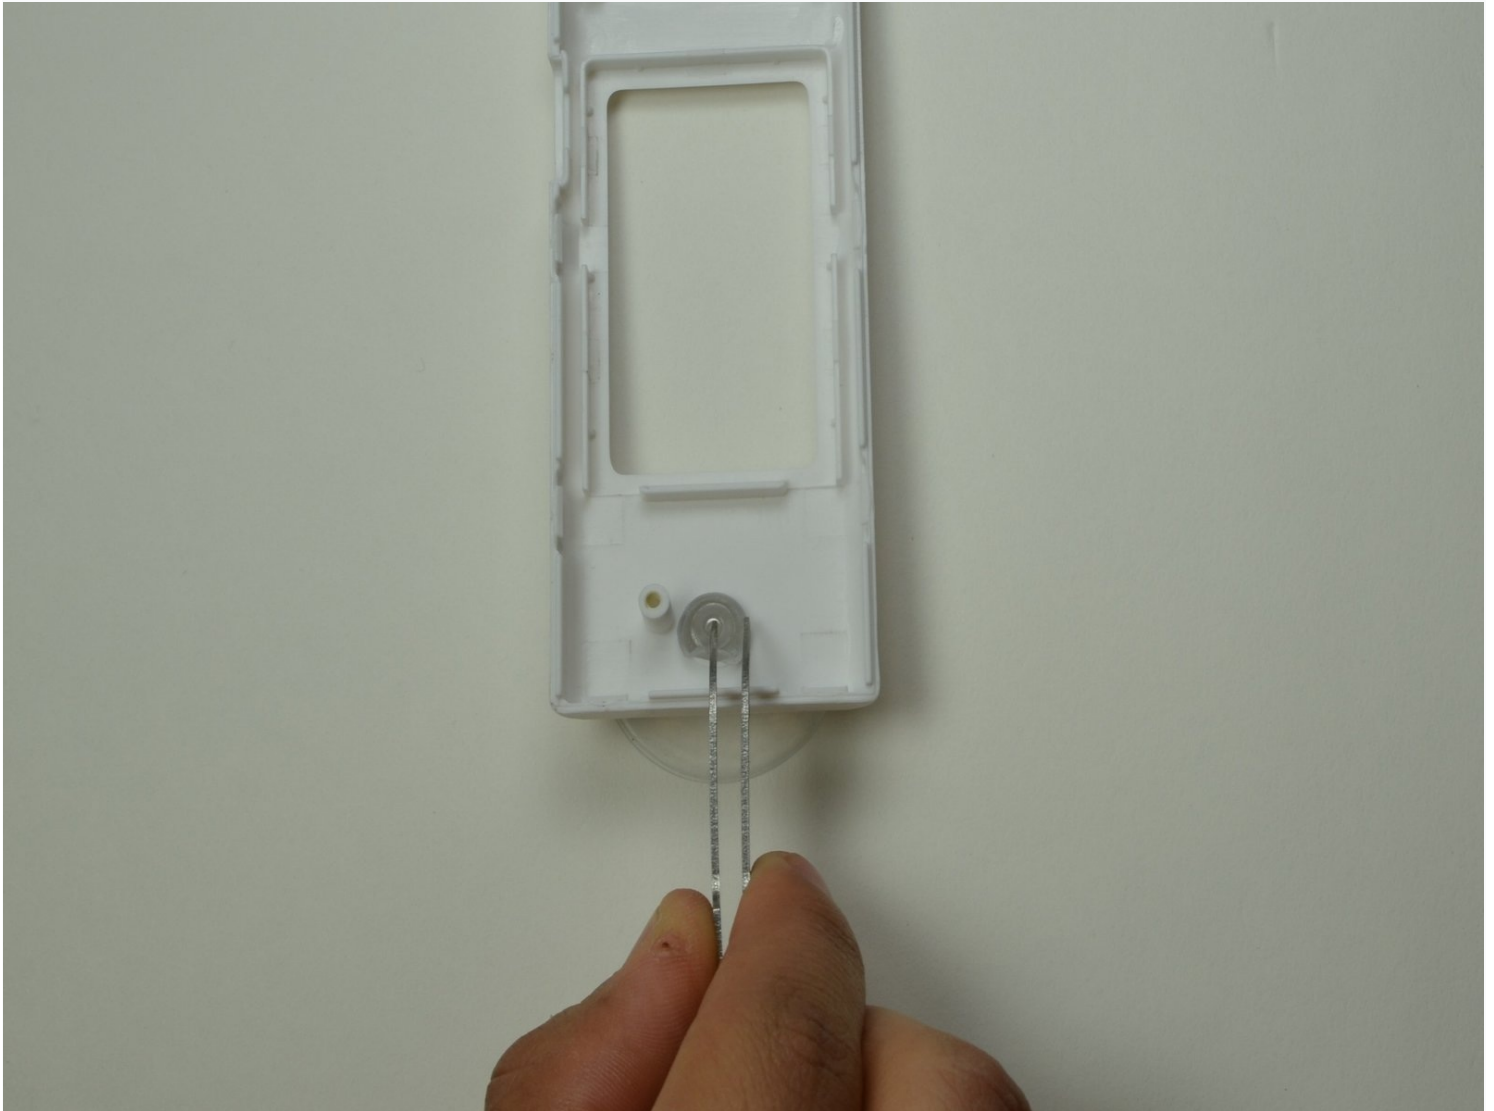

INTRODUCTION

If the suction cup no longer sticks to surfaces or if the plastic has split, you will need to replace the suction cup with a new one.



TOOLS:



[Tweezers](#) (1)



PARTS:


[Suction Handle](#) (1)

Step 1 — Remove Battery Cover

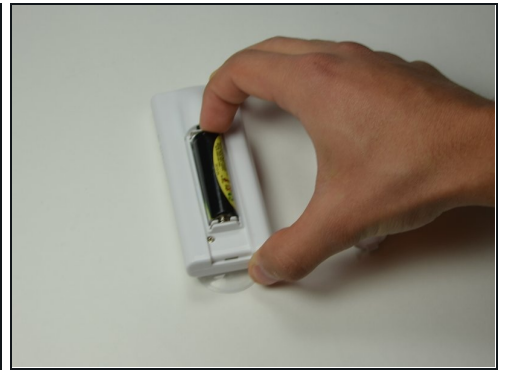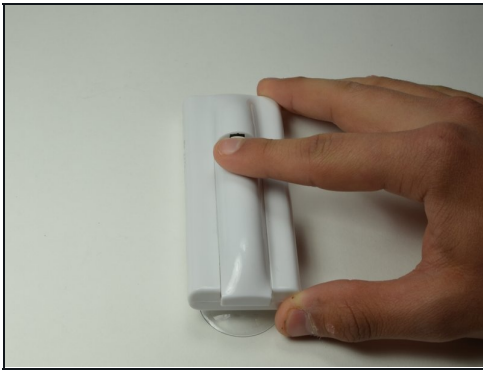



- Press down firmly to remove the battery cover and display battery.
- Then remove the battery.

Step 2 — Unscrew Back Cover

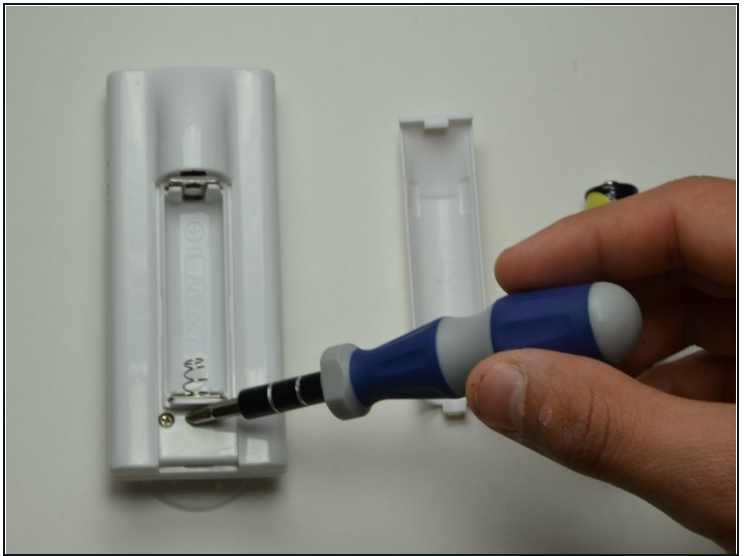


- Remove the 7mm Phillips #1 screw.

Step 3 — Pry Open Back Cover

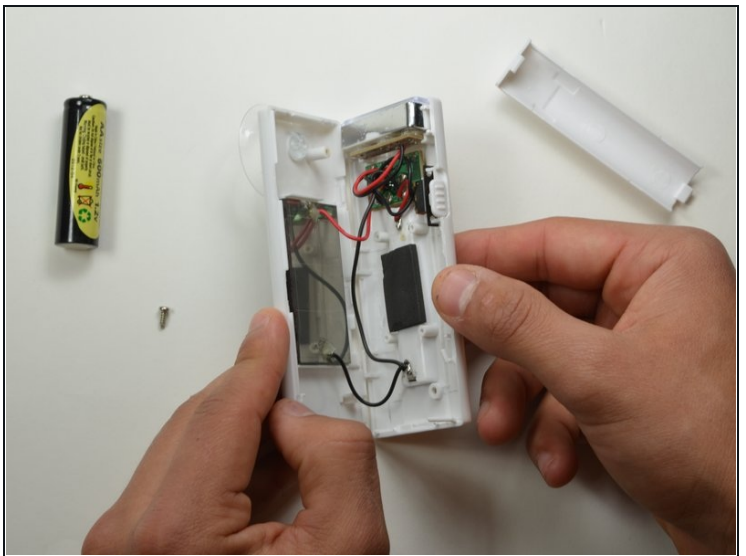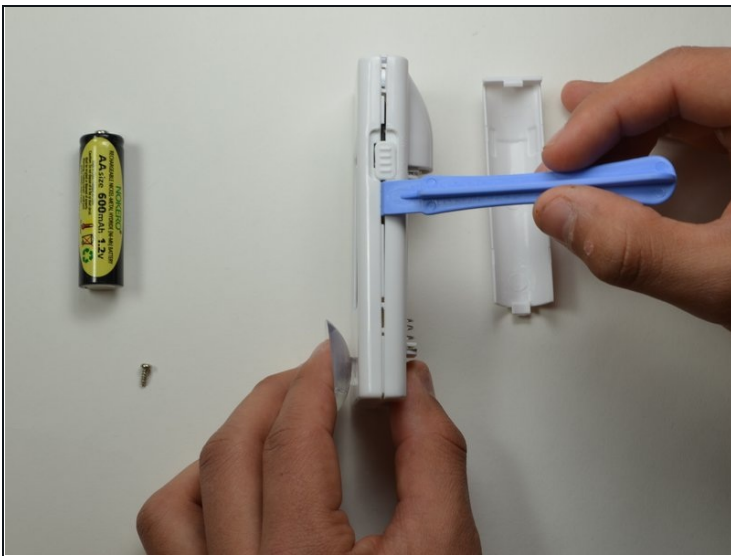



- Place the plastic opening tool in between the two plastic panels and slowly work your way around the device.
- Unlatch the clips on the inside and pull device apart.
- ⓘ Some clips will break when forced open.

Step 4 — Begin Removal

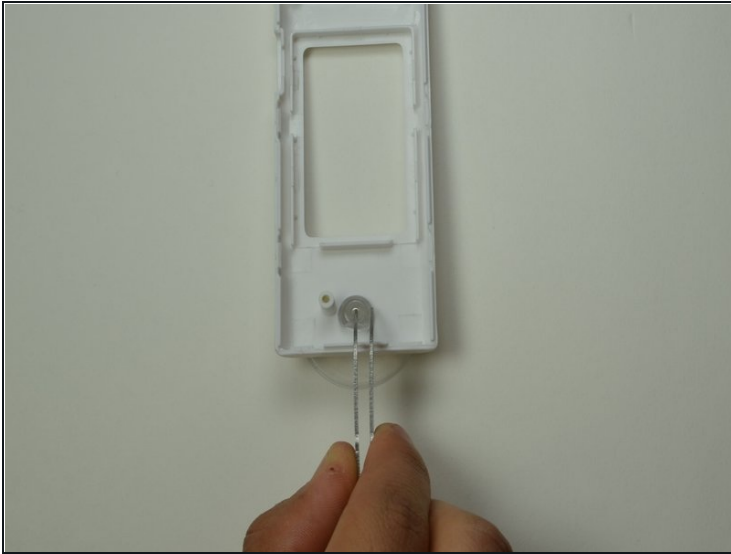

- Using [tweezers](#), push the edges of the back end of the suction cup inward.

Step 5 — Remove Suction Cup

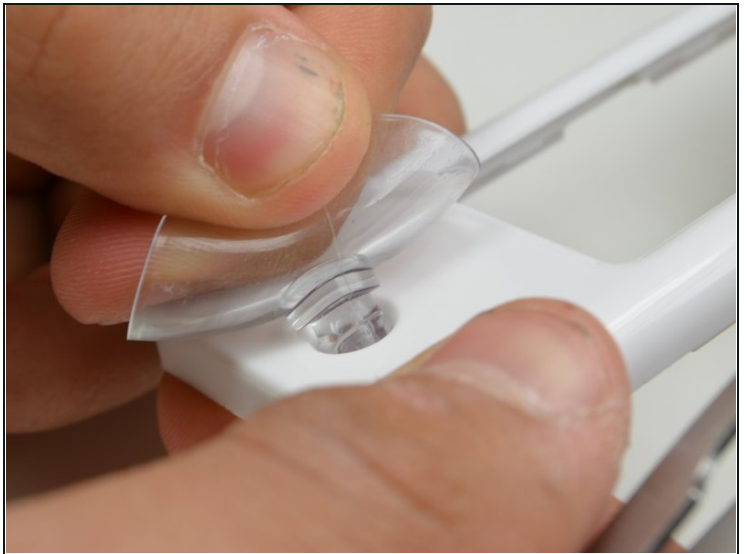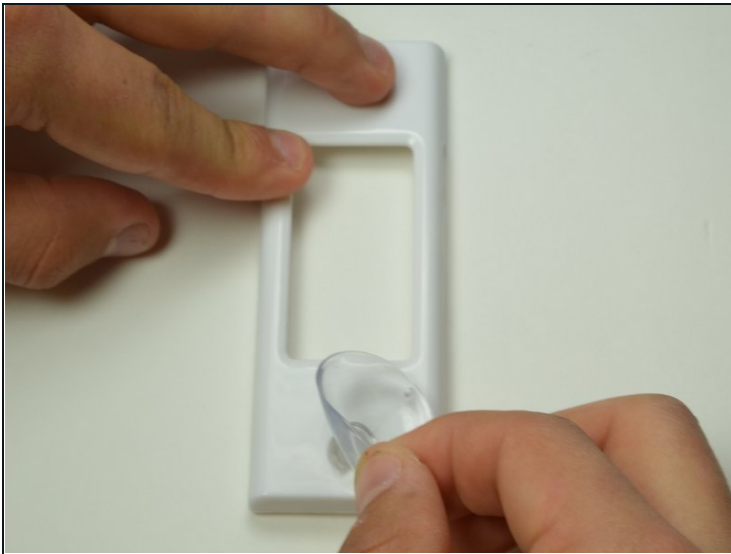

- Flip the cover over and remove the suction cup by pulling at an angle.
- ⓘ Be careful not to tear the plastic housing.
- ☑ During reassembly, make sure to press down uniformly on the suction cup for an even fit.

To reassemble your device, follow these instructions in reverse order.