

# **Asus MeMO Pad HD 7 Battery Replacement**

Replace a battery to bring power back to your tablet.

Written By: Julien Daigle



## **INTRODUCTION**

This guide is to show you how to replace the battery in an Asus MeMO Pad HD 7. This is a simple procedure that can be accomplished by anyone.



# **TOOLS:**

- Spudger (1)
- iFixit Opening Tools (1)



## **PARTS:**

ASUS MeMO Pad HD 7 Rear Panel (1)

#### Step 1 — Remove Rear Panel








- Carefully remove the back panel by using a plastic opening tool to remove the panel off the device.
- Pull the back panel away from the device.
- (i) The volume buttons can fall out of the case. Pay attention so as not to lose them.

## Step 2



- Unlock the ZIF connectors on the data cables.
  - Raise the white locking tabs by lifting their upper edge - furthest from the battery - they hinge across the width of the connector.
- Remove the cable from its slot by gently pulling downward on the tabs.
- Check that the touchscreen cables are fully seated when reassembling or touchscreen may have unresponsive areas.

## Step 3

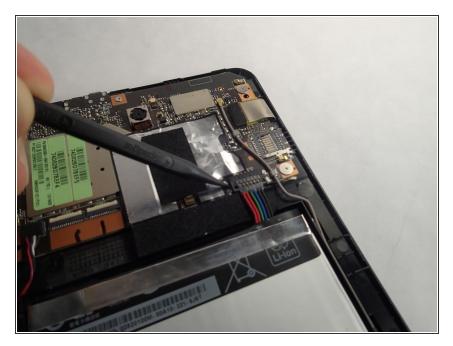

Locate the battery connector by following the wires that come from the top right of the battery. To disconnect the battery just lift up gently on the wires. Use a spudger or blue plastic opening tool to gently lift the wires if it is hard to get a grip.

### Step 4 — Remove Battery







Using a spudger carefully pry the battery up. It is glued down so slight pressure may be needed.

The battery has a soft casing, be careful not to tear the battery casing as chemicals could leak out.

To reassemble your device, follow these instructions in reverse order.