




Kyocera QCP-2035 Microphone Replacement

Through this guide we will disassemble the phone and replace the microphone.

Written By: cove

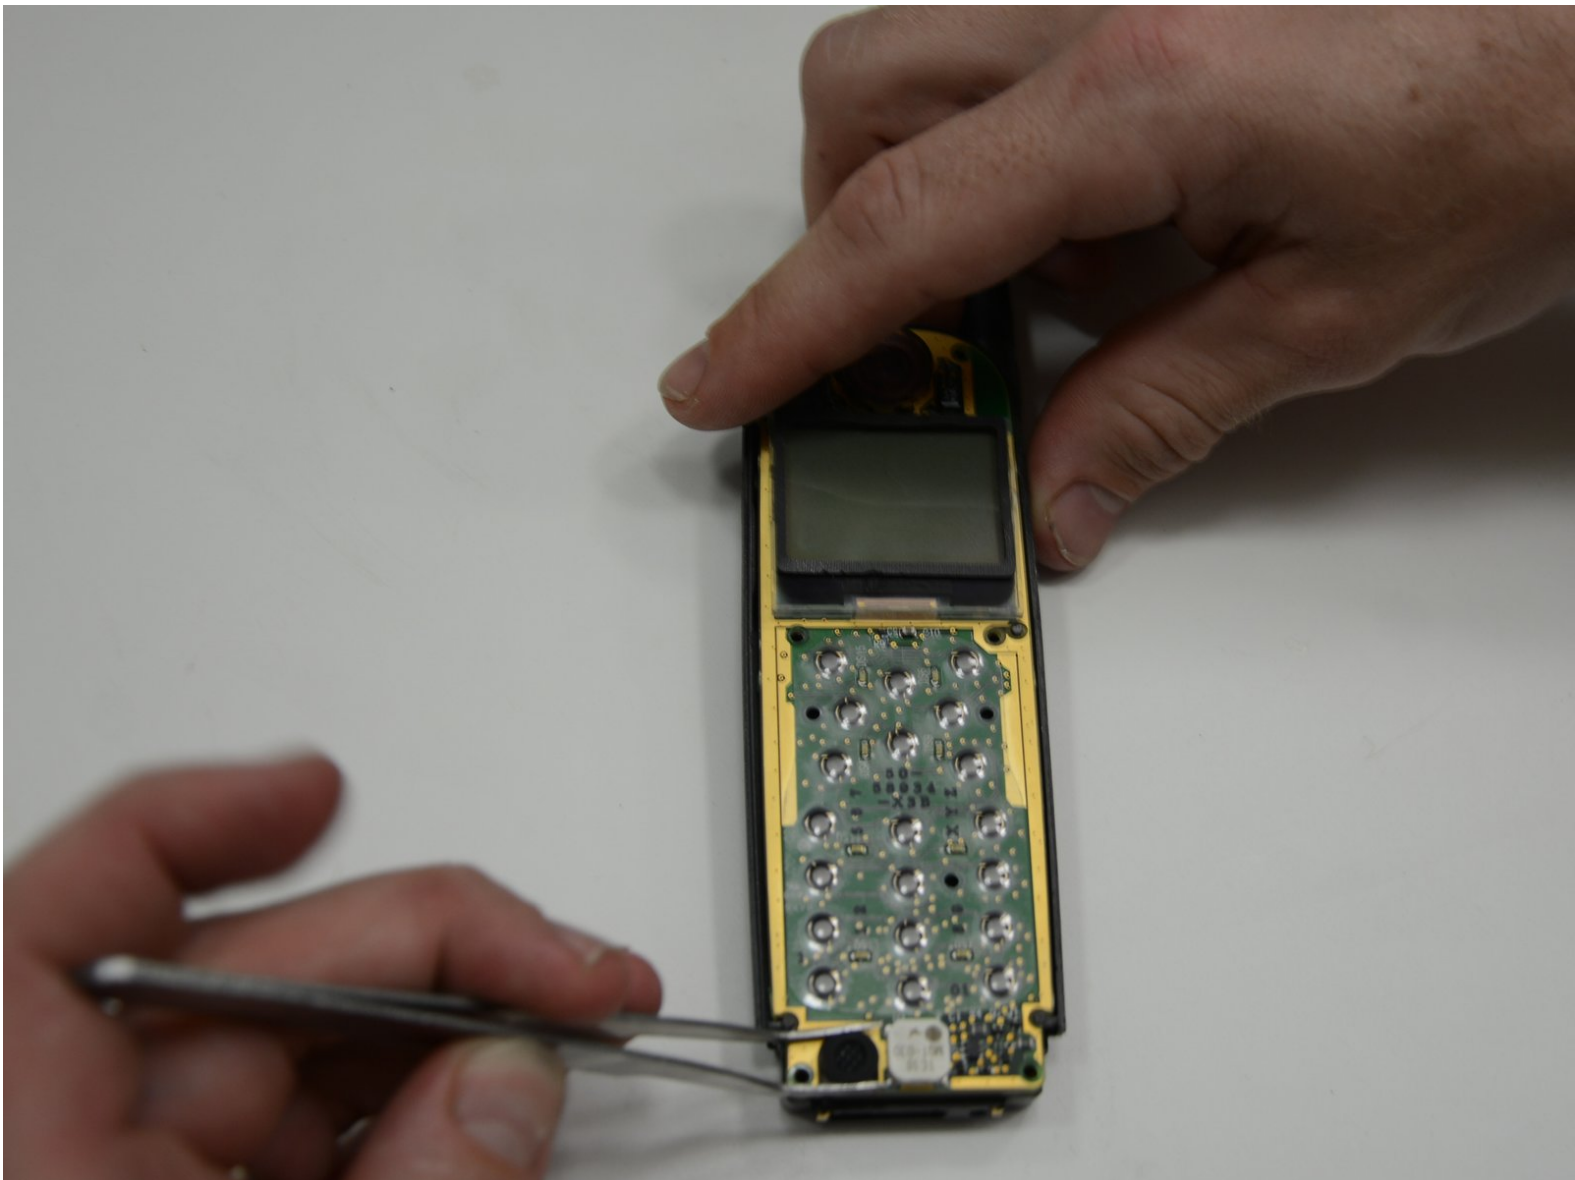

INTRODUCTION

You will learn how to disassemble the phone and remove the microphone safely.



TOOLS:

- [Spudger](#) (1)
 - [T6 Torx Screwdriver](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Remove Back Cover



- When looking at the back of the phone, you will see a horizontal line and three raised segments of plastic in the form of a triangle.
- Place thumb on top of the triangle and press into the phone while sliding your thumb towards the bottom of the phone.
- In 5 mm it will stop sliding.

Step 2



- Grab the bottom of the back cover with your other hand and pull the cover the rest of the way off.
- Turn the phone over slowly. The battery will fall out on its own.

Step 3




- Rotate the phone so the bottom is facing you. There is a small indent on the plastic face.
- Using the tip of your fingernail or a spudger, pry the cover away from the rest of the phone.
- Once the cover starts to part, keep separating until the top notches detach.

Step 4



- With the cover plate separated, you will see (6) T6x11mm torx screws recessed in the white plastic.
- Remove screws.
- The white plastic face plate lifts right off, exposing the main board.

Step 5 — Microphone

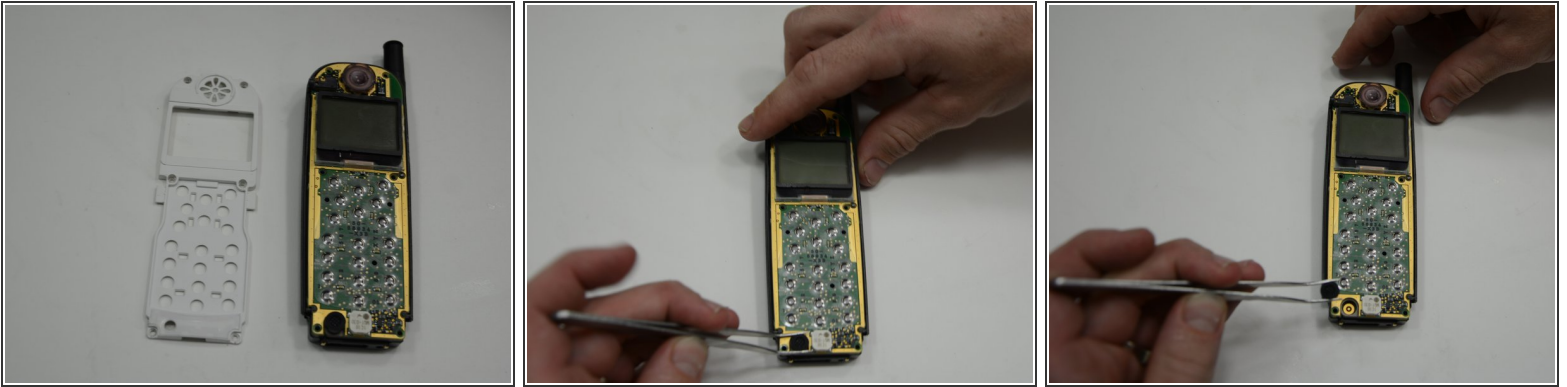

- Locate the microphone at the bottom left corner of the phone.
- using tweezers, Lift the microphone straight out of the phone.

To reassemble your device, follow these instructions in reverse order.