




Geardup RC Ford Mustang GT Car Battery Replacement

Use this guide to replace the batteries for the GEAR'D UP RC Ford Mustang GT.

Written By: Claudia Robinson

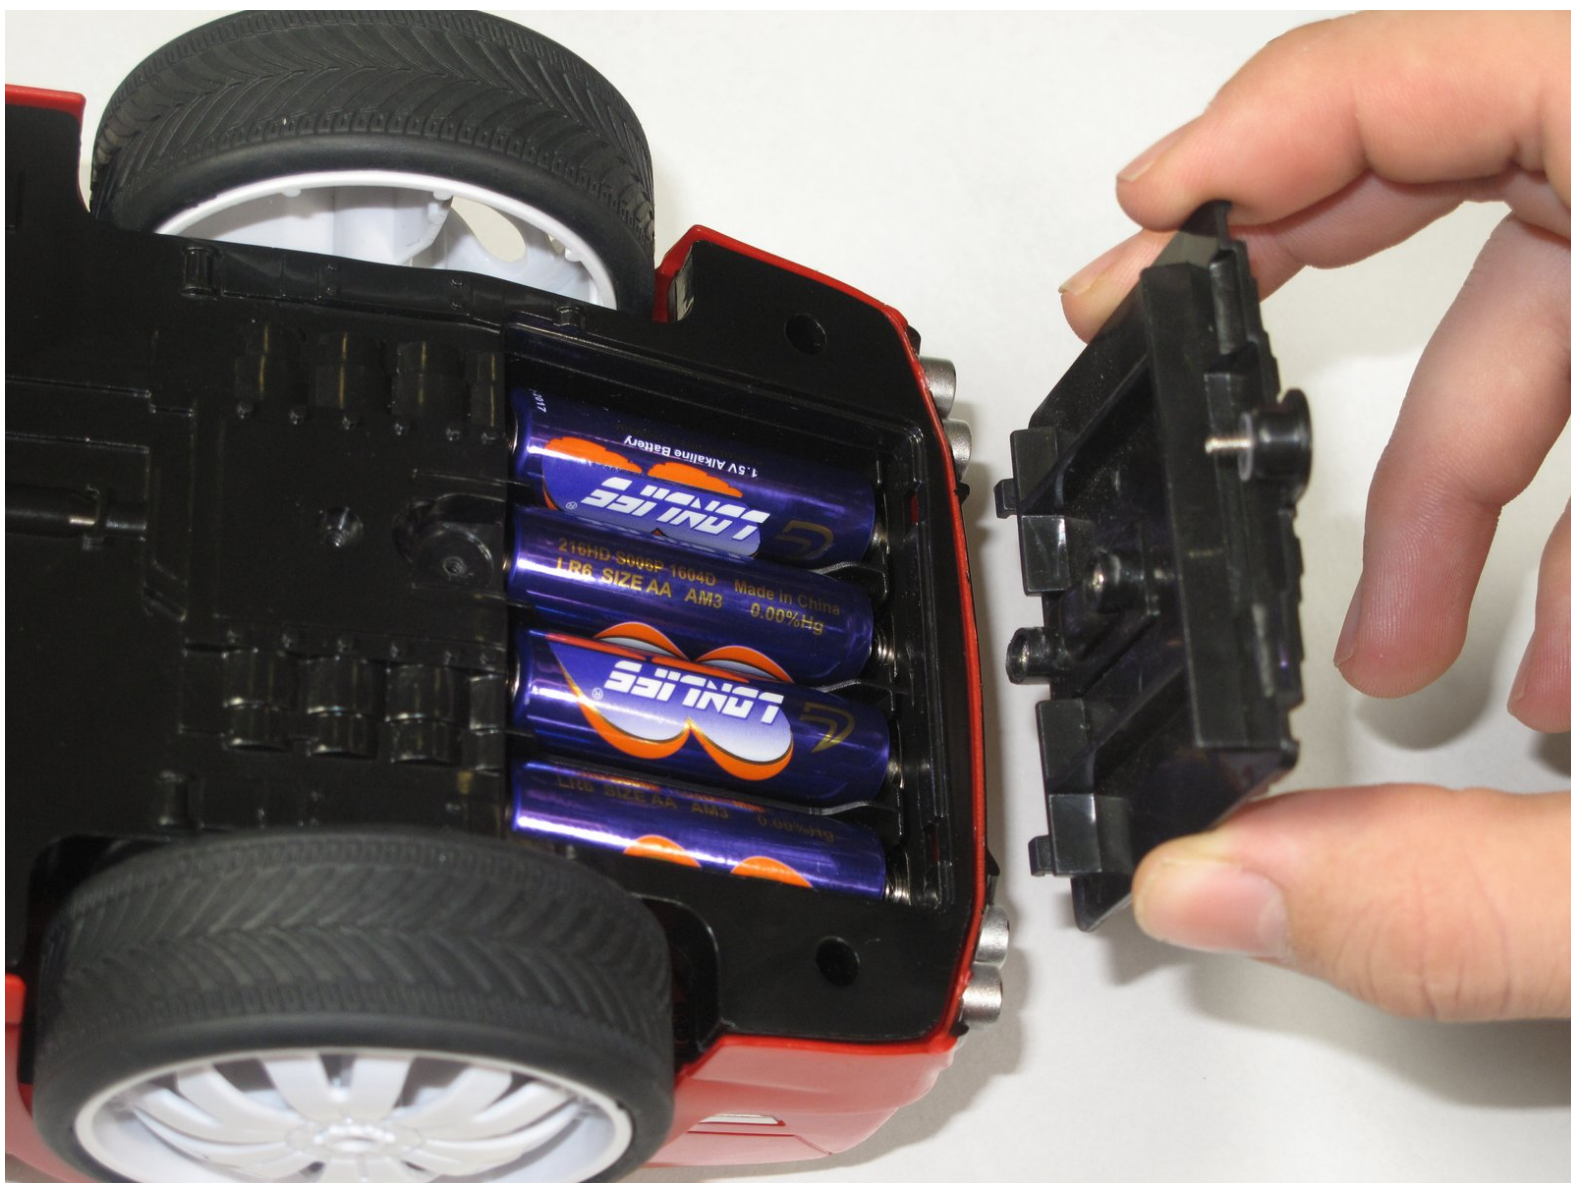

INTRODUCTION


The batteries power the car and allow it to run. If it isn't running, try using the following steps to replace the batteries.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Battery Cover

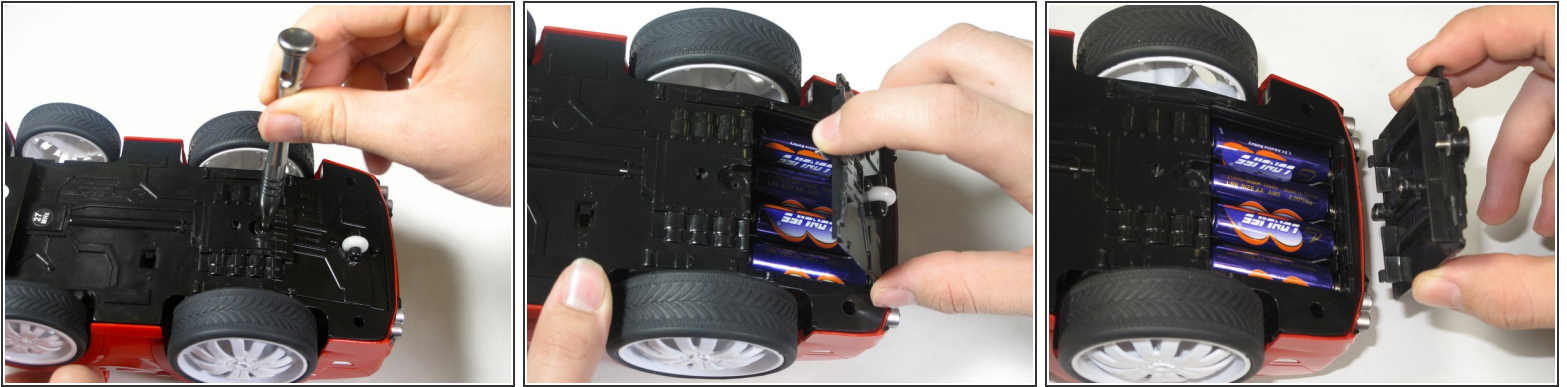

- Remove the 5mm Phillips #0 screw from the bottom of the car, located between the rear wheels.
- Gently lift the battery cover from the car to expose the batteries.

To reassemble your device, follow these instructions in reverse order.