

# Remington MB4040 Cover Assembly Replacement

Removing the cover portion of the device to get to the internal components.

Written By: Cameron Carnahan



# **INTRODUCTION**

### Prerequisite Only



# **TOOLS:**

- Phillips #00 Screwdriver (1)
- iFixit Opening Tools (1)

# **Step 1 — Remove Blade Assembly**







Press the black button below the blade to remove the blade.

# **Step 2** — Remove Back Cover Hardware





- Place the device so the back of the product is facing up.
- Remove the two 11.0 mm PH00 screws from the black plastic housing at the bottom of the device.

### **Step 3** — Remove Front Cover Hardware







- Remove the chrome plated plastic piece by using the plastic opening tool to pry it from the housing assembly.
- Remove the small clear plastic piece that covers the zoom wheel numbers.


## Step 4 — Front Cover (cont.)





- Remove the two 16.0 mm PH00 screws from the front cover.
- Use the blue plastic opening tool to pry apart the two halves of the device.

### Step 5 — Blade Button Removal

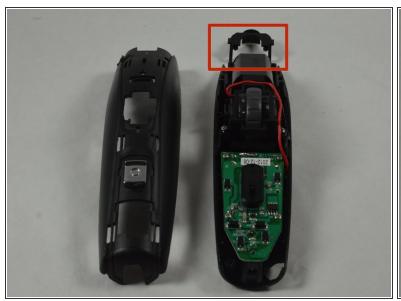



- Remove the black blade button and the two 10.0 mm springs, which are sandwiched between the cover assembly halves.
- (i) The blade button is sandwiched between the halves and the two springs may fall out when the halves are separated.

To reassemble your device, follow these instructions in reverse order.