


Kindle Touch Back Cover Replacement

Written By: Adam Yerly



Step 1 — Back Cover

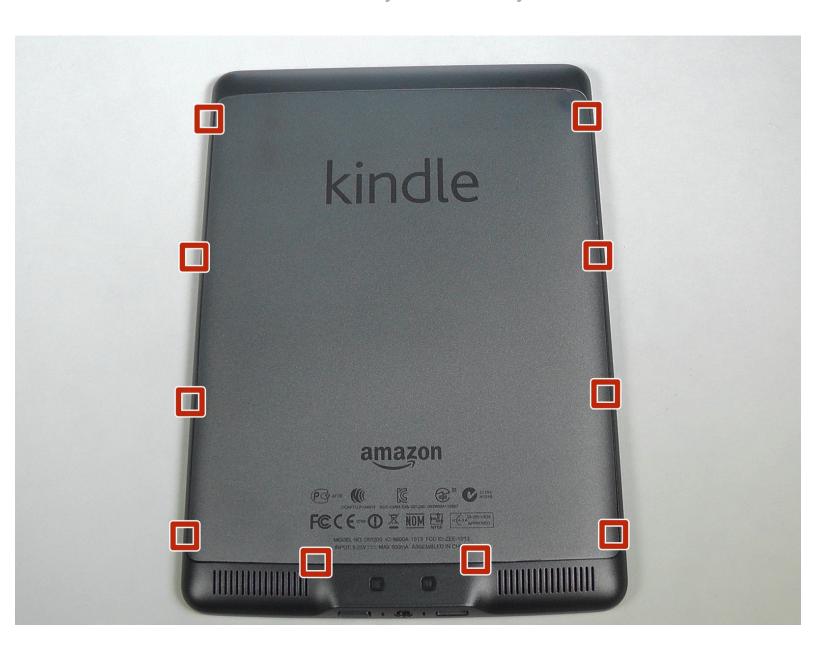





Use the plastic opening tool to undo the ten plastic clips around the back panel of the Kindle.

Step 2





Gently lift the bottom and slide the panel off.

To reassemble your device, follow these instructions in reverse order.