


Kyocera QCP-2035 Display Replacement

How to disassemble the device and replace the screen.

Written By: Scott Whitney

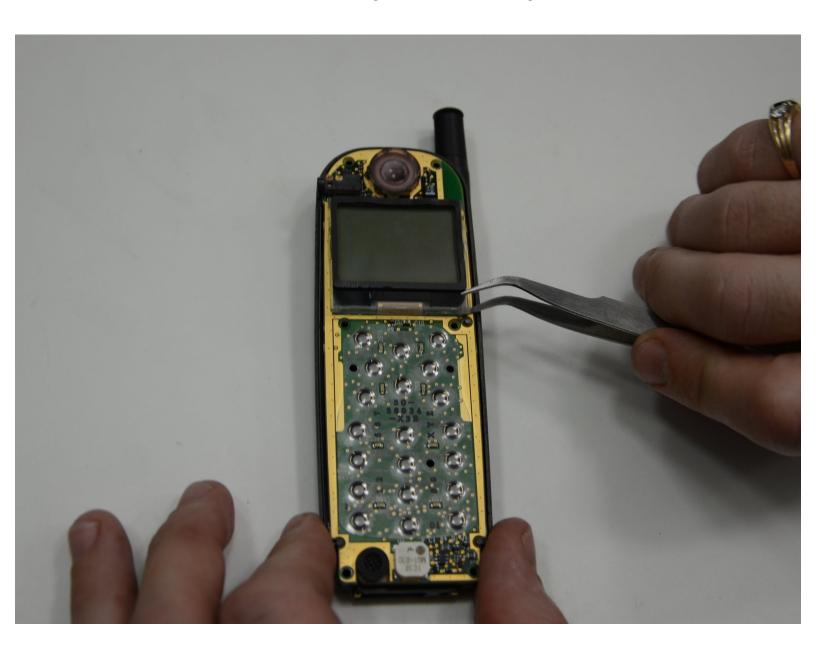

INTRODUCTION

You will learn how to disassemble the phone and remove the screen safely.



TOOLS:

- Spudger (1)
- T6 Torx Screwdriver (1)
- Tweezers (1)

Step 1 — Remove Back Cover







- When looking at the back of the phone, you will see a horizontal line and three raised segments of plastic in the form of a triangle.
- Place thumb on top of the triangle and press into the phone while sliding your thumb towards the bottom of the phone.
- In 5 mm it will stop sliding.

Step 2








- Grab the bottom of the back cover with your other hand and pull the cover the rest of the way off.
- Turn the phone over slowly. The battery will fall out on its own.

Step 3

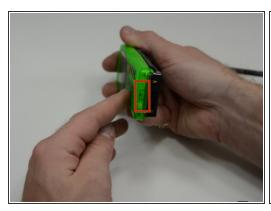





- Rotate the phone so the bottom is facing you. There is a small indent on the plastic face.
- Using the tip of your fingernail or a spudger, pry the cover away from the rest of the phone.
- Once the cover starts to part, keep separating until the top notches detach.

Step 4








- With the cover plate separated, you will see (6) T6x11mm torx screws recessed in the white plastic.
- Remove screws.
- The white plastic face plate lifts right off, exposing the main board.

Step 5 — Display



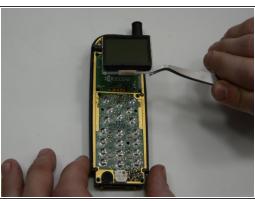



- Lift the display straight up, by either grabbing it on it's sides, or sliding a pair of tweezers between the screen and the main board.
- (i) There are four straight plastic pins on the underside corners of the screen that hold it in place.

To reassemble your device, follow these instructions in reverse order.