




TomTom GO Live 1535M Speaker Replacement

Written By: Mathias Sagide

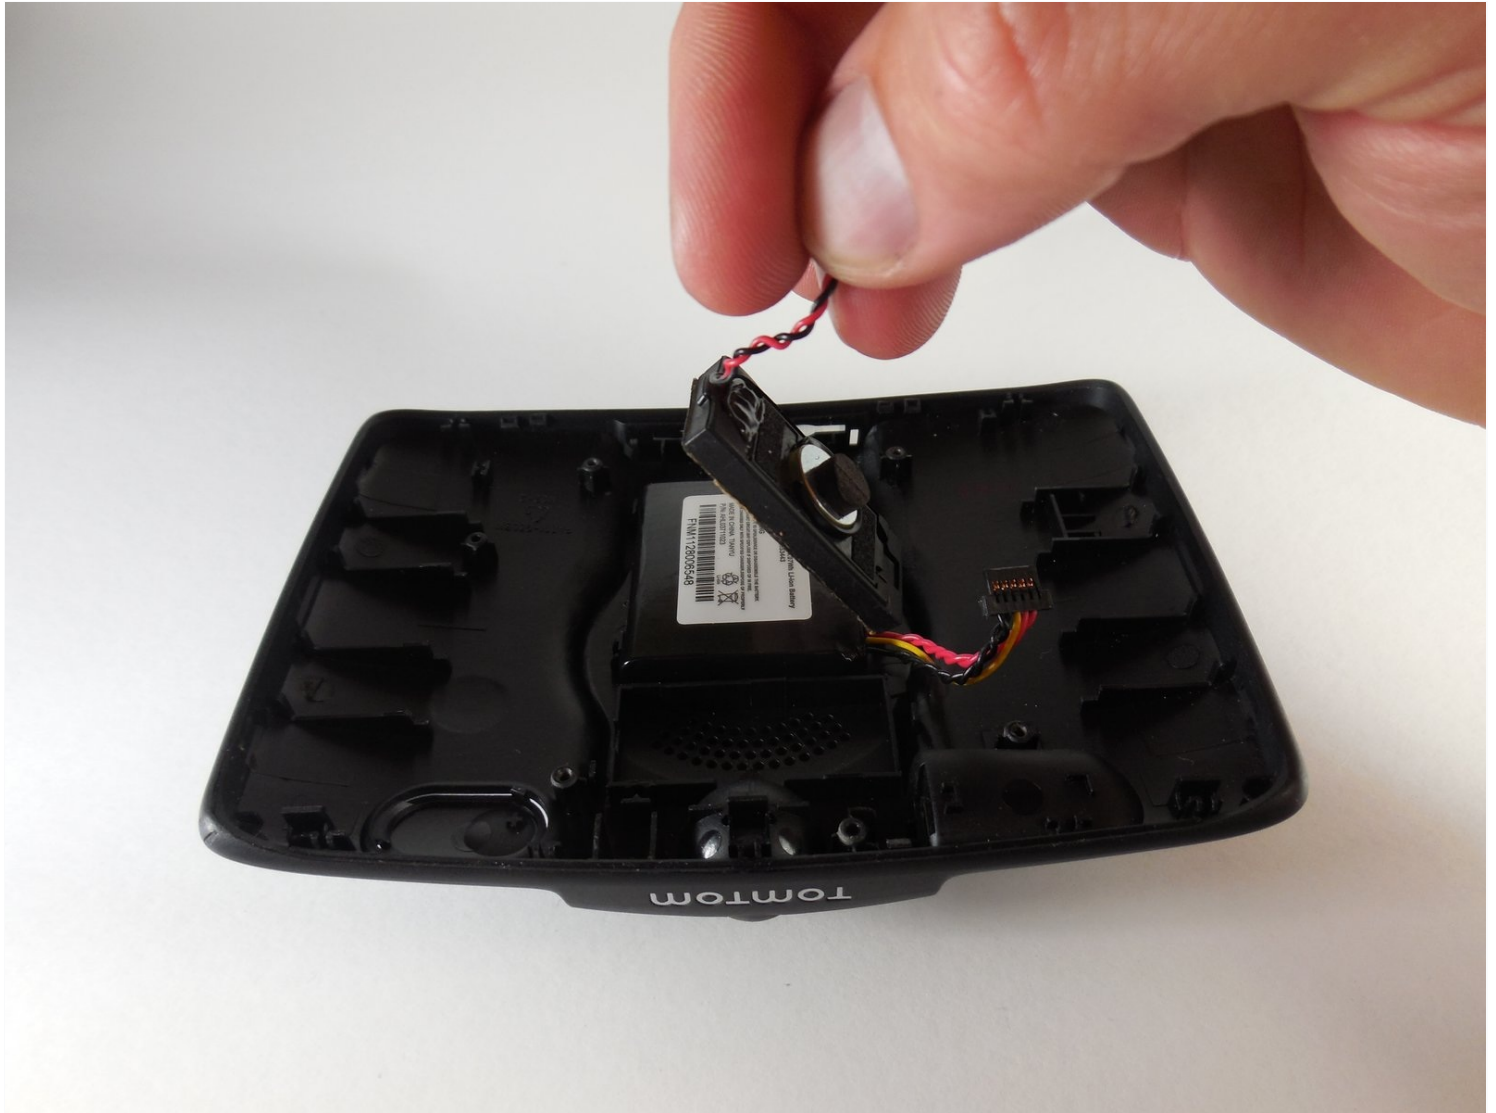

TOOLS:

64 Bit Driver Kit (1)

Phillips #00 Screwdriver (1)

iFixit Opening Tool (1)



Tweezers (1)

Step 1 — Motherboard



- Slip a small opening tool underneath the screen, gently sliding it around the outside edge.
- ⓘ It may be easier to start at the corners.

Step 2

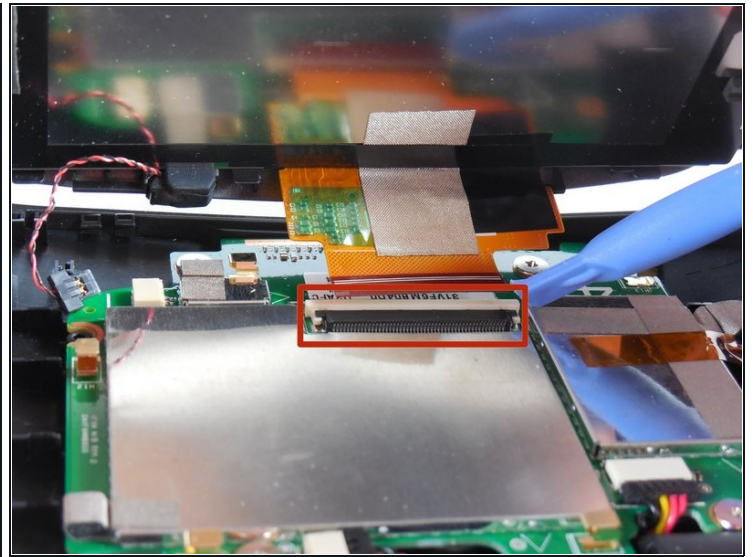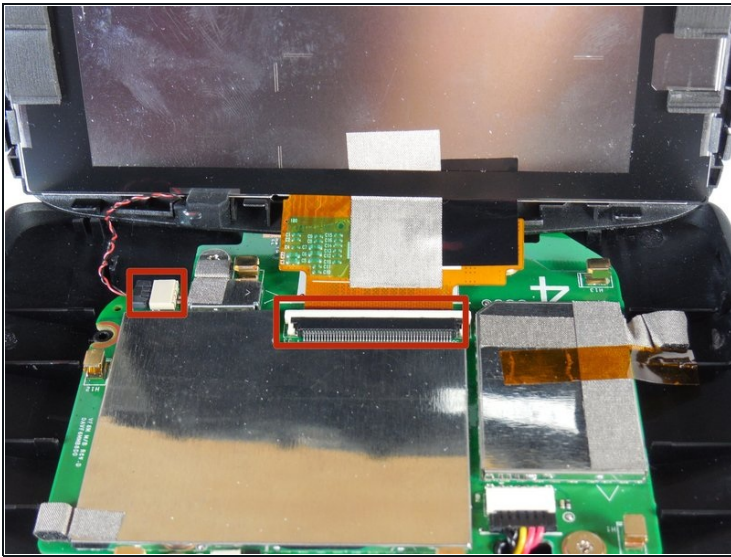

- Carefully remove the reset button cable (located on the left) and the ribbon cable.
- Remove the screen and set it aside.


Step 3



- Remove the logic board cables.


⚠ We highly advise that a pair of tweezers are used for this step to ensure no part is damaged.

Step 4

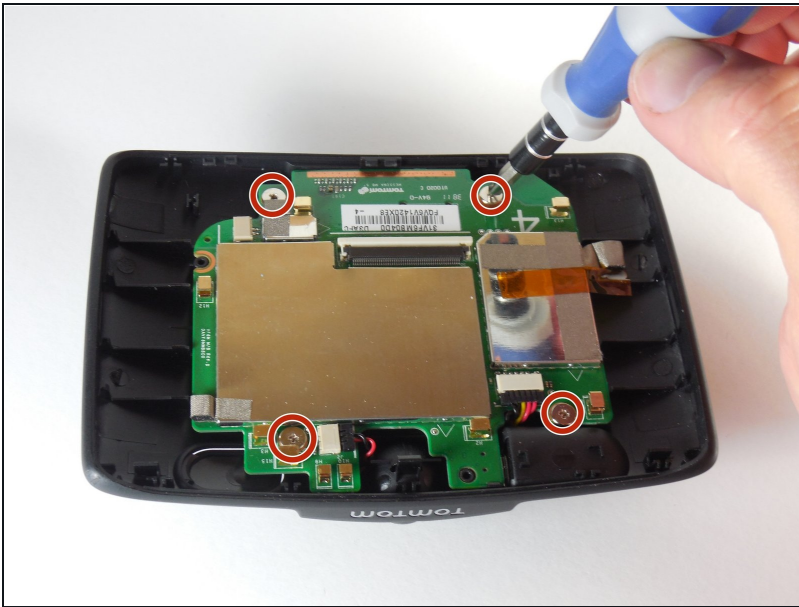

- Remove the 3.6mm screws with a Phillips Screwdriver.
- After removing the screws simply lift the logic board from the base.

Step 5 — Speaker

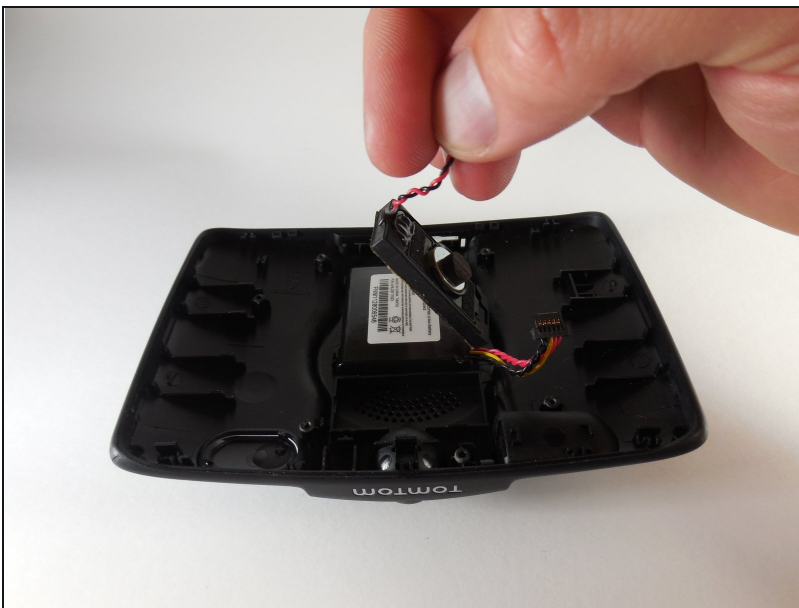

- Simply lift the speaker up and out of the base to replace it.

To reassemble your device, follow these instructions in reverse order.