




# Skytex SP728 Speakers Replacement

This is a guide to remove and replace the speakers of the Skytex SP728.

Written By: Chris Nelson

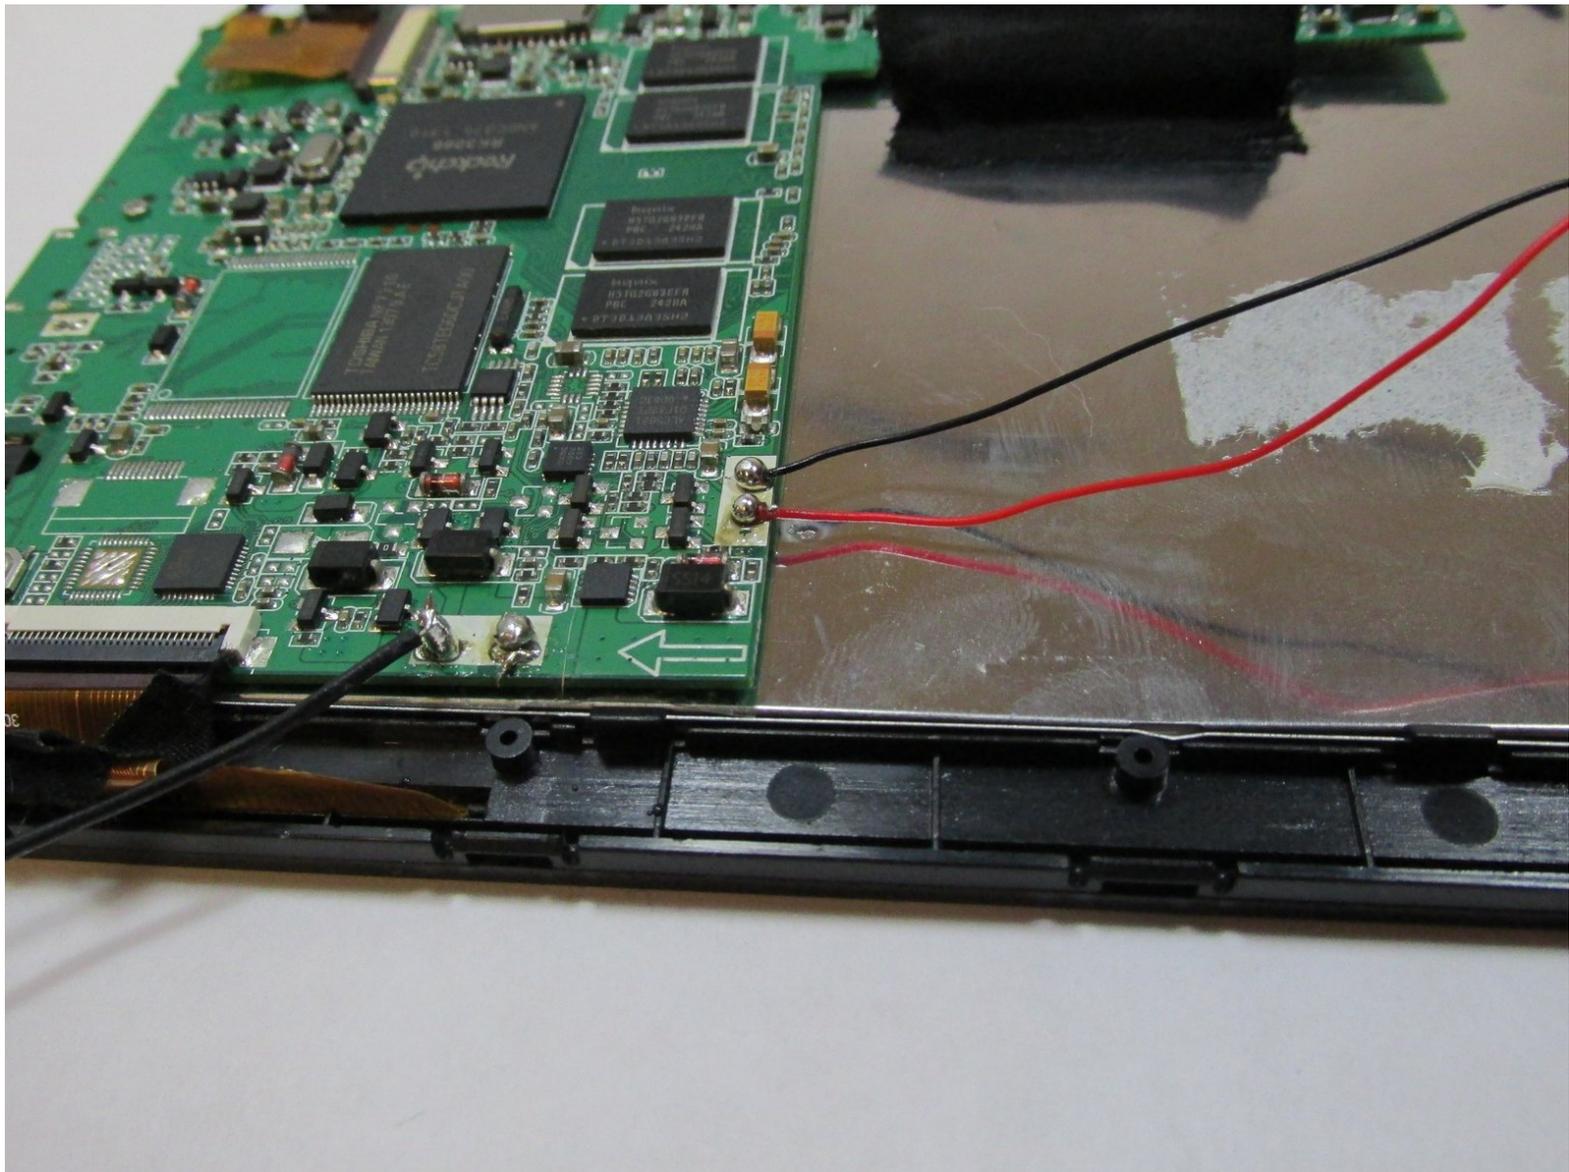

 **TOOLS:**

- [Soldering Iron](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Case



- Make sure the device is powered off
- Rotate the device so the ports and screws face you

## Step 2



- Using a small phillips screwdriver, unscrew both end screws

### Step 3



- Using a plastic opening tool, work your way around the edge of the device, separating the case from the rest of the device

### Step 4




- Once the case has been loosened, pry the backing off gently with your hands.
- ⚠ Make sure to remove the case gently as extra force can break the clasps or the case itself.

## Step 5 — Speakers




- Identify the connection location of the wires from the speakers.

## Step 6

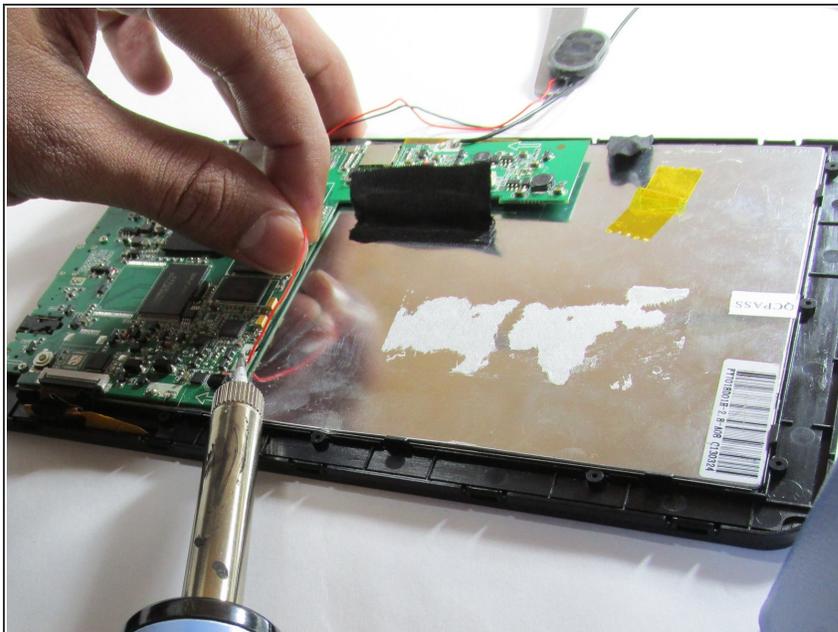

- Use a soldering iron to remove the speaker wires from the circuit board

## Step 7

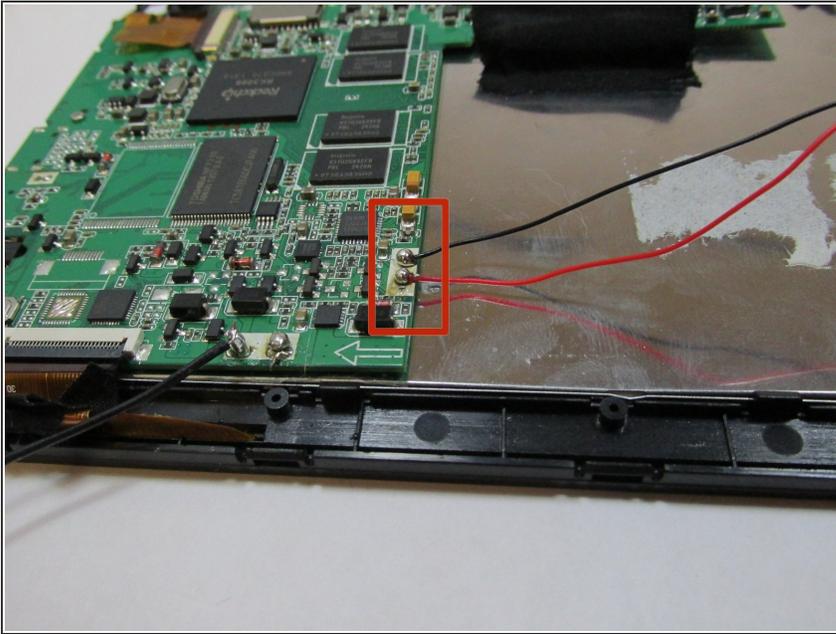

- Solder the new speakers to the correct location, making sure the red wire goes to the + and the black wire goes to the -.

To reassemble your device, follow these instructions in reverse order.