



# Disassembling DeWalt D28110 Back Panel

## Disassembly

The back panel holds most of the small electrical components that might need to be replaced.

Written By: Kean Wee



---

## INTRODUCTION

Prerequisite Only

---



### TOOLS:

- [Spudger](#) (1)
  - [T15 Torx Screwdriver](#) (1)
-

## Step 1 — Disassembling DeWalt D28110 Back Panel Disassembly




- Using the T-15 screwdriver, remove the four 22-mm torx screws holding the back panel in place.
- ⚠ Unplug the grinder before any disassembly.

## Step 2




- Use the edge of the spudger to loosen and remove the back panel.

### Step 3

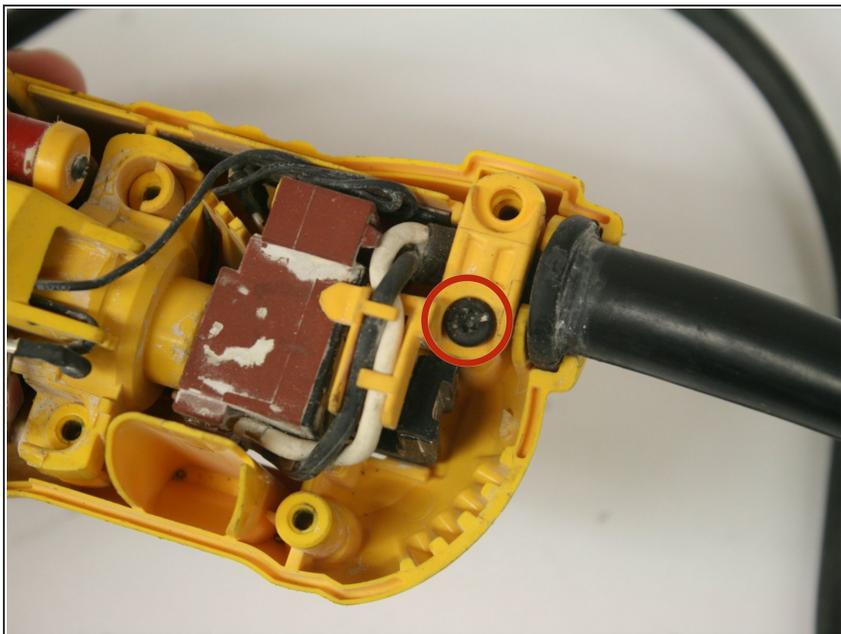

- Remove the single 20-mm torx screw holding the rear panel in place.

### Step 4

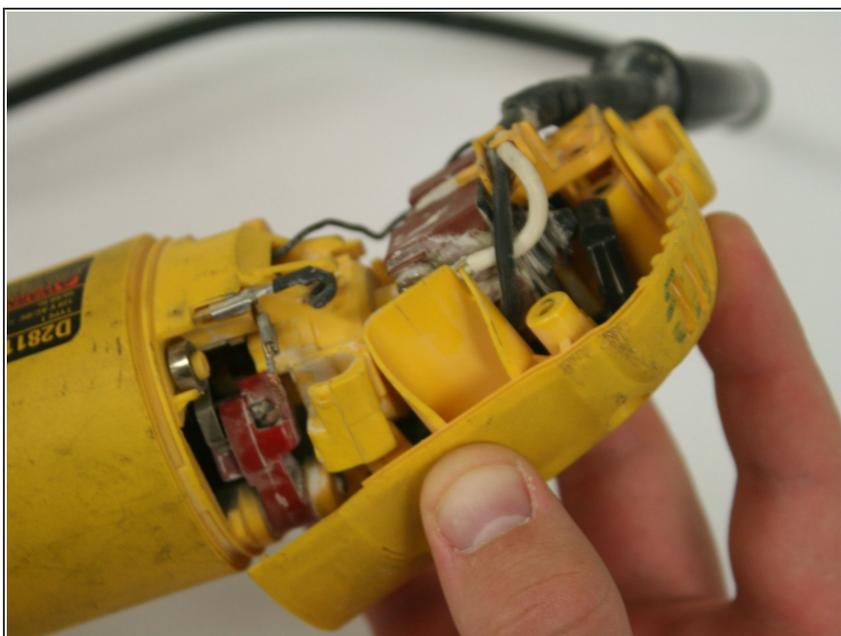

- Pull back the rear side of the back panel.

To reassemble your device, follow these instructions in reverse order.