



---

## INTRODUCTION

This guide requires only simple tools, like a screwdriver and metal spudger. Be careful when handling circuit boards to ensure the device does not become further damaged.

---

### TOOLS:

- [Phillips #2 Screwdriver](#) (1)
  - [Metal Spudger Set](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Disc Tray Cover



- Plug in the Blu-Ray player, then press the power button, making sure the Blu-Ray player is powered on.
- Press the eject button on either the top of the Blu-Ray player or on the remote to open the disc tray.

## Step 2




- Grab the sides of the disc tray cover and carefully pull each side upwards, starting with the left side. This will unhook the cover from the tray.

## Step 3




- Close the disc tray, then power off and unplug the Blu-Ray player.

## Step 4 — Front Panel

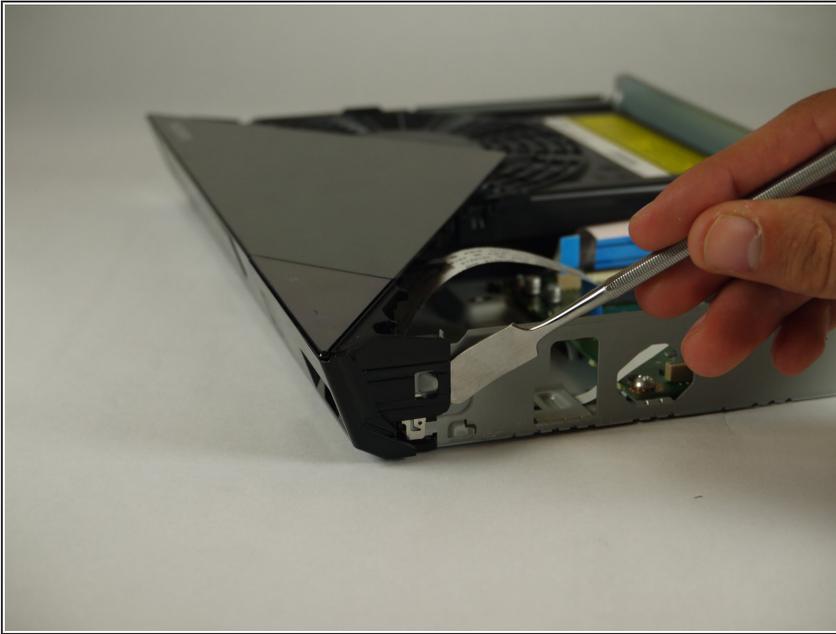


- Insert the nylon or metal spudger under the clip on the side near the front of the device. Lift the clip so it is free from the device.
- ⓘ Lifting these clips may require you to hold one clip open while you move on to the next clip.

## Step 5

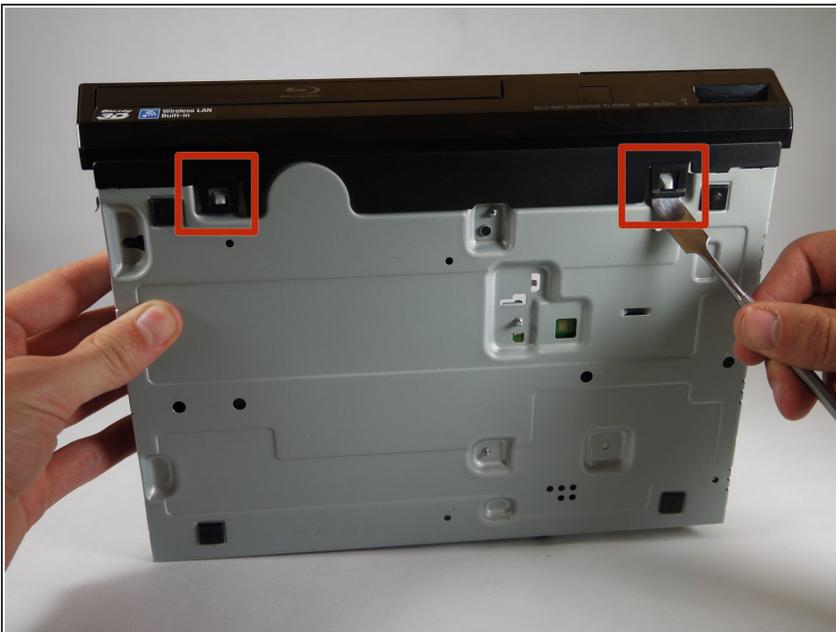



- Flip device over so the bottom faces you.
- Insert the nylon or metal spudger and lift the two clips on the bottom of the device.

## Step 6

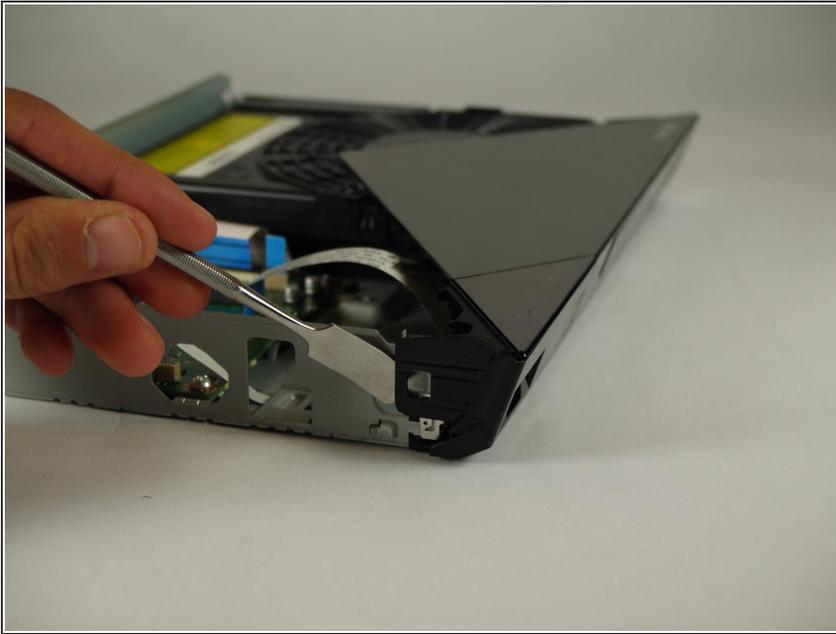

- Lift the clip on the opposite side of the device with the nylon or metal spudger.



## Step 7

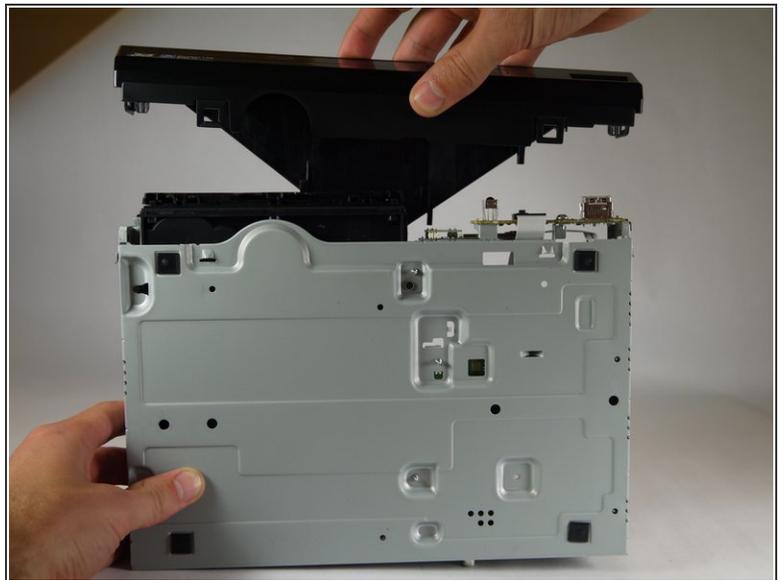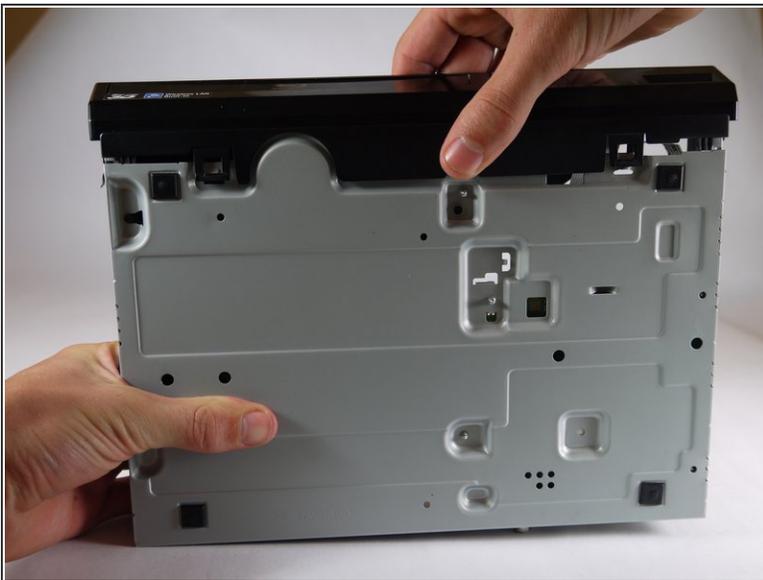

- Grasp the front case firmly and lift from the rest of the device.

**i** Lifting may require some force.


## Step 8 — Port Board

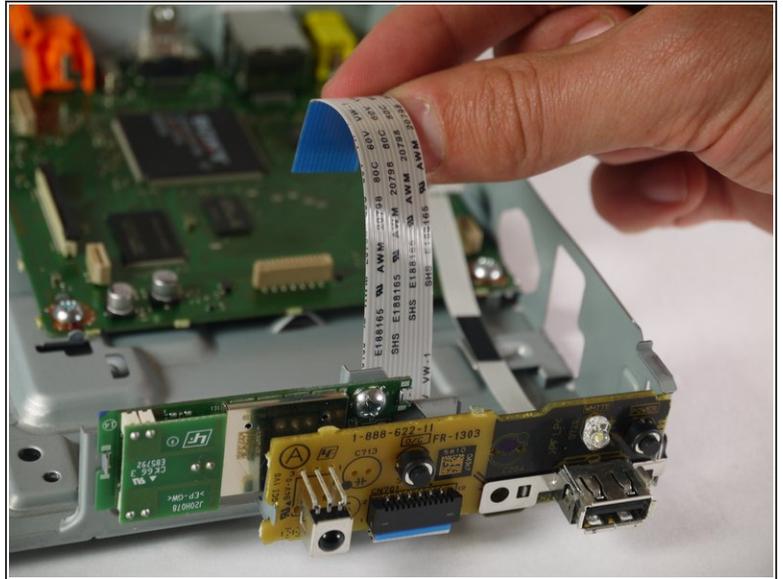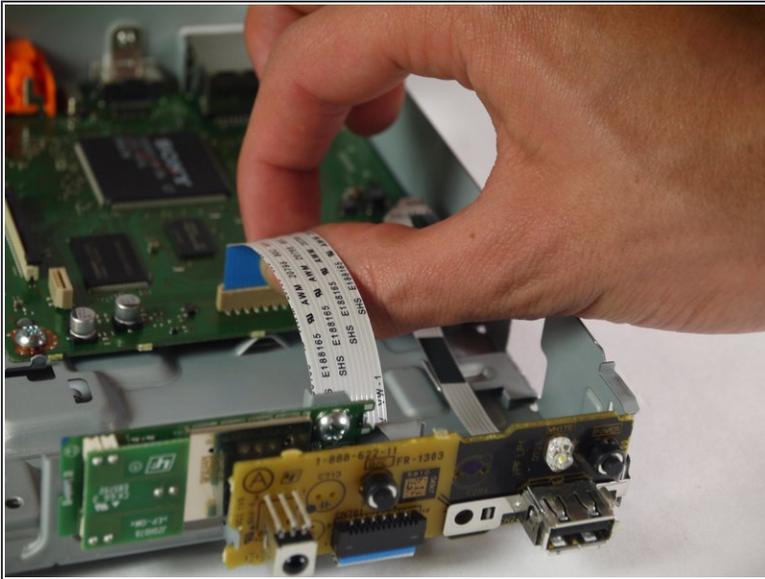

**!** When handling circuit boards like the motherboard and port board, make sure to only touch them on the sides.



- Locate the large ribbon cable connecting the port board to the motherboard.
- Detach the cable from the motherboard by carefully pulling upward on the cable.

## Step 9

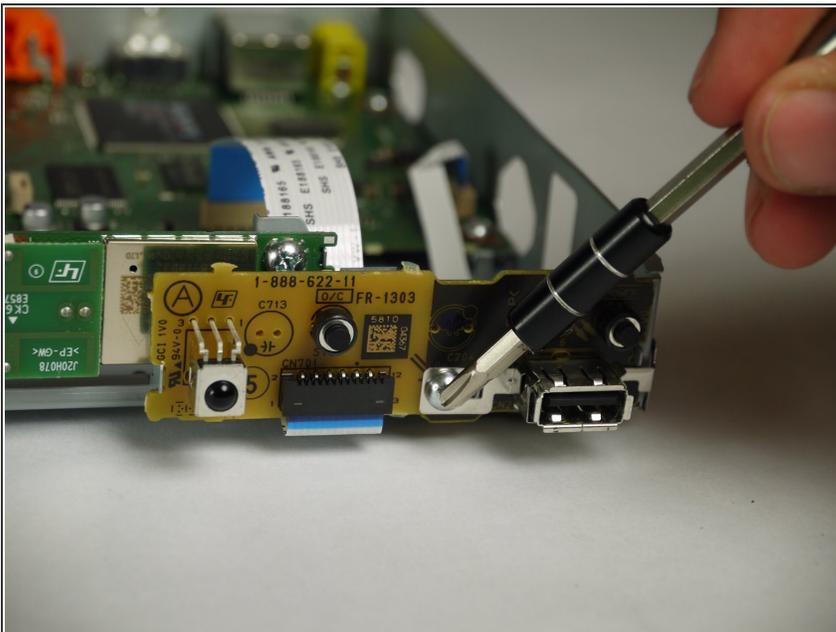


- Using the Phillips #2 screwdriver, unscrew the silver, 8mm screw holding the board in place.

## Step 10

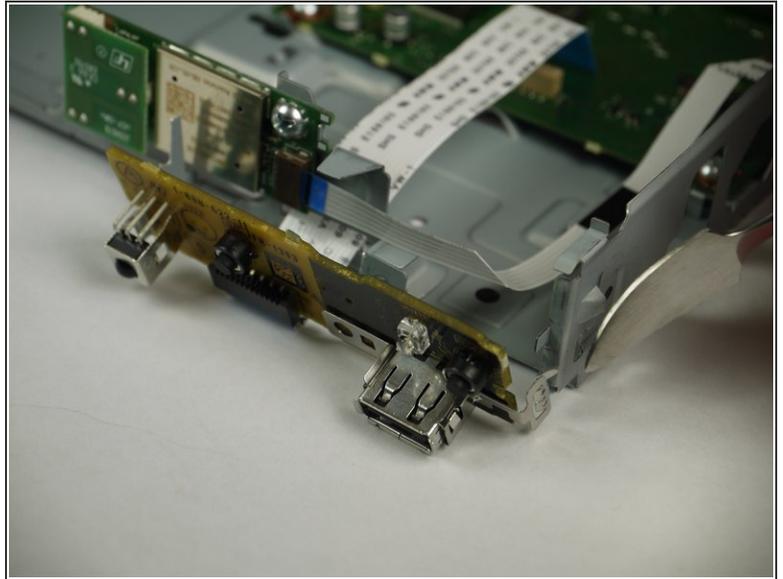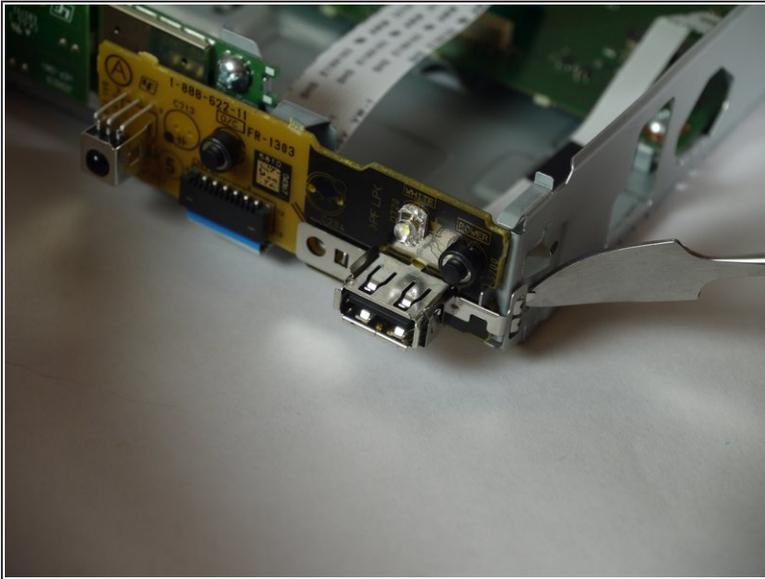

- Using the nylon or metal spudger, carefully unclip the port board from the side of the player.

## Step 11

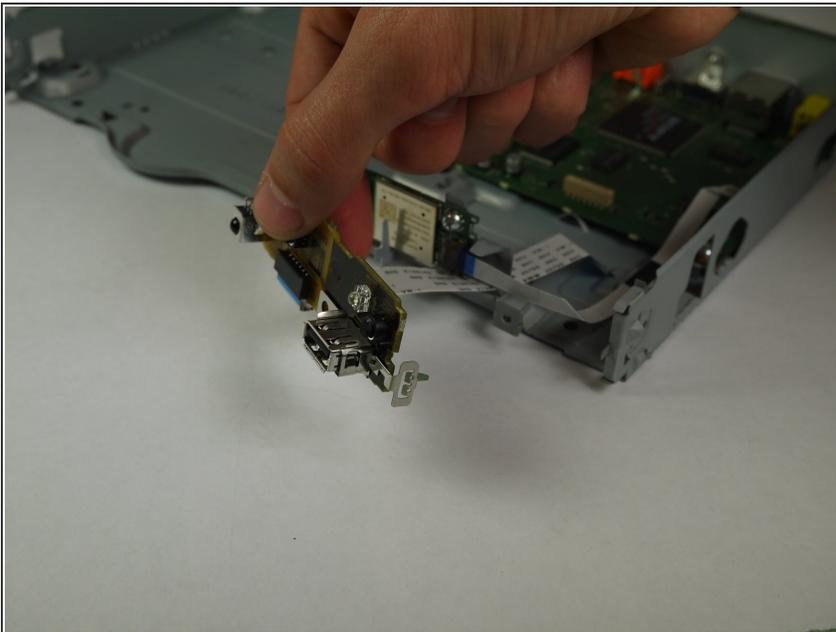

- Carefully pull the port board free from the Blu-Ray player.

To reassemble your device, follow these instructions in reverse order.