




Audiovox T752 Screen Replacement

A guide to replacing your device's screen.

Written By: Logan

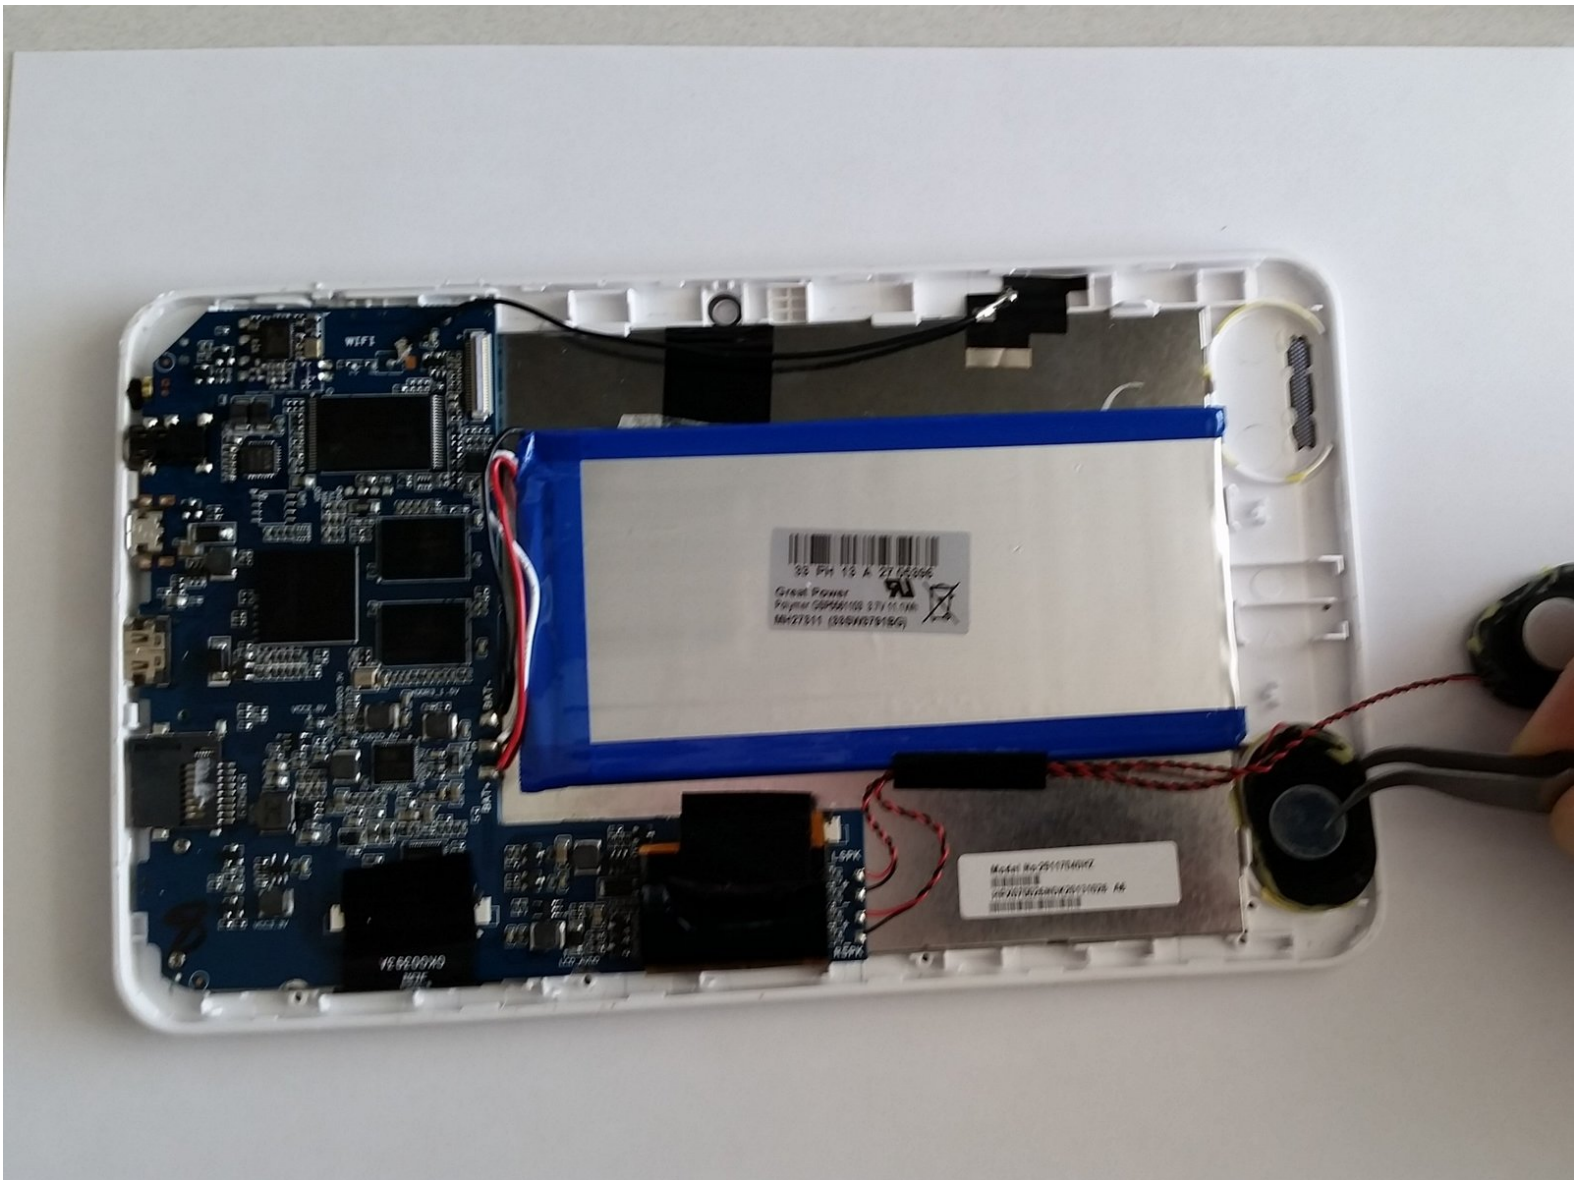




TOOLS:


- [Phillips #00 Screwdriver](#) (1)
 - [Tweezers](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Back Panel

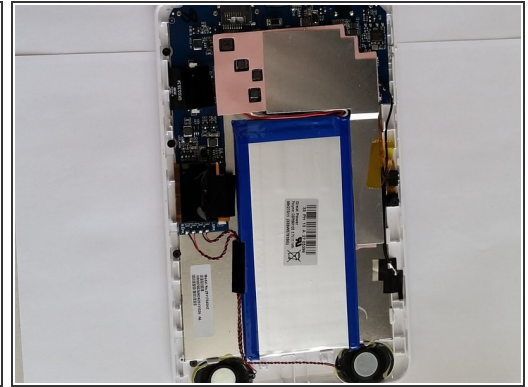


- Find a good spot to fit the pry bar between the back cover and tablet. Slowly drag the pry bar along the sides of the cover.
- **NOTE:** some force will need to be used to remove the cover. Avoid excessive force.

Step 2 — Screen

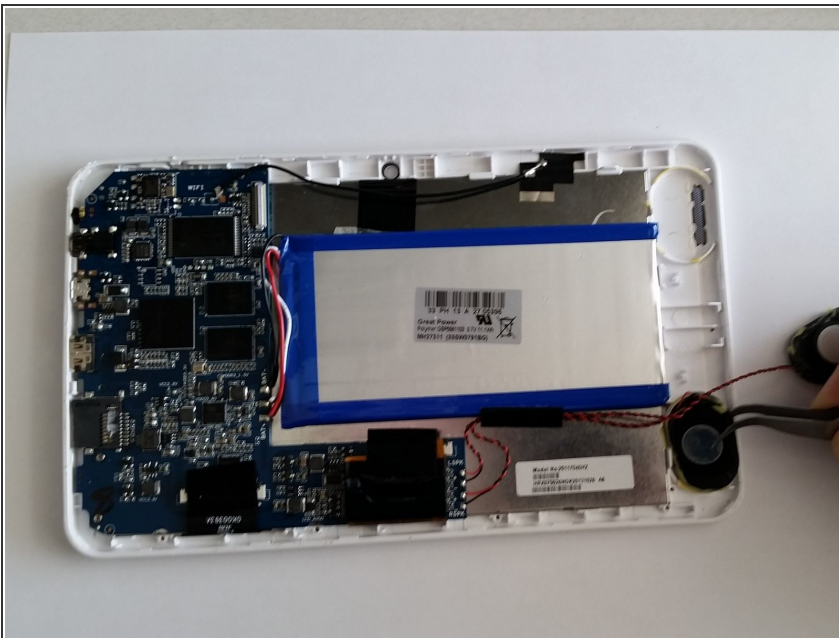


- Remove the speakers.

Step 3

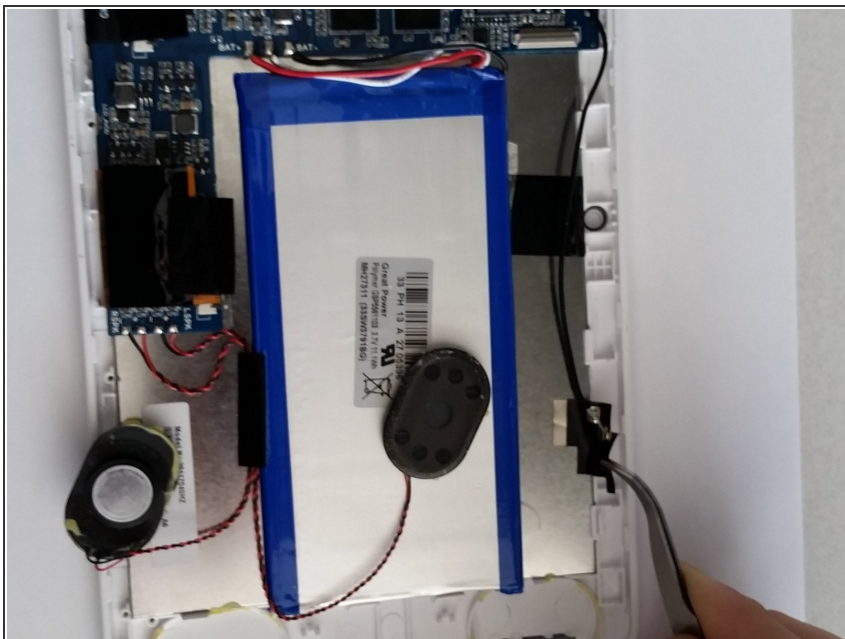

- Remove any adhesives (such as tape).

Step 4

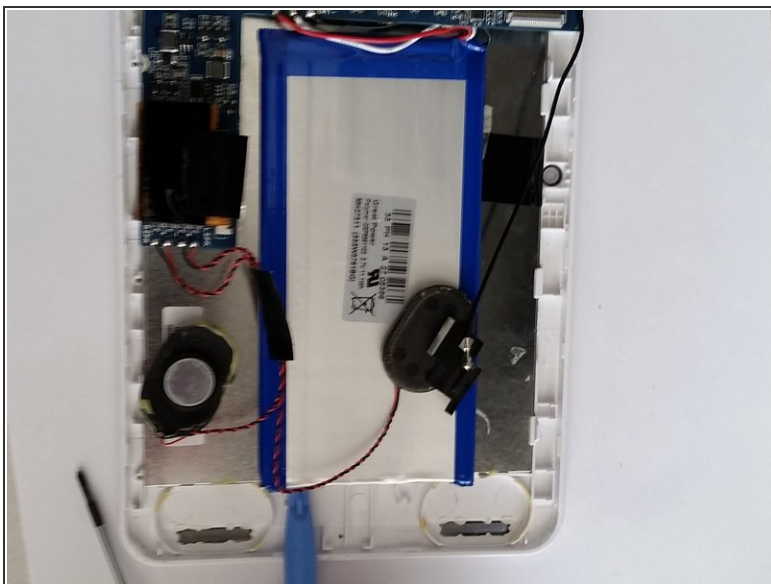

- Pry under the aluminum touch screen to remove the remaining components from the front housing.

To reassemble your device, follow these instructions in reverse order.