




Audiovox T752 Camera Replacement

A guide to replacing your device's camera.

Written By: Logan

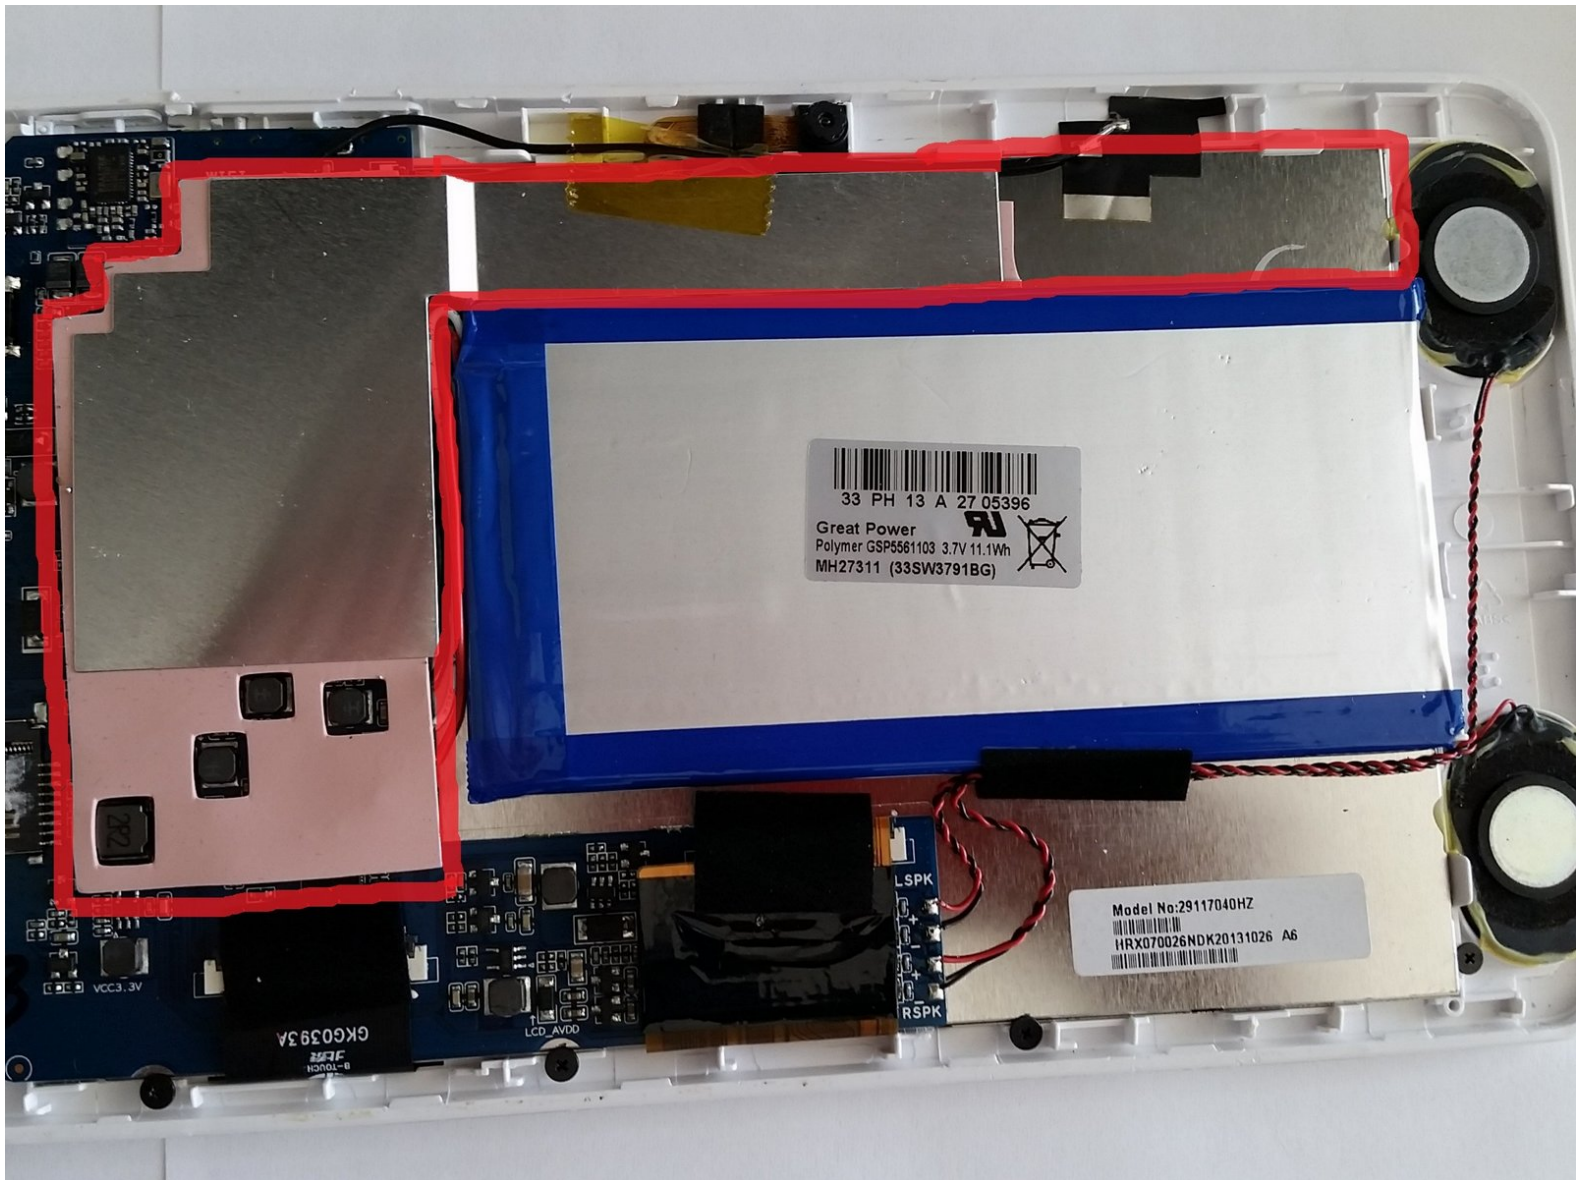

INTRODUCTION

This is an in-depth guide on how to replace the camera in your Audiovox T752. The guide includes step-by-step instructions and pictures to help you through the process.

TOOLS:


- [iFixit Opening Tools](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Back Panel




- Find a good spot to fit the pry bar between the back cover and tablet. Slowly drag the pry bar along the sides of the cover.
- **NOTE:** some force will need to be used to remove the cover. Avoid excessive force.

Step 2 — Camera

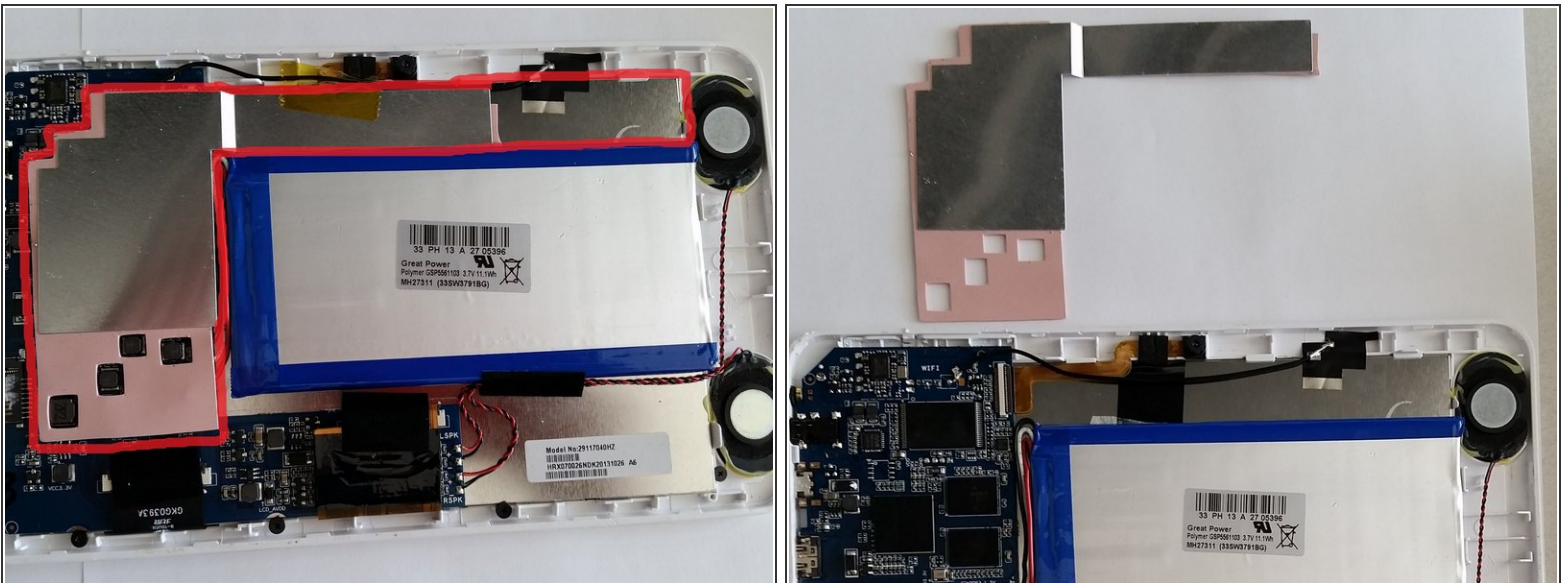

- Remove the pink and aluminum protective cover. Be sure to also remove any tape holding it in place.

Step 3

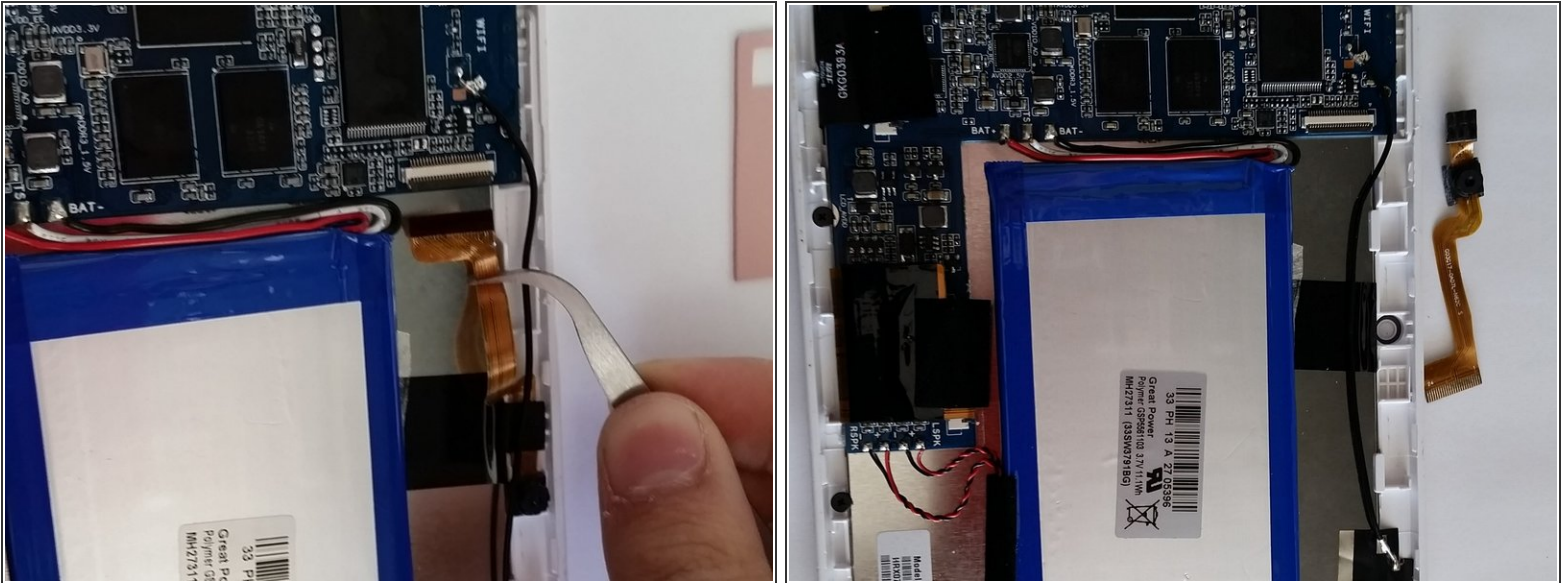

- Remove the orange camera strip from the motherboard.

Step 4



- Insert new camera strip and place the pink and aluminum protective cover back in the device.
- **NOTE:** camera strip may be loose when reconnected. Use of electrical tape may be required.

To reassemble your device, follow these instructions in reverse order.