



# RCA Visys 25212 Handset Battery Replacement

This guide will show you how remove the handset battery of the RCA Visys 25212.

Written By: Sandy South



---

## INTRODUCTION

This guide will walk you through the steps of removing the battery cover and then removing the battery of the handset of the RCA Visys 25212.



### PARTS:


- [Battery](#) (1)
-

## Step 1 — Handset Battery



- Place your thumb in the groove on the back of handset. Next, push down with your thumb and then slide the battery cover towards the bottom of the phone to remove the battery cover.

## Step 2

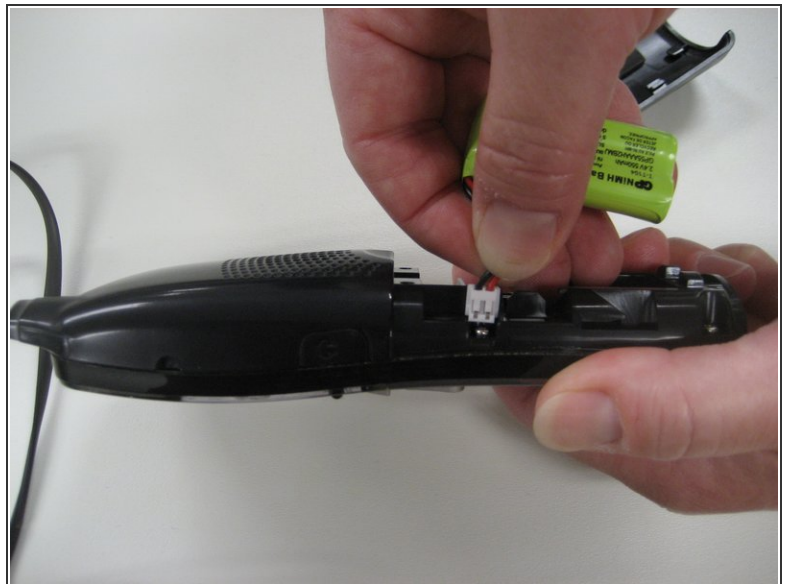

- To remove the battery, gently pull up on the white connector located on the left side of the phone.

To reassemble your device, follow these instructions in reverse order. Make sure the battery connector is fully seated in the handset before replacing the back cover.

