



# Acer Iconia B1-720 Battery Replacement

This guide will show you how to remove this devices battery.

Written By: Kervis Boston






## TOOLS:


- [iFixit Opening Tools](#) (1)
-

## Step 1 — Rear Case

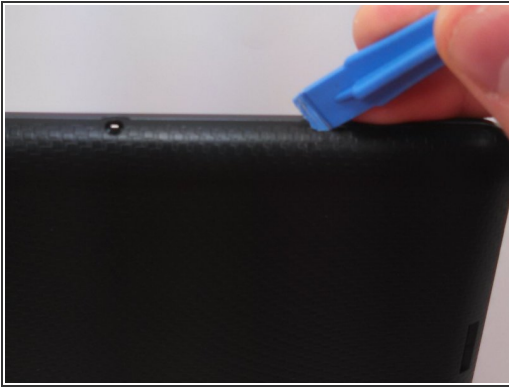

- Insert a plastic opening tool into a gap near the charging port at the top of the device. Slide the tool in either direction along the device.

## Step 2

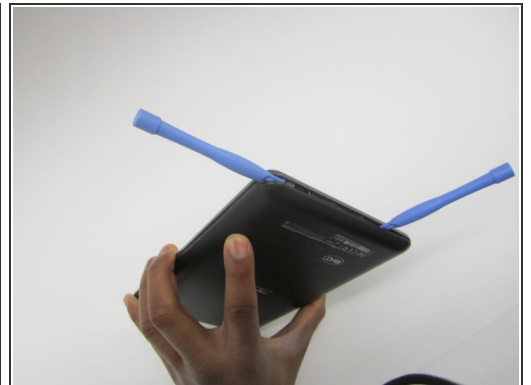

- Slide the tool along until you have completely separated the rear cover.
- If needed, place the first tool in the gap created to hold this gap open and use a second tool to pry the remaining portion of the rear cover off.




## Step 3



- Once all the sides have been separated, you should be able to simply lift the cover off of the device.

## Step 4 — Battery

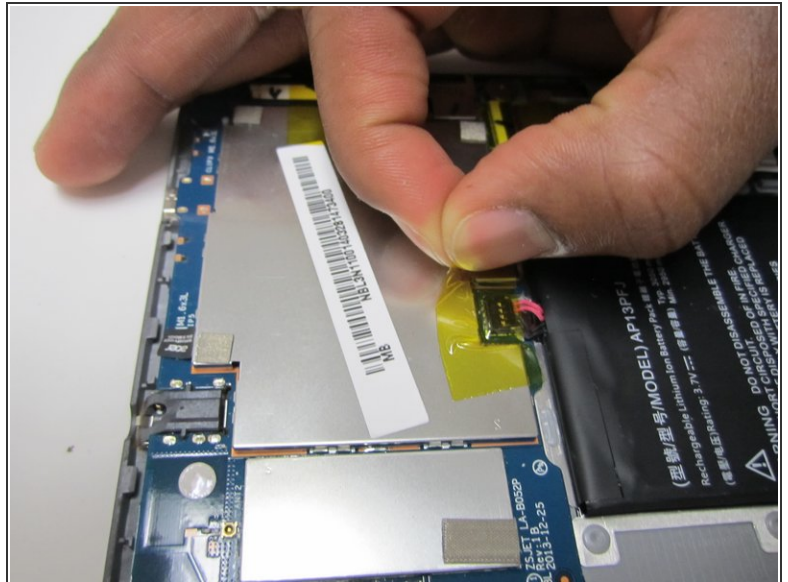



- Peel back the plastic tape covering the battery connector.

## Step 5



- Use the plastic opening tool to lift the battery off of the back panel. The adhesive used is strong so apply force during removal.

## Step 6

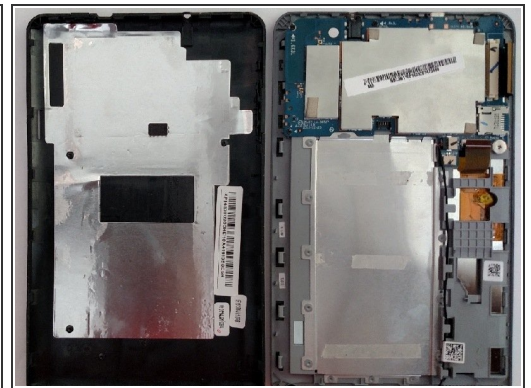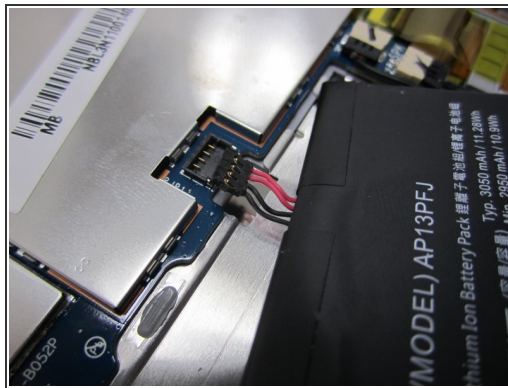

- Lift the battery off of the panel gently. This will disconnect the battery connector from the motherboard.

To reassemble your device, follow these instructions in reverse order.