



# Nextbook 8 Battery Replacement

You will need a thin durable tool to get the...

Written By: Dylan Wiese



# INTRODUCTION

You will need a thin durable tool to get the back cover off first. A guitar pick works well if you don't have a plastic opening tool. The parts are very delicate, so use caution when removing the back cover and inner parts.

---

## TOOLS:



[iFixit Opening Tool](#) (1)


[iFixit Opening Picks set of 6](#) (1)

[Spudger](#) (1)


---

## Step 1 — Battery

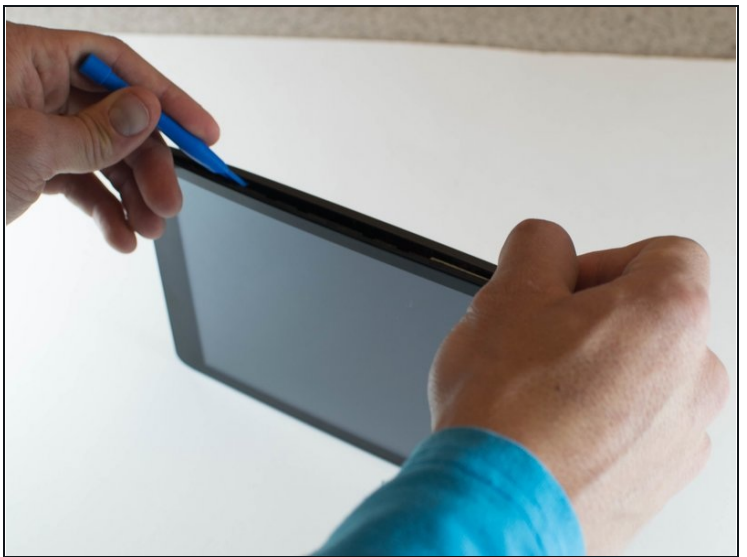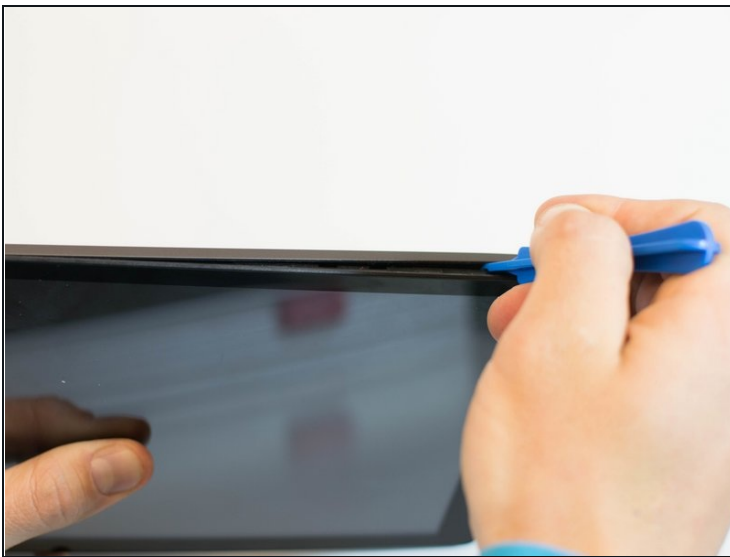


- Use the plastic opening tool to remove the back cover. Carefully slide the tool between the front glass and back cover.
  - Slide the tool along the edge to work the back cover off.
-  It helps to have an extra tool to stick in the gap and keep the back cover separated from the glass as you slide the other tool.

## Step 2

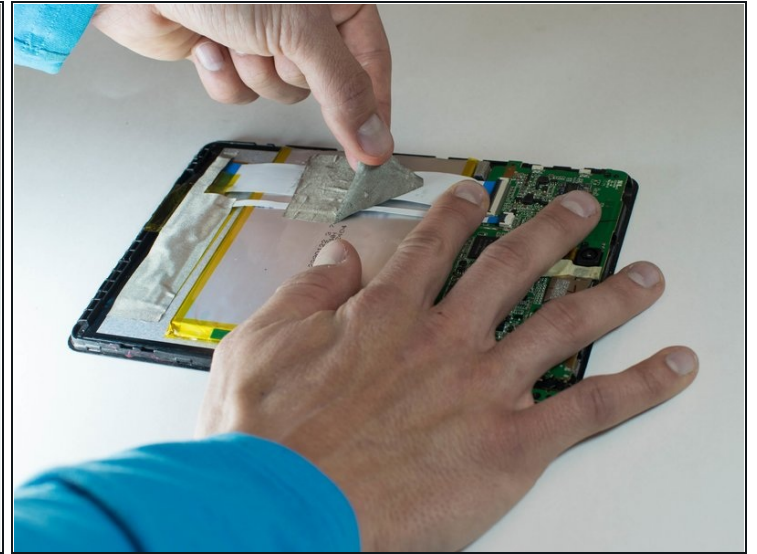

- Remove the tape covering the motherboard.
- Remove the silver tape holding the white ribbon cables to the battery.

## Step 3

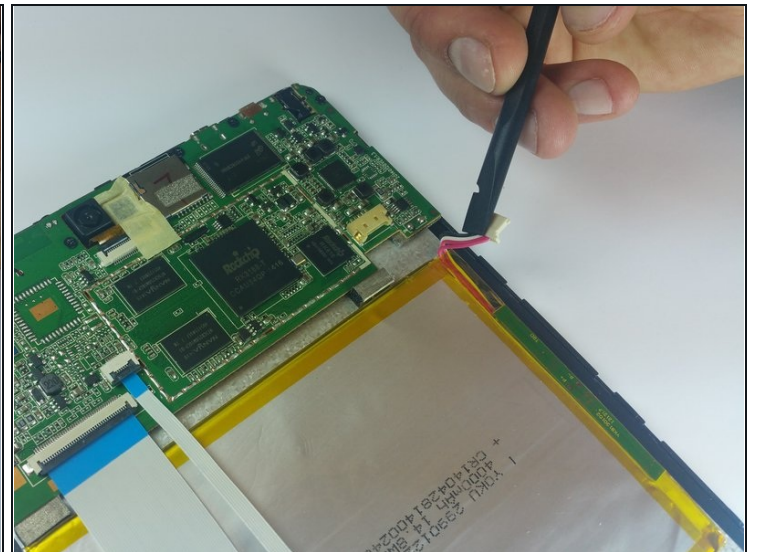


- Use a spudger to carefully disconnect the battery connector from the motherboard.

⚠ When working with electronics, it's important to choose a tool that's ESD-safe to avoid accidental damage to the device. The regular black nylon spudger or a plastic opening tool should be used whenever possible.




## Step 4

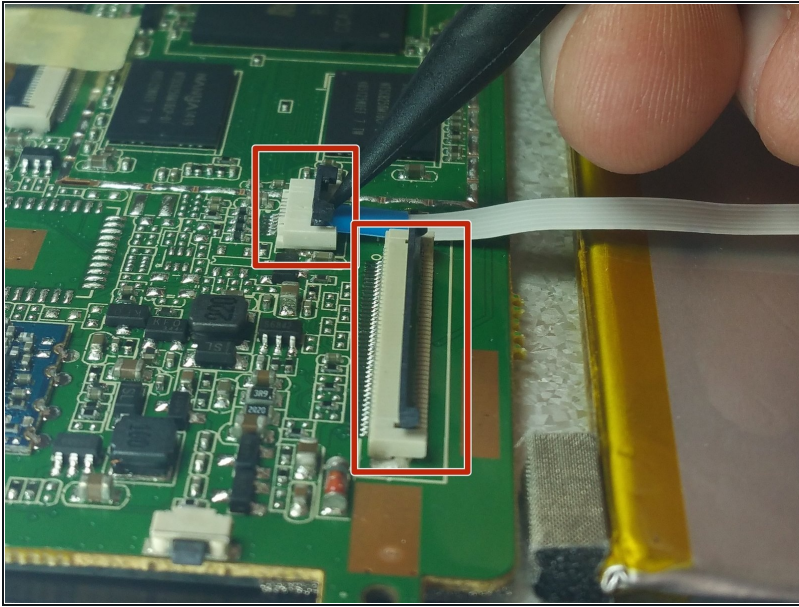

- Use a spudger to lift up the black bar on the two ZIF connectors located above the battery.
- Pull the ribbon cables out of the connectors with [tweezers](#) or two fingers.

## Step 5

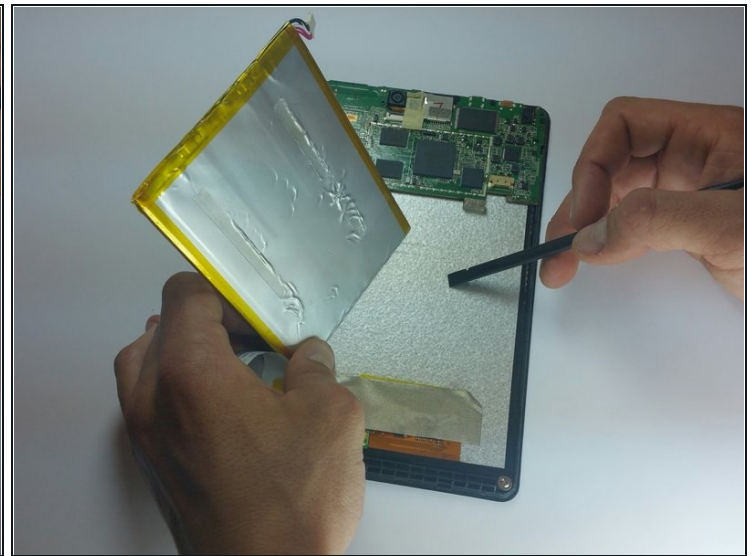

- Using the flat end of a spudger, carefully work the spudger under the battery, lifting it off of the device.
- ⓘ The battery is very malleable, so do not try to pull it off all at once.

To reassemble your device, follow these instructions in reverse order.

