



Samsung ATIV Book 4 RAM Replacement

How to replace the RAM on the Samsung ATIV Book4.

Written By: Daniel



INTRODUCTION


If your computer is experiencing memory issues and/or is running slowly, replacing or upgrading the RAM may solve these issues.



TOOLS:


- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — RAM

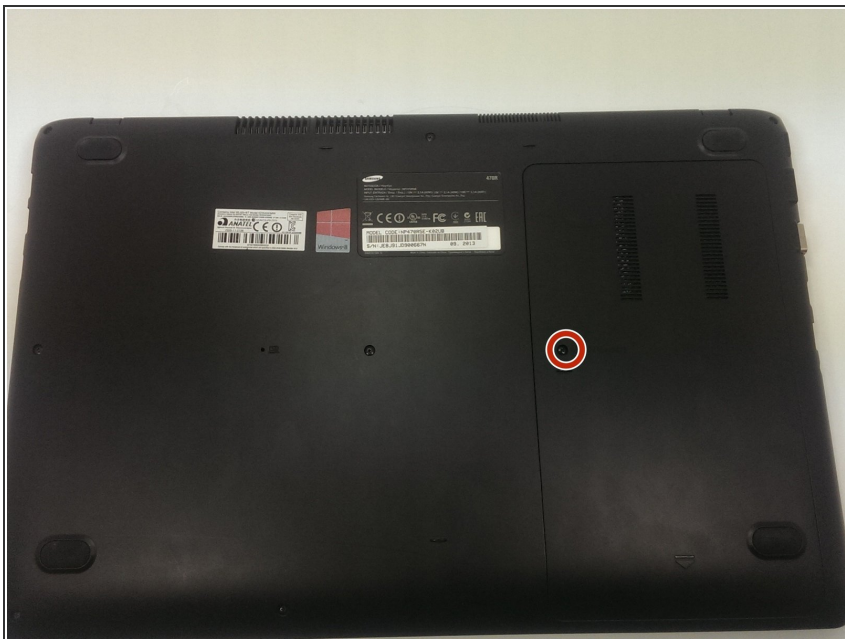


- Place the computer upside down.
- Remove one 6.5mm screw on exterior of computer.

Step 2

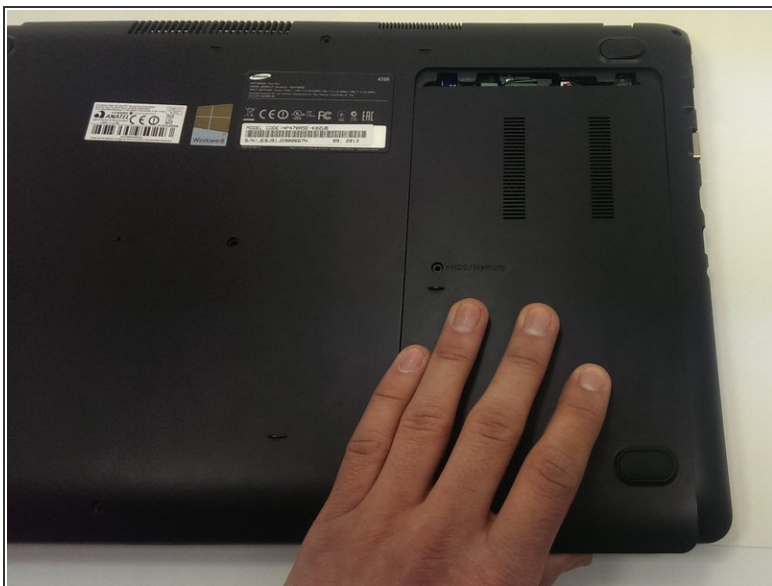

- Remove the panel by sliding down and lifting it away from the computer, exposing the RAM and hard drive.

Step 3

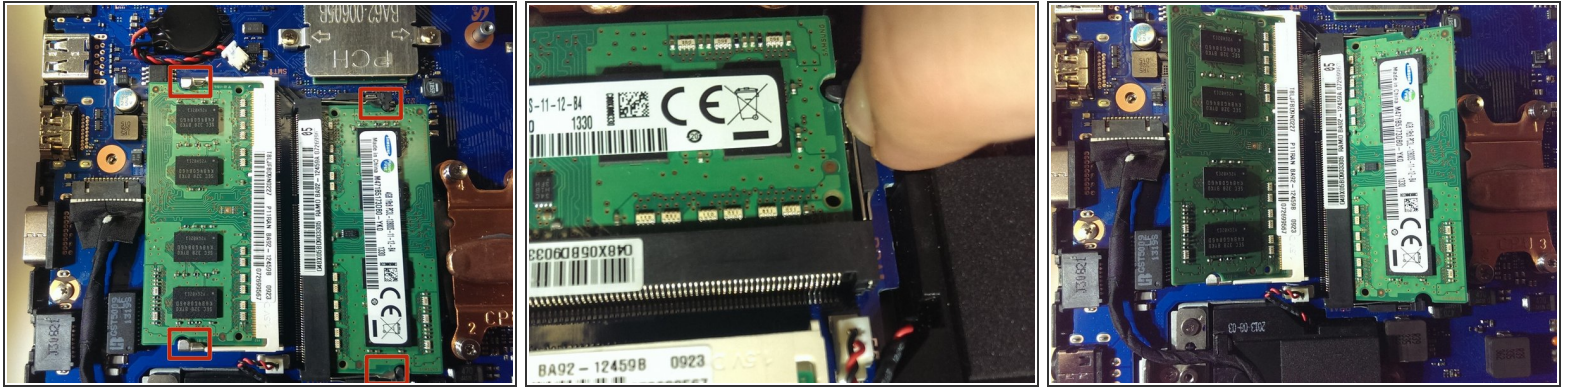

- Pull the 4 tabs away from the RAM with your finger.
- Lift away to remove the RAM and replace.

To reassemble your device, follow these instructions in reverse order.